


OPERATION & SERVICE MANUAL

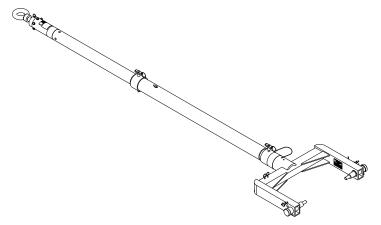

Models: 01-1296-0000 01A1296-0000 Portable Towbar Challenger 300

CE

05/2011 - Rev. 01

For Spare Parts, Operations & Service Manuals or Service Needs Scan the QR code or visit Tronair.com/aftermarket



REVISIONDATETEXT AFFECTED0105/2011Original release



TABLE OF CONTENTS

<u>PAGE</u>

1.0	PRODUCT INFORMATION1		
	1.1	DESCRIPTION	1
	1.2	MODEL & SERIAL NUMBER	1
	1.3	MANUFACTURER	1
	1.4	SPECIFICATIONS	1
	1.5	FEATURES	1
2.0	SAFET	Y INFORMATION	2
	2.1	GENERAL	2
3.0	TRAINI	NG	2
	3.1	TRAINING REQUIREMENTS	2
	3.2	TRAINING PROGRAM	2
	3.3	OPERATOR TRAINING	2
4.0 OPERATION		TION	3
	4.1	PRELIMINARY CHECKLIST	3
	4.1.1	Towbar	3
	4.1.2	Towing Head	3
	4.2	USAGE PROCEDURE	3
	4.2.1	Aircraft Attachment	3
	4.2.2	Tug Attachment	3
	4.2.3	Couplers	4
	4.2.4	Towing Operation	4
		SION OF SPARES	5
	5.1	SPARE PARTS	5
	5.2	RECOMMENDED SPARE PARTS LISTS	5
6.0	IN-SER	VICE SUPPORT	5
7.0	GUARA	NTEES/LIMITATION OF LIABILITY	5



Tronair towbars/heads must only be used with matching Tronair heads/towbars, and Tronair shear pins.

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., it suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

The Tronair Model 01-1296-0000 and 01A1296-0000 Portable Towbars are a lightweight, carry-on towbar for the Challenger 300 manufactured by Canadair Bombardier Aerospace.

The portable towbar includes separating sections for compact storage. The aircraft attachment is by machined pins on the towing head to the nose landing gear. There is an eyebolt with shock protection at the end of the towbar for towing.

1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit

1.3 MANUFACTURER


TRONAIR, Inc.	Telephone:	(419) 866-6301 or 800-426-6301
1 Air Cargo Pkwy East	Fax:	(419) 867-0634
Swanton, Ohio 43558 USA	E-mail:	sales@tronair.com
	Website:	www.tronair.com


1.4 SPECIFICATIONS

Aircraft ApplicationCanadair Bombardier Aerospace Challenger 300 Maximum Aircraft Gross Weight.......40,000 lbs (18.1 Metric tons)

C C	01-1296-0000	01A1296-0000
Length From eyebolt centerline to a	aircraft attachment centerline	
With middle section	113.25 in (287.7 cm)	114.25 in (290.2 cm)
Without middle section	64.75 in (164.5 cm)	65.75 in (167 cm)
Width	37.25 in (94.6 cm)	37.25 in (94.6 cm)
Height	6.0 in (15.2 cm)	6.0 in (15.2 cm)
Weight Eyebolt Section	20 lbs (9.1 kg)	25 lbs (11.3 kg)
Weight Middle Section	23 lbs (10.4 kg)	23 lbs (10.4 kg)
Weight Towing Head	18 lbs (8.2 kg)	18 lbs (8.2 kg)

 1.5 FEATURES

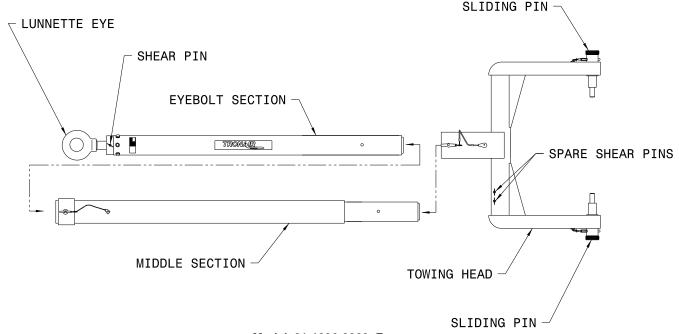





2.0 SAFETY INFORMATION

2.1 GENERAL

The Tronair Model 01-1296-0000 and 01A1296-0000 Portable Towbars are used for moving Challenger 300 Aircraft only.

To ensure safe operation, please read the following statements and understand their meaning. This manual contains safety precautions which are explained as follows. Please read carefully.



WARNING! Warning is used to indicate the presence of a hazard that can cause *severe personal injury, death, and/or substantial property damage* if the Warning Notice is ignored.

CAUTION! Caution is used to indicate the presence of a hazard which will or can *cause minor personal injury or property damage* is the Caution Notice is ignored.



WARNING!

A damaged or bent towbar should not be used. Towbar should be repaired or replaced.



WARNING!

Tronair recommends the use of a towbar with a category 1 or category 2 tug and aircraft not exceeding 75,000 lbs gross weight. Using the towbar with aircraft weighing in excess of this specific limitation may result in excessive loads and stresses being applied to the towbar and/or the aircraft. These excessive loads may cause failure of the towbar which could cause damage (INCLUDING WITHOUT LIMITATION to the aircraft) and/or personal injury OR DEATH. *TRONAIR MAKES NO REPRESENTATION, WARRANTY OR GUARANTEE AS TO SUCH MISUSE AND DISCLAIMS ANY AND ALL LIABILITY FOR INJURY, LOSS OR DAMAGE ARISING FROM OR RELATING TO SUCH MISUSE.*

3.0 TRAINING

3.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the towbar.

3.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the towbar in and around the aircraft at the servicing location.

3.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the towbar.

NOTE: Maintenance and Trouble Shooting are to be performed by the skilled and trained technician.



4.0 OPERATION

- 4.1 PRELIMINARY CHECKLIST
- 4.1.1 Towbar
 - Check shear pin. Ensure shear pin is not broken or missing. Replace shear pin if broken or missing.



WARNING!

Damage to the aircraft can occur when it is towed with a towbar without shear protection.

- Check lunette for bending, excessive wear and deformity.
- Check ball lok-T pins on middle and towing head sections. Ensure ball lok-T pin is securely attached to towbar via their lanyards. Ensure ball lok-T pins are not missing.

4.1.2 Towing Head

- Check welds between head rail and spring retainer housing for cracks.
- Check welds between side rails and stationary pin. Also sliding pin wear sleeve for cracks.
- Check sliding pin ball lok-T pin. Ensure ball lok-T pin is securely attached to the side rail via its lanyard. Ensure ball lok-T pin is not missing.
- Check sliding pin for bending or excessive wear. Ensure sliding pin slides freely.
- Check sliding pin roll pin. Ensure roll pin is not loose or missing.

4.2 USAGE PROCEDURE

4.2.1 Aircraft Attachment



CAUTION!

It is recommended that your towbar be attached to the aircraft first, and then connected to the tug to avoid possible aircraft damage.

Ensure the sliding pin is locked in place using the ball lok-T pin.



Tug Attachment CAUTION!

Damage to the towbar or aircraft can result from an excessive towbar angle during towing operations. Reference Figure 1.

Use a pintle height so that the towbar is as level as possible during towing. Also, the pintle hook height should
prevent contact of the towbar with the ground during towing.

 


FIGURE 1 – Incorrect

 


FIGURE 2 – Correct



Um

 \cap

(EYEBOLT)

INDENTATIONS

4.2.3 Couplers


CAUTION!

Damage to the towbar or aircraft can result while towing with the following types of couplers:

- Lift Head
- Standard Duty Latch
- Vertical Side Swing Latch
- Swivel Hook

The couplers listed above are known to cause binding and failure in the eyebolt. Indicators of binding are wear on outside diameter of the eyebolt and indentation on the inside diameter of the eyebolt. Reference Figure 3.

Tronair recommends a telecoupler pintle hook arrangement. This arrangement is known to eliminate binding. Tronair offers a Standard Telecoupler, Model

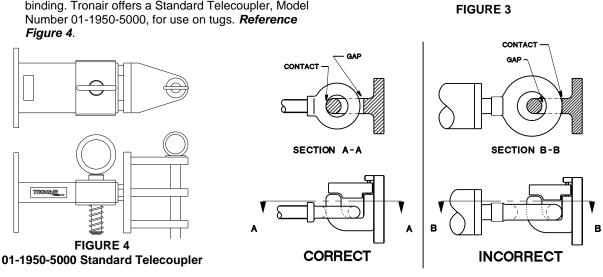

WEAR


FIGURE 5

Damage to the towbar and/or aircraft can result by towing or pushing an aircraft with an incorrect size eyebolt or pintle pin. A correct size eyebolt will make contact with the pintle pin. A gap between the eyebolt outside diameter and the coupler face plate should be easily seen. An eyebolt which is too large will cause the eyebolt to make contact with the face plate of the coupler. When the eyebolt is too large for the coupler, a gap between the inside diameter of the eyebolt and the coupler face plate will be seen. Reference Figure 5.

To ensure proper towing and pushing, check to make sure the pintle pin diameter is not too long for the eyebolt's inside diameter. An approximate one-half inch (1/2") gap between the pin diameter and the eyebolt should be seen. If any of these conditions are not met, please contact Tronair for information to obtain a new coupler.

4.2.4 **Towing Operation**

> Damage to the towbar or aircraft can result from pushing an aircraft while maintaining too sharp of an angle between the tug and the aircraft. Contact between the towbar weldment and the tug must be avoided. It is recommended that the angle between the tug and towbar not exceed 90°. Reference Figure 6.

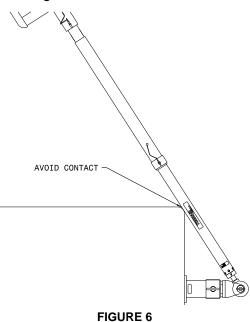



PROVISION OF SPARES 5.0

5.1 SPARE PARTS

Spare parts may be obtained from the manufacturer:

TRONAIR, Inc.
1 Air Cargo Pkwy East
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301 (419) 867-0634 sales@tronair.com www.tronair.com

For Spare Parts. Operations & Service Manuals or Service Needs: Scan the QR code or visit Tronair.com/aftermarket

RECOMMENDED SPARE PARTS LISTS 5.2

Reference the following page(s) for Replacement Parts and Kits available.

Part Number	Description
K-1337	KIT, REPL. BALL LOC PIN
K-1882	KIT, REPL BALL LOCK PIN
G-1446-30	PIN, SHEAR



6.0 **IN-SERVICE SUPPORT**

Contact Tronair, Inc. for technical services and information. See Section 1.3 - Manufacturer.

Fax:

E-mail:

Website:

7.0 **GUARANTEES/LIMITATION OF LIABILITY**

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- Parts required for normal maintenance a)
- b) Parts covered by a component manufacturers warranty
- Replacement parts have a 90-day warranty from date of shipment C)

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- **Product Serial Number** b)
- Description of the problem C)

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.




This page left blank intentionally.



Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

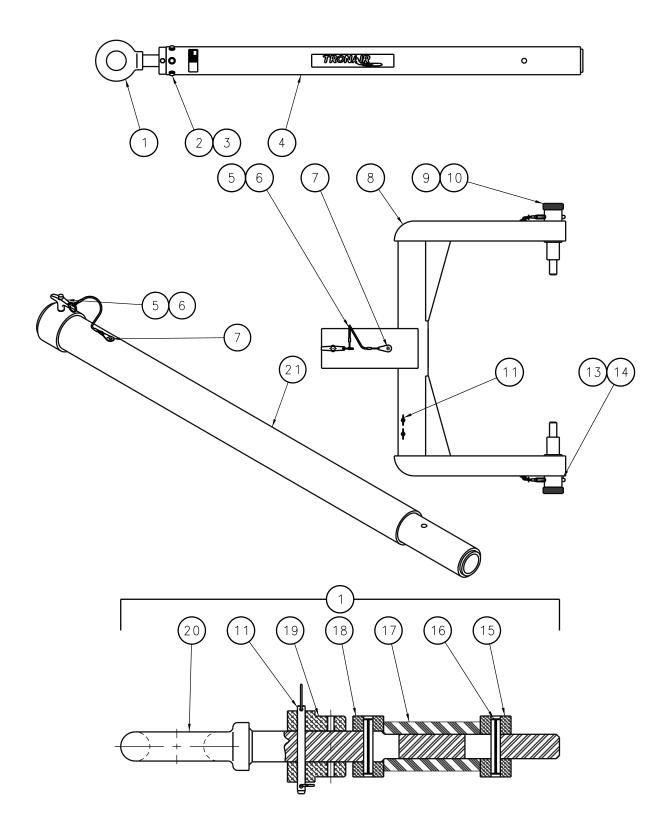



Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-5569	Assembly, Shock/Shear (01-1296-0000)	1
◆ 1	Z-7606	Assembly, Shock/Shear (01A1296-0000)	1
2	G-1420-106006	Bolt, Hex Head, Grade 8, 5/16-18 x 3/4" long	6
3	G-1251-1060R	Lockwasher, 5/16 Regular	6
4	Z-3323-01	Weldment, Tube	1
5	H-1026*12.0	Assembly, Lanyard	1
6	G-1310-0845	Pin, Ball Lok-T	1
7	G-1351-04	Rivet, 1/8 Open-End Steel	1
8	Z-5570-01	Weldment, Head	1
9	G-1300-19040	Pin, 3/16" diameter x 1/2" long, Roll	2
10	R-2092	Pin, Sliding	2
11	G-1446-30	Pin, Shear	3
13	H-1026*07.0	Assembly, Lanyard	1
14	G-1310-0525	Pin, Ball Lok-T	1
15	B-224-01	Sleeve, Guide	1
17	H-2168	Spring, Compression	
18	B-224-02	Sleeve, Guide	
19	Z-1987	Cap, End	
20	Z-4606-01	Weldment, Eyebolt	1
21	Z-3881-01	Weldment, Towbar Extension	
	K-1337	Kit, Ball Lok-T Pin Replacement; consists of:	
7	G-1351-04	Rivet, 1/8 Open-End Steel	1
13	H-1026*07.0	Assembly, Lanyard	1
14	G-1310-0525	Pin, 5/16" diameter x 2.5" grip, Ball Lok-T	1
	K-1882	Kit, Ball Lok Pin Replacement; consists of:	
5	H-1026*12.0	Assembly, Lanyard	1
6	G-1310-0845	Pin, Ball Lok-T	1
7	G-1351-04	Rivet, 1/8 Open-End Steel	1
	K-2806	Kit, 48" Extension; consists of:	
4	Z-3323-01	Weldment, Tube	1
5	H-1026*12.0	Assembly, Lanyard	1
6	G-1310-0845	Pin, Ball Lok-T	1
7	G-1351-04	Rivet, 1/8 Open-End Steel	1
	K-3695	Kit, Replacement Shear Pin; consists of:	
11	G-1446-30	Pin, Shear	3

• Due to this assembly being assembled under dangerous compression, it must be returned to Tronair for repair.



APPENDIX I

Declaration of Conformity



EU Declaration of Conformity

Model Number(s)	01-1296-0000, 01A1296-0000		
Product Type/Name:	Custom Towbar		
Serial Number(s):	Enter serial number(s)		
Declaration:	Tronair has assessed the equipment described above against the Essential Health and Safety Requirements of one or more Directives. Based on this assessment, the equipment described above is deemed to comply with the directive(s) listed below. This declaration of conformity is issued under the sole responsibility of the manufacturer.		
Directives: European Machinery Directive 2006/42/EC		ive 2006/42/EC	
Standards:	EN ISO 12100:2011	Safety of machinery – General principles for design – Risk assessment and risk reduction	
Markings:	\boldsymbol{C}		

Markings:



The technical documentation for the machinery is available from:

	Mr. Joel Nunn 34 Epirus Road, SW6 7UH, London, UK Email: <u>jnunn@tronair.com</u>
Location of Issue:	Tronair, 1 Air Cargo Parkway East, Swanton, OH 43558
Certificate:	EU_DoC_01-1296-0000, 01A1296-0000

Identification of person empowered to sign on behalf of the Manufacturer:

atick unch

Quality Assurance Representative

Enter a date

Date









Tronair, Inc. 1 Air Cargo Pkwy East Swanton, OH 43558

Phone: (419) 866-6301 | 800-426-6301 Web: www.tronair.com Email: sales@tronair.com