


OPERATION & SERVICE MANUAL

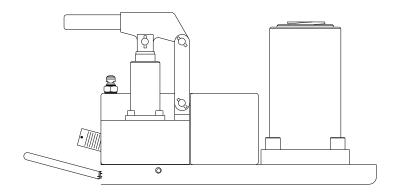

Models: 02-7818C0110 02-7825C0110 20 Ton (18.14 Metric) Axle Jack

(6

05/2021 - Rev. 03

REVISION 01 03 DATE 08/2016 05/2021

TEXT AFFECTED Original release Major Revision



TABLE OF CONTENTS

<u>PAGE</u>

1.0	PRODU	CT INFORMATION	.1
	1.1	DESCRIPTION	. 1
	1.2	MODEL & SERIAL NUMBER	. 1
	1.3	MANUFACTURER	. 1
	1.4	FUNCTION	
	1.5	SPECIFICATIONS	. 1
2.0	SAFET	Y INFORMATION	.1
	2.1	USAGE AND SAFETY INFORMATION	. 1
3.0	TRAINII	NG	
	3.1	TRAINING REQUIREMENTS	. 1
	3.2	TRAINING PROGRAM	
	3.3	OPERATOR TRAINING	. 1
4.0	ASSEM	BLY INSTRUCTIONS	
	4.1	GENERAL INFORMATION	
	4.2	PRE-USE CHECKS	
5.0	OPERA	TING INSTRUCTIONS	
	5.1	JACK INSTRUCTIONS – 02-7818C0110 ONLY	
	5.2	JACK INSTRUCTIONS – 02-7825C0110 ONLY	
6.0		LE SHOOTING	-
7.0	MAINTE		.4
	7.1	GENERAL	
	7.2	SERVICING JACK	. 4
	7.3	REMOVING AND SERVICING PUMP	
	7.4	JACK FUNCTION LOAD TEST	. 4
8.0	PROVIS	SION OF SPARES	
	8.1	SOURCE OF SPARE PARTS	
	8.2	RECOMMENDED SPARE PARTS LISTS	
9.0		VICE SUPPORT	
10.0	GUARA	NTEES/LIMITATION OF LIABILITY	. 5
11.0	APPEN	DICES	. 5



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., it suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

The Tronair Model 02-7818C0110 and 02-7825C0110 Hydraulic Axle Jacks incorporate the following quality features:

- Steel construction
- Single Stage telescoping ram
- Quick action mechanical extension
- Single speed, manually operated pump
- Uses standard MIL-PRF-5606 hydraulic fluid
- Preset relief/release Valve

1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit

1.3 MANUFACTURER

TRONAIR, Inc.	Telephone:	(419) 866-6301 or 800-426-6301
1 Air Cargo Pkwy East	Fax:	(419) 867-0634
Swanton, Ohio 43558 USA	E-mail: Website:	sales@tronair.com www.tronair.com

1.4 FUNCTION

- The purpose of this jack is to lift aircraft for maintenance.
- It has a maximum capacity of 20 tons (18.14 metric)

1.5 SPECIFICATIONS

- Maximum height obtainable 19.125 in (48.58 cm)
- BUNA 'N' Seals

NOTE: These numbers increase accordingly when base spacer blocks are used.

2.0 SAFETY INFORMATION

2.1 USAGE AND SAFETY INFORMATION

To insure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



WARNING! — Warning is used to indicate the presence of a hazard that *can cause severe personal injury, death, or substantial property damage* if the warning notice is ignored.

CAUTION! — Caution is used to indicate the presence of a hazard that *will or can cause minor personal injury or property damage* if the caution notice is ignored.

3.0 TRAINING

3.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the unit.

3.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the unit in and around the intended aircraft at the intended aircraft servicing location.

3.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the unit.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.



4.0 ASSEMBLY INSTRUCTIONS

4.1 GENERAL INFORMATION

This product should be assembled and/or repaired using good workmanship practices and proper tools.

All replacement parts must be the same as or equal to the original parts supplied.

4.2 PRE-USE CHECKS

- Refer to the Jack Illustrated Parts List to identify and ensure that all parts are present.
- Generally check over unit to ensure the tightness of all nuts, bolts and screws.
- With rams completely collapsed, check hydraulic fluid level; between 0.50 to 0.75 in (1.3 cm to 1.9 cm) from top of reservoir fitting. Replenish with MIL-PRF-5606 fluid as required.

5.0 OPERATING INSTRUCTIONS

The user should be familiar with the following statements prior to using the jack(s).

CAUTION!



Aircraft jacking adapters must rest in jack pad Never put hands between aircraft and jack pad.

Always open reservoir vent screw before operating.

5.1 JACK INSTRUCTIONS - 02-7818C0110 ONLY

To Raise Nose: (Reference Figure 1)

- 1. Jacking must take place on hard level surface.
- 2. Screw out mechanical extension 21/2 in (6.35 cm).
- 3. Place nose adapter (Z-2641) over mechanical extension.
- 4. Position adapter with pin facing opposite pump.
- 5. Align pin with front axle.
- 6. Slide pin into axle until pin shoulder is resting against axle.
- 7. Jack aircraft.

To Raise Main: (Reference *Figure 2*)

- 1. Jacking must take place on hard level surface.
- 2. Screw out mechanical extension 21/2 in (6.35 cm).
- 3. Place main adapter (Z-2639) over mechanical extension.
- 4. Position adapter with pad facing opposite pump.
- 5. Align main adapter jack pad with main link jack pad, slide jack between main tires. Check adapter height to clear brakes.
- 6. Jack aircraft.


5.2 JACK INSTRUCTIONS - 02-7825C0110 ONLY

To Raise Aircraft:

- 1. Place jack on a hard level surface.
- 2. Raise jack as close to aircraft jack pad as possible, with appropriate base spacer blocks. Screw out the center mechanical extension for final adjustment.
- 3. Open reservoir vent screw.
- 4. Close pump release valve and operate pump.

To Lower Aircraft:

1. Loosen pump release valve slightly to slowly lower aircraft.

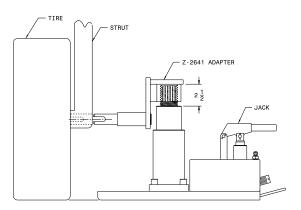



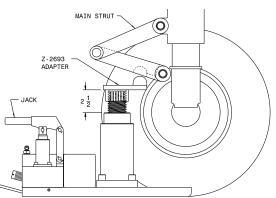


FIGURE 2



6.0 TROUBLE SHOOTING

TROUBLE	PROBABLE CAUSE	ACTION		
Fluid leakage at pump piston or pump body	Damaged backup ring, o-ring, piston or pump body	Remove piston and pump body. Inspect for damage. Replace defective part(s). Replace removed o-ring and backup ring		
External fluid leakage at ram(s)	Damaged o-ring, backup ring or inner cylinder wall	Remove ram(s) as a unit from cylinder. Inspect parts. Replace o-ring and defective part(s)		
	Release valve not closed properly	Fully tighten release valve		
	Low fluid level	Fill to correct fluid level		
Jack fails to lift rated load	Pressure relief valve improperly adjusted	Adjust or replace release valve		
	Leakage at inlet or outlet check ball	Inspect valve body for wear or replace valve body and check balls		
	Vent screw closed	Open vent screw		
Ram(s) will not support load	Leaking ram o-ring seals	Check for external leakage, if present replace defective seal and back up ring		
after manual or pneumatic	Leaking pressure check valve	Inspect valve body for wear or replace valve body and check balls		
pump up	Leaking pressure relief valve	Remove release valve, inspect ball and ball seat in pump block. Replace effective part(s)		
_ /	Release valve open	Fully tighten release valve		
Ram(s) raise and fall with each manual pump stroke	Inlet check valve not seated or sticking	Pump rapidly to dislodge or replace valve body		
	Pressure check valve not seated or sticking	Pump rapidly to dislodge or replace valve body		
	Ram locknut not loosened	Raise jack ¼ inch and release locknut		
Jack fails to lower	Vent screw closed	Open vent screw		
	O-Ring (pinched or rolled)	Replace o-ring and back-up ring, clean up cylinder wall of debris		



7.0 MAINTENANCE

7.1 GENERAL

- All maintenance and/or repair work should be done using good workmanship practices and proper tools.
- The work area should be clean and free of dirt.
- When O-rings and backup rings are removed, every effort should be made to avoid the contact of tools with the critical surfaces of parts. Surface deformities could cause degradation of seals and failure.
- It is good practice to replace all O-rings and backup rings once removed. Cut and damaged rings normally result in fluid leakage.
- At this time flush old hydraulic fluid and dirt from overall system and replenish with new, clean hydraulic fluid.

7.2 SERVICING JACK

To Disassemble Jack:

- 1. Collapse jack ram.
- 2. Remove vent screw and drain all fluid from reservoir.
- 3. Remove cap screws surrounding jack cylinder, then remove retaining ring.
- 4. Lift cylinder from base plate weldment. (Operate jack hand pump to help remove cylinder).
- 5. Remove internal retaining ring and unscrew piston plug.
- 6. Separate rams and replace all seals including internal ring.

To Reassemble Jack

- 1. Re-assemble in reverse order of above.
- 2. Torque each cap screw to 50 ft-lb (67.8 n-m).

7.3 REMOVING AND SERVICING PUMP

NOTE: If pump is found faulty, call the factory for replacement or replace seals as follows:

- 1. Reference Appendix I HC-2509 Hand Pump (5900 psi/406.8 bars) Parts list during the following procedure.
- 2. Drain all fluid from reservoir.
- 3. Remove pump from jack.
- 4. Remove socket head cap screw from piston.
- 5. Remove two (2) socket head cap screws from flanges.
- 6. Remove flanges.
- 7. Remove piston.
- 8. Replace O-rings and backup ring. (See Appendix I for kits available.)
- 9. Reassemble in reverse order.
- 10. Torque each 3/8 inch socket head cap screw to 20–25 ft-lbs (27.1–33.9 n-m). Torque each 1/4 inch socket head cap screw to 6–7.5 ft-lb (8.1–10.2 n-m).

7.4 JACK FUNCTION LOAD TEST

- 1. Take all necessary precautions to prevent injury.
- 2. Always jack against a load and never against the jack itself.
- 3. Do not exceed a test load equal to the jack rated capacity plus 10%.
- 4. Test annually.

8.0 PROVISION OF SPARES

8.1 SOURCE OF SPARE PARTS

Spare parts may be obtained from the manufacturer:

Telephone:	(419) 866-6301 or 800-426-6301
Fax:	(419) 867-0634
E-mail:	sales@tronair.com
Website:	www.tronair.com
	Fax: E-mail:

8.2 RECOMMENDED SPARE PARTS LISTS

Reference the following page(s) for Replacement Parts and Kits available.

9.0 IN SERVICE SUPPORT

Contact Tronair, Inc. for technical services and information. See Section 1.3 – Manufacturer.



10.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.

11.0 APPENDICES


APPENDIX IHC-2509 Hand Pump (5900 psi/406.8 bar) Parts ListAPPENDIX IISDS (MIL-PRF-5606) Hydraulic FluidAPPENDIX IIIDeclaration of ConformityAPPENDIX IVMaintenance Schedule




Thisd page left blank intentionally.



Base Parts List

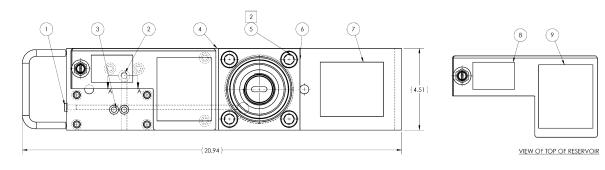

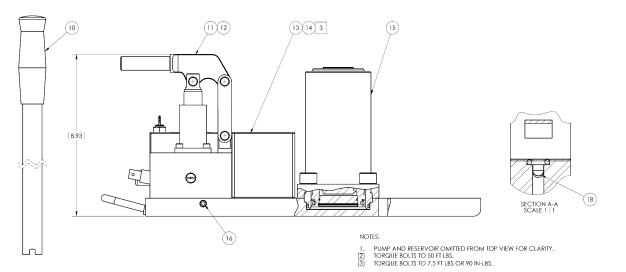

ltem	Part Number	Description	Qty
1	N-2066-02-S-B	PLUG, HEX HEAD WITH O-RING	1
2	HC-2000-204	O-RING, RESERVOIR/BASE	1
4	Z-2669-02-01	WELDMENT, BASE PLATE	1
5	G-1151-110716	SCREW, SOCKET HEAD CAP 5/8-18 X 1-3/4" LONG	4
6	J-2107	RING, RETAINING	1
7	V-1483	LABEL, AXLE	1
8	V-1001	LABEL, MADE IN USA	1
9	V-1428	LABEL, CAUTION	1
10	H-1009-01	ASSEMBLY, HANDLE	1
15	Z-2671	ASSEMBLY, CYLINDER	1
16	N-2205-02-S	PLUG, HEX HEAD 1/8 NPT	1
18	H-2001	FILTER, RESERVOIR	1
N/S	V-2839	LABEL, JACK TYPE/SERIAL	1
	K-2239	KIT, RESERVOIR REPLACEMENT; consists of:	
13	Z-2672	ASSEMBLY, RESERVOIR	1
2	HC-2000-204	O-RING, SERIES 2	1
14	G-1151-105210	SCREW, HEX SOCKET HEAD CAP, 1/4-20 X 1" LONG	4




Base Parts List

Item	Part Number	Description	Qty
	K-2240	KIT, REPLACEMENT CYLINDER SEALS; consists of:	
N/S	HC-1619-2875	WIPER, RING	1
N/S	HC-2020-334	RING, BACKUP	1
N/S	HC-2000-334	O-RING, SERIES 2	1
N/S	HC-2000-033	O-RING, SERIES 2	1
N/S	HC-2000-236	O-RING, SERIES 2	1
	K-5160	PUMP REPLACEMENT KIT; consists of:	
3	HC-2000-109	O-RING, SERIES 2	2
11	HC-2509	PUMP, HYDRAULIC HAND (5900 PSI)	1
12	G-1151-107212	SCREW, SOCKET HEAD CAP, 3/8-16 X 1-1/4" LONG	4




Parts List - 02-7818C0110

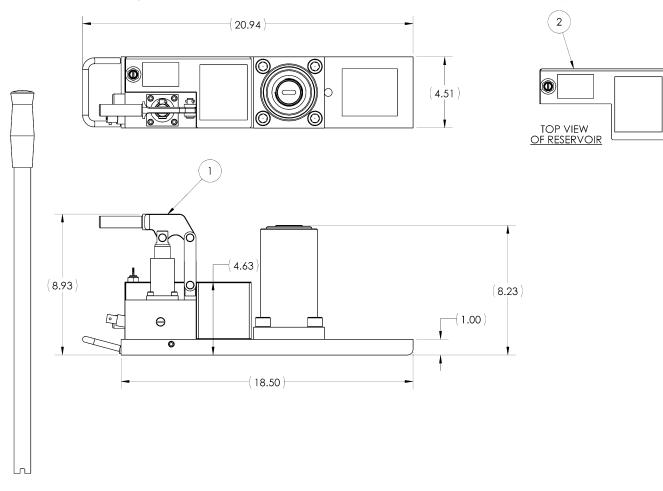

Item	Part Number	Description	Qty
1	Z-7400-Z1	ASSEMBLY, 20 TON AXLE JACK	1
2	V-2840	LABEL, JACK MODEL	1



Parts List - 02-7818C0110

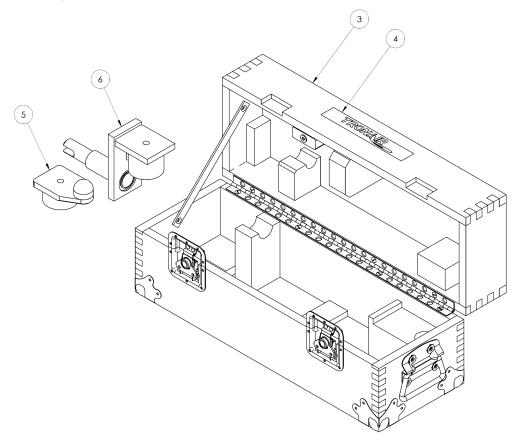


Item	Part Number	Description	Qty
3	W-1019	ASSEMBLY, LEAR BOX	1
4	V-1002	LABEL, TRONAIR	1
5	Z-2639	WELDMENT, MAIN ADAPTER	1
6	Z-2641	ASSEMBLY, NOSE ADAPTER	1



ł

Parts List - 02-7825C0110

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

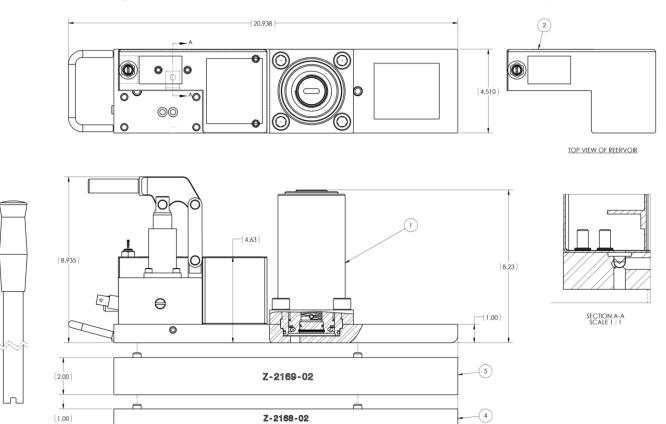

Item	Part Number	Description	Qty
1	Z-7400-Z1	ASSEMBLY, 20 TON AXLE JACK	1
2	V-2840	LABEL, JACK MODEL	1
	K-1945	Replacement Spacer Blocks Kit; consists of:	
5	Z-2169-02	ASSEMBLY, SPACER BLOCK (2")	1
4	Z-2168-02	ASSEMBLY, SPACER BLOCK (1")	1

- 18.50



APPENDIX I

HC-2509 5900 psi (406.8 bar) Hand Pump Parts List



Model: HC-2509 5900 psi Hand Pump

Parts List With Illustrations

06/2004 - Rev. OR

Tronair, Inc. 1 Air Cargo Pkwy East Swanton, OH 43558

Phone: (419) 866-6301 | 800-426-6301 Web: www.tronair.com Email: sales@tronair.com



Parts List

When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit.

This pump is compatible with MIL-PRF-5606 / MIL-PRF-83282 Hydraulic Fluids only.


Reference Parts List Illustration on following page.	
--	--

ltem	Part Number	Description	Qty
8	506-034	Flange	1
18	518-034	Screw, Socket Head Cap	4
	K-4215	Kit, Seal Replacement; consists of:	
5		O-ring, Outlet Check	1
7		O-ring, Tube Seal	1
17		Wiper, Rod	1
19		Ring, Backup	1
20		O-ring, Piston	1
22		O-ring, Valve Body	1
23		Ring, Backup	1
27		O-ring, Release Screw	1
32		O-ring, Relief Valve	1
33		Ring, Backup	
34		O-ring, Relief Valve	
	K-1068	Kit, Linkage Replacement; consists of:	
9		Pivot	1
10		Assembly, Linkage Pin	2
13		Strap	2
14		Assembly, Clevis Pin	1
15		Bracket, Pump Handle	1
	K-4216	Kit, Internal Parts Replacement; consists of:	
2		Spring, Inlet Check	1
3		Spring, Outlet Check	1
4		Ball, Outlet Check	1
6		Ball, Inlet Check	1
24		Ball	1
25		Spring	1
	K-3875	Kit, Piston/Cylinder Replacement; consists of:	
11		Piston	1
12		Tube	1
16		Retainer, Wiper	1
21		Assembly, Valve Body (Includes Items 1, 2, 6, 21)	1
	K-3876	Kit, Piston/Seal Replacement; consists of:	
11		Piston	1
19		Ring, Backup	1
20		O-ring, Piston	1
	K-4212	Kit, Release Screw Replacement; consists of:	
28		Retainer, Screw	1
29		Screw, Release	1

NOTE: Entire pump assembly can be purchased as a kit. See Hydraulic Jack Parts list.



Parts List Illustration This pump is compatible with MIL-PRF-5606 / MIL-PRF-83282 Hydraulic Fluids only.

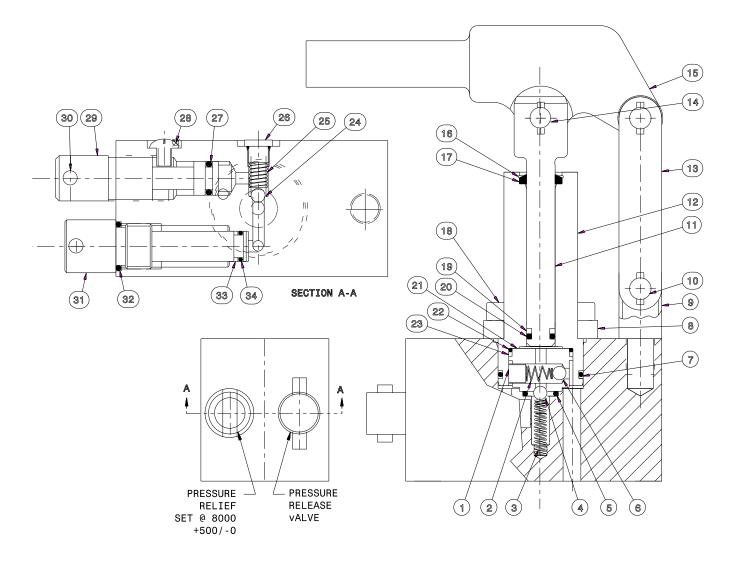

WARNING



Item 31 (H-3342) is a preset relief valve. Do Not disassemble this valve. Replacement parts are available as a preset relief valve assembly.



APPENDIX II

Safety Data Sheet (SDS) Hydraulic Fluid



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 1 of 12

SAFETY DATA SHEET

PRODUCT AND COMPANY IDENTIFICATION

SECTION 1 PRODUCT

Product Name: MOBIL AERO HFA Product Description: Base Oil and Additives Product Code: 201550401020, 490110-00, 970584 Intended Use: Aviation hydraulic oil

COMPANY IDENTIFICATION

 Supplier:
 EXXON MOBIL CORPORATION

 22777 Springwoods Village Parkway

 Spring, TX.
 77253

 VSA

 24 Hour Health Emergency
 609-737-4411

 Transportation Emergency Phone
 800-424-9300 or 703-527-3887 CHEMTREC

 Product Technical Information
 800-662-4525

 MSDS Internet Address
 http://www.exxon.com, http://www.mobil.com

SECTION 2

HAZARDS IDENTIFICATION

This material is hazardous according to regulatory guidelines (see (M)SDS Section 15).

CLASSIFICATION:

Flammable liquid: Category 4. Aspiration toxicant: Category 1.

LABEL: Pictogram:



Signal Word: Danger

Hazard Statements:

H227: Combustible liquid. H304: May be fatal if swallowed and enters airways.

Precautionary Statements:

P210: Keep away from flames and hot surfaces. -- No smoking. P273: Avoid release to the environment. P280: Wear protective gloves and eye / face protection.P301 + P310: IF SWALLOWED: Immediately call a POISON CENTER or doctor/physician. P331: Do NOT induce vomiting. P370 + P378: In case of fire: Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish.P403 + P235: Store in a well-ventilated place. Keep cool. P405: Store locked up.P501: Dispose of contents and container in accordance with local regulations.



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 2 of 12

Other hazard information:

HAZARD NOT OTHERWISE CLASSIFIED (HNOC): None as defined under 29 CFR 1910.1200.

PHYSICAL / CHEMICAL HAZARDS

Material can accumulate static charges which may cause an ignition. Material can release vapors that readily form flammable mixtures. Vapor accumulation could flash and/or explode if ignited. Combustible.

HEALTH HAZARDS

High-pressure injection under skin may cause serious damage. Excessive exposure may result in eye, skin, or respiratory irritation.

ENVIRONMENTAL HAZARDS

No significant hazards.

NFPA Hazard ID:	Health:	1	Flammability:	2	Reactivity:	0
HMIS Hazard ID:	Health:	1*	Flammability:	2	Reactivity:	0

NOTE: This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

SECTION 3	COMPOSITION / INFORMATION ON INGREDIENTS
-----------	--

This material is defined as a mixture.

Hazardous Substance(s) or Complex Substance(s) required for disclosure

Name	CAS#	Concentration*	GHS Hazard Codes
2,6-DI-TERT-BUTYL-P-CRESOL	128-37-0	0.1 - < 1%	H400(M factor 1), H410(M factor 1)
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	5 - < 10%	H304
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	50 - < 70%	H227, H304
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	64742-46-7	20 - < 30%	H304
TRIPHENYL PHOSPHATE	115-86-6	0.1 - < 0.25%	H400(M factor 1), H410(M factor 1)

* All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

As per paragraph (i) of 29 CFR 1910.1200, formulation is considered a trade secret and specific chemical identity and exact percentage (concentration) of composition may have been withheld. Specific chemical identity and exact percentage composition will be provided to health professionals, employees, or designated representatives in accordance with applicable provisions of paragraph (i).

SECTION 4

FIRST AID MEASURES

INHALATION



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 3 of 12

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

SKIN CONTACT

Wash contact areas with soap and water. Remove contaminated clothing. Launder contaminated clothing before reuse. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

EYE CONTACT

Flush thoroughly with water. If irritation occurs, get medical assistance.

INGESTION

Seek immediate medical attention. Do not induce vomiting.

NOTE TO PHYSICIAN

If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

EXTINGUISHING MEDIA

Appropriate Extinguishing Media: Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish flames.

Inappropriate Extinguishing Media: Straight Streams of Water

FIRE FIGHTING

Fire Fighting Instructions: Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

Unusual Fire Hazards: Combustible. Pressurized mists may form a flammable mixture.

Hazardous Combustion Products: Aldehydes, Incomplete combustion products, Oxides of carbon, Phosphorus oxides, Smoke, Fume, Sulfur oxides

FLAMMABILITY PROPERTIES

Flash Point [Method]: >82°C (180°F) [ASTM D-93]Flammable Limits (Approximate volume % in air):LEL: 0.7UEL: 7.0 [Estimated]Autoignition Temperature:>225°C (437°F)

SECTION 6

ACCIDENTAL RELEASE MEASURES

NOTIFICATION PROCEDURES

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 4 of 12

regulations. US regulations require reporting releases of this material to the environment which exceed the applicable reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

PROTECTIVE MEASURES

Avoid contact with spilled material. Warn or evacuate occupants in surrounding and downwind areas if required due to toxicity or flammability of the material. See Section 5 for fire fighting information. See the Hazard Identification Section for Significant Hazards. See Section 4 for First Aid Advice. See Section 8 for advice on the minimum requirements for personal protective equipment. Additional protective measures may be necessary, depending on the specific circumstances and/or the expert judgment of the emergency responders.

For emergency responders: Respiratory protection: respiratory protection will be necessary only in special cases, e.g., formation of mists. Half-face or full-face respirator with filter(s) for dust/organic vapor or Self Contained Breathing Apparatus (SCBA) can be used depending on the size of spill and potential level of exposure. If the exposure cannot be completely characterized or an oxygen deficient atmosphere is possible or anticipated, SCBA is recommended. Work gloves that are resistant to hydrocarbons are recommended. Gloves made of polyvinyl acetate (PVA) are not water-resistant and are not suitable for emergency use. Chemical goggles are recommended if splashes or contact with eyes is possible. Small spills: normal antistatic work clothes are usually adequate. Large spills: full body suit of chemical resistant, antistatic material is recommended.

SPILL MANAGEMENT

Land Spill: Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. All equipment used when handling the product must be grounded. Do not touch or walk through spilled material. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Use clean non-sparking tools to collect absorbed material. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Large Spills: Water spray may reduce vapor; but may not prevent ignition in closed spaces. Recover by pumping or with suitable absorbent.

Water Spill: Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

ENVIRONMENTAL PRECAUTIONS

Large Spills: Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

SECTION 7

HANDLING AND STORAGE

HANDLING

Avoid contact with skin. Avoid prolonged breathing of mists and heated vapor. Prevent small spills and leakage to avoid slip hazard. Material can accumulate static charges which may cause an electrical spark (ignition source). When the material is handled in bulk, an electrical spark could ignite any flammable vapors from liquids or residues that may be present (e.g., during switch-loading operations). Use proper bonding and/or ground procedures. However, bonding and grounds may not eliminate the hazard from static



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 5 of 12

accumulation. Consult local applicable standards for guidance. Additional references include American Petroleum Institute 2003 (Protection Against Ignitions Arising out of Static, Lightning and Stray Currents) or National Fire Protection Agency 77 (Recommended Practice on Static Electricity) or CENELEC CLC/TR 50404 (Electrostatics - Code of practice for the avoidance of hazards due to static electricity).

Static Accumulator: This material is a static accumulator.

STORAGE

The container choice, for example storage vessel, may effect static accumulation and dissipation. Keep container closed. Handle containers with care. Open slowly in order to control possible pressure release. Store in a cool, well-ventilated area. Storage containers should be grounded and bonded. Fixed storage containers, transfer containers and associated equipment should be grounded and bonded to prevent accumulation of static charge.

SECTION 8 EXPOSURE CONTROLS / PERSONAL PROTECTION

EXPOSURE LIMIT VALUES

Exposure limits/standards (Note: Exposure limits are not additive)

Substance Name	Form	Limit / Sta	Indard	NOTE	Source
2,6-DI-TERT-BUTYL-P-CRESOL	Inhalable fraction and vapor	TWA	2 mg/m3	N/A	ACGIH
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT [total hydrocarbon vapor]	Non-Aerosol	TWA	200 mg/m3	Skin	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	OSHA Z1
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	ACGIH

Exposure limits/standards for materials that can be formed when handling this product: When mists/aerosols can occur the following are recommended: 5 mg/m³ - ACGIH TLV (inhalable fraction), 5 mg/m³ - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

No biological limits allocated.

ENGINEERING CONTROLS

The level of protection and types of controls necessary will vary depending upon potential exposure conditions.

Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 6 of 12

Control measures to consider:

Use explosion-proof ventilation equipment to stay below exposure limits.

PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

Respiratory Protection: If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

Hand Protection: Any specific glove information provided is based on published literature and glove manufacturer data. Glove suitability and breakthrough time will differ depending on the specific use conditions. Contact the glove manufacturer for specific advice on glove selection and breakthrough times for your use conditions. Inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

If prolonged or repeated contact is likely, chemical resistant gloves are recommended. If contact with forearms is likely, wear gauntlet style gloves.

Eye Protection: If contact is likely, safety glasses with side shields are recommended.

Skin and Body Protection: Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include: If prolonged or repeated contact is likely, chemical, and oil resistant clothing is recommended.

Specific Hygiene Measures: Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

ENVIRONMENTAL CONTROLS

Comply with applicable environmental regulations limiting discharge to air, water and soil. Protect the environment by applying appropriate control measures to prevent or limit emissions.

SECTION 9

PHYSICAL AND CHEMICAL PROPERTIES

Note: Physical and chemical properties are provided for safety, health and environmental considerations only and may not fully represent product specifications. Contact the Supplier for additional information.

GENERAL INFORMATION

Physical State: Liquid Color: Red Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 7 of 12

> Odor: Characteristic Odor Threshold: N/D

IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION Relative Density (at 15 °C): 0.88 Flammability (Solid, Gas): N/A Flash Point [Method]: >82°C (180°F) [ASTM D-93] Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated] Autoignition Temperature: >225°C (437°F) Boiling Point / Range: N/D Decomposition Temperature: N/D Vapor Density (Air = 1): N/D Vapor Pressure: [N/D at 20 °C] Evaporation Rate (n-butyl acetate = 1): N/D pH: N/A Log Pow (n-Octanol/Water Partition Coefficient): N/D Solubility in Water: Negligible Viscosity: 13.8 cSt (13.8 mm2/sec) at 40 °C | 5.1 cSt (5.1 mm2/sec) at 100°C [ASTM D 445] Oxidizing Properties: See Hazards Identification Section.

OTHER INFORMATION

 Freezing Point:
 N/D

 Melting Point:
 N/A

 Pour Point:
 -60°C
 (-76°F)

 DMSO Extract (mineral oil only), IP-346:
 < 3 %wt</td>

SECTION 10

STABILITY AND REACTIVITY

REACTIVITY: See sub-sections below.

STABILITY: Material is stable under normal conditions.

CONDITIONS TO AVOID: Open flames and high energy ignition sources.

MATERIALS TO AVOID: Strong oxidizers

HAZARDOUS DECOMPOSITION PRODUCTS: Material does not decompose at ambient temperatures.

POSSIBILITY OF HAZARDOUS REACTIONS: Hazardous polymerization will not occur.

SECTION 11

TOXICOLOGICAL INFORMATION

INFORMATION ON TOXICOLOGICAL EFFECTS

Hazard Class	Conclusion / Remarks		
Inhalation			
Acute Toxicity: No end point data for material.	Minimally Toxic. Based on assessment of the components.		
Irritation: No end point data for material.	Elevated temperatures or mechanical action may form vapors, mist, or fumes which may be irritating to the eyes, nose, throat, or lungs.		

E‰onMobil

Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 8 of 12

Ingestion	
Acute Toxicity: No end point data for	Minimally Toxic. Based on assessment of the components.
material.	
Skin	
Acute Toxicity: No end point data for	Minimally Toxic. Based on assessment of the components.
material.	
Skin Corrosion/Irritation: No end point data	May dry the skin leading to discomfort and dermatitis. Based on
for material.	assessment of the components.
Eye	
Serious Eye Damage/Irritation: No end point	May cause mild, short-lasting discomfort to eyes. Based on
data for material.	assessment of the components.
Sensitization	
Respiratory Sensitization: No end point data	Not expected to be a respiratory sensitizer.
for material.	
Skin Sensitization: No end point data for	Not expected to be a skin sensitizer. Based on assessment of the
material.	components.
Aspiration: Data available.	May be fatal if swallowed and enters airways. Based on
	physico-chemical properties of the material.
Germ Cell Mutagenicity: No end point data	Not expected to be a germ cell mutagen. Based on assessment of
for material.	the components.
Carcinogenicity: No end point data for	Not expected to cause cancer. Based on assessment of the
material.	components.
Reproductive Toxicity: No end point data	Not expected to be a reproductive toxicant. Based on assessment
for material.	of the components.
Lactation: No end point data for material.	Not expected to cause harm to breast-fed children.
Specific Target Organ Toxicity (STOT)	
Single Exposure: No end point data for	Not expected to cause organ damage from a single exposure.
material.	
Repeated Exposure: No end point data for	Not expected to cause organ damage from prolonged or repeated
material.	exposure. Based on assessment of the components.

TOXICITY FOR SUBSTANCES

NAME	ACUTE TOXICITY
2,6-DI-TERT-BUTYL-P-CRESOL	Oral Lethality: LD50 0.89 g/kg (Rat)

OTHER INFORMATION

For the product itself:

Repeated and/or prolonged exposure may cause irritation to the skin, eyes, or respiratory tract. Small amounts of liquid aspirated into the lungs during ingestion or from vomiting may cause chemical pneumonitis or pulmonary edema. **Contains:**

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

The following ingredients are cited on the lists below: None.

--REGULATORY LISTS SEARCHED--



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 9 of 12

1 = NTP CARC	3 = IARC 1	5 = IARC 2B
2 = NTP SUS	4 = IARC 2A	6 = OSHA CARC

SECTION 12

ECOLOGICAL INFORMATION

The information given is based on data available for the material, the components of the material, and similar materials.

ECOTOXICITY

Material -- Not expected to be harmful to aquatic organisms.

MOBILITY

More volatile component -- Highly volatile, will partition rapidly to air. Not expected to partition to sediment and wastewater solids.

Less volatile component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

PERSISTENCE AND DEGRADABILITY

Biodegradation:

Components -- Expected to be inherently biodegradable

BIOACCUMULATION POTENTIAL

Majority of components -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

SECTION 13

DISPOSAL CONSIDERATIONS

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

DISPOSAL RECOMMENDATIONS

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products. Protect the environment. Dispose of used oil at designated sites. Minimize skin contact. Do not mix used oils with solvents, brake fluids or coolants.

REGULATORY DISPOSAL INFORMATION

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrositivity or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

Empty Container Warning Empty Container Warning (where applicable): Empty containers may contain residue and can be dangerous. Do not attempt to refill or clean containers without proper instructions. Empty drums should be



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 10 of 12

completely drained and safely stored until appropriately reconditioned or disposed. Empty containers should be taken for recycling, recovery, or disposal through suitably qualified or licensed contractor and in accordance with governmental regulations. DO NOT PRESSURISE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND, OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION. THEY MAY EXPLODE AND CAUSE INJURY OR DEATH.

SECTION 14

TRANSPORT INFORMATION

LAND (DOT)

Proper Shipping Name: COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light) Hazard Class & Division: COMBUSTIBLE LIQUID ID Number: NA1993 Packing Group: III ERG Number: 128 Label(s): NONE Transport Document Name: NA1993, COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light), COMBUSTIBLE LIQUID, PG III

Footnote: This material is not regulated under 49 CFR in a container of 119 gallon capacity or less when transported solely by land, as long as the material is not a hazardous waste, a marine pollutant, or specifically listed as a hazardous substance.

LAND (TDG): Not Regulated for Land Transport

SEA (IMDG): Not Regulated for Sea Transport according to IMDG-Code

Marine Pollutant: No

AIR (IATA): Not Regulated for Air Transport

SECTION 15

REGULATORY INFORMATION

OSHA HAZARD COMMUNICATION STANDARD: This material is considered hazardous in accordance with OSHA HazCom 2012, 29 CFR 1910.1200.

Listed or exempt from listing/notification on the following chemical inventories: AICS, DSL, ENCS, IECSC, KECI, PICCS, TCSI, TSCA

EPCRA SECTION 302: This material contains no extremely hazardous substances.

SARA (311/312) REPORTABLE HAZARD CATEGORIES: Fire. Immediate Health. Delayed Health.

SARA (313) TOXIC RELEASE INVENTORY: This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.

Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 11 of 12

The following ingredients are cited on the lists below:

Chemical Name	CAS Number	List Citations
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	1, 17, 18
HYDROTREATED LIGHT	64742-53-6	1, 4, 13, 17, 18
NAPHTHENIC DISTILLATE	04742-33-0	1, 4, 13, 17, 10
(PETROLEUM)		
HYDROTREATED MIDDLE	64742-46-7	1, 4, 17, 18
DISTILLATE (PETROLEUM)		

--REGULATORY LISTS SEARCHED--

1 = ACGIH ALL	6 = TSCA 5a2	11 = CA P65 REPRO	16 = MN RTK
2 = ACGIH A1	7 = TSCA 5e	12 = CA RTK	17 = NJ RTK
3 = ACGIH A2	8 = TSCA 6	13 = IL RTK	18 = PA RTK
4 = OSHA Z	9 = TSCA 12b	14 = LA RTK	19 = RI RTK
5 = TSCA 4	10 = CA P65 CARC	15 = MI 293	

Code key: CARC=Carcinogen; REPRO=Reproductive

SECTION 16 OTHER INFORMATION

N/D = Not determined, N/A = Not applicable

KEY TO THE H-CODES CONTAINED IN SECTION 3 OF THIS DOCUMENT (for information only):

H227: Combustible liquid; Flammable Liquid, Cat 4

H304: May be fatal if swallowed and enters airways; Aspiration, Cat 1

H400: Very toxic to aquatic life; Acute Env Tox, Cat 1

H410: Very toxic to aquatic life with long lasting effects; Chronic Env Tox, Cat 1

THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:

Revision Changes:

Section 01: Company Mailing Address information was modified.

Section 05: Hazardous Combustion Products information was modified.

Section 15: List Citations Table information was modified.

Section 15: National Chemical Inventory Listing information was modified.

Section 14: Marine Pollutant information was modified.

Composition: Component Table information was modified.

Section 08: Exposure Limits Table information was modified.

Section 16: Revision Information - Implementation of GHS requirements phrase. information was deleted.

The information and recommendations contained herein are, to the best of ExxonMobil's knowledge and belief, accurate and reliable as of the date issued. You can contact ExxonMobil to insure that this document is the most current available from ExxonMobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law,



Product Name: MOBIL AERO HFA Revision Date: 01 Oct 2015 Page 12 of 12

re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "ExxonMobil" is used for convenience, and may include any one or more of ExxonMobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

Internal Use Only MHC: 2A, 0, 0, 0, 1, 1

PPEC: C

DGN: 2005454XUS (552975)

Copyright 2002 Exxon Mobil Corporation, All rights reserved



APPENDIX III

Declaration of Conformity



Declaration of Conformity

The design, development and manufacture is in accordance with European Community guidelines

Axle Jacks 02-7818C0110 02-7825C0110

Relevant provisions complied with by the machinery: $$2006/42/\mbox{EC}$$

Relevant standards complied with by the machinery: EN ISO 12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

atric unch

Quality Assurance Representative



APPENDIX IV

Maintenance Schedule



Maintenance Schedule

Axle Jacks

Tronair recommends performing preventative maintenance on all jacks, which should include a 90-day routine inspection and a 12-month load test.

Mo	del Number Serial Number
Ma	intenance Performed By Date
_	Day Maintenance: Check hydraulic system for leaks including the following:
-	Hand pump; cylinder, fittings and seals Reservoir; welds and fittings
	 Reservoir, werds and intings Check jack structure for corrosion, bending, cracking and excessive wear including the following: Base plate
	Mechanical extension Hydraulic cylinder assembly
	Retaining ring (secures the cylinder to the base plate) Jack pads, nose and main gear adapters
	 Spacer blocks Check fluid level with rams fully retracted. See manual for proper level height
_	Extend rams and visually inspect for corrosion, foreign matter, excessive wear and leaks around ram seals. Remove any foreign matter Check paint condition, touch-up areas that are exposed
_	Actuate the hand pump and raise the ram to full extension at least once. Do not pressurize hydraulic system once fully extended
	Do not allow jack to miss-stage when raising the rams to full extension

Extend rams and visually inspect for corrosion, foreign matter, excessive wear and leaks around ram seals. Remove any foreign matter

Open release valve and verify that rams fully retract

Annual (12-Month) Maintenance:

- Check hydraulic fluid for contamination (dirt/water) drain and flush if required
- Perform 90-day maintenance checklist
- Capacity test (110% of jack's rated capacity)
- NOTE: The jack may be returned to Tronair for load testing, or sent to a local hydraulic repair shop. Please contact Tronair to obtain a "Return Material Authorization Number" (RMA#) before sending any product to Tronair.

the Tronair group of companies:

www.tronair.com | www.columbusjack.com | www.daeind.com | www.datcomedia.com | www.eagletugs.com | www.malabar.com