

CE

06/2015 - Rev. 02

Tronair, Inc. 1 Air Cargo Pkwy East Swanton, OH 43558 REVISION 01 02 DATE 03/2015 06/2015



TABLE OF CONTENTS

<u>PAGE</u>

1.0	PRODUCT INFORMATION	. 1
1.1	DESCRIPTION	. 1
1.2	MODEL & SERIAL NUMBER	
1.3	MANUFACTURER	. 1
1.4	SPECIFICATIONS	
2.0	SAFETY INFORMATION	.1
2.1	USAGE AND SAFETY INFORMATION	
3.0	TRAINING	
3.1	TRAINING REQUIREMENTS	. 1
4.0	OPERATING INSTRUCTIONS	2
4.1	OPERATING CONTROLS	2
4.2	TO RAISE BOOM	
4.3	TO LOWER BOOM	.3
5.0	ADAPTER LISTING	
6.0	INSPECTION/MAINTENANCE	3
7.0	PROVISION OF SPARES	.3
7.1	SPARE PARTS	3
7.2	PARTS LISTS & ILLUSTRATIONS	.3
8.0	IN SERVICE SUPPORT	
9.0	GUARANTEES/LIMITATION OF LIABILITY	
10.0	APPENDICES	.4



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

This Tronair Strut Service Device, Model 14-6919-0100, is designed to compress landing gear struts.

1.2 MODEL & SERIAL NUMBER


Reference nameplate on unit

1.3 MANUFACTURER

<i>TRONAIR</i> , Inc. 1 Air Cargo Pkwy East Swanton, Ohio 43558 USA	Fax: E-mail:	(419) 866-6301 or 800-426-6301 (419) 867-0634 sales@tronair.com www.tronair.com
	Website:	www.tronair.com

1.4 SPECIFICATIONS

- Maximum Lifting Capacity 1,500 lbs (680.4 kg))
- Boom Height, Collapsed 6.5 in (15.9 cm)
- Air Pressure Max..... 125 psi (8.6 bar)

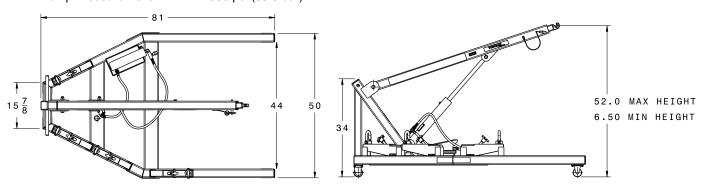

2.0 SAFETY INFORMATION

2.1 USAGE AND SAFETY INFORMATION

To insure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



WARNING! — Warning is used to indicate the presence of a hazard that *can cause severe personal injury, death, or substantial property damage* if the warning notice is ignored.

CAUTION! — Caution is used to indicate the presence of a hazard that *will or can cause minor personal injury or property damage* if the caution notice is ignored.

3.0 TRAINING

3.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the Strut Service Tool.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.





OPERATING INSTRUCTIONS

CAUTION!

Operator injury and/or component damage can result.


- Do not transport components on this lift.
- This lift is designed to only compress landing gear struts on aircraft.



Universal Jack Pad



Gulfstream MLG Adapter

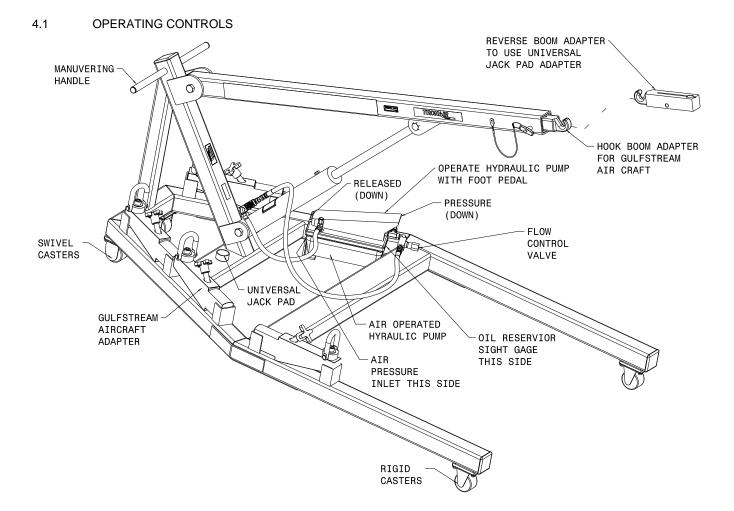



4.0 OPERATING INSTRUCTIONS (continued)

4.2 TO RAISE BOOM

- 1. Place Strut Service Device on hard level surface.
- 2. Use appropriate adaptors.
- 3. Actuate foot pedal to "Pressure" side until desired boom height is reached.
- 4. Use flow control valve to adjust speed of boom.

4.3 TO LOWER BOOM

- 1. Actuate foot pedal to "release" side.
- 2. Use flow control valve to adjust speed of boom.

CAUTION! Component damage and/or operator injury could result if release valve is opened too quickly.

5.0 ADAPTER LISTING

Included with unit

HJ-532-01 ... Universal jack adapter pad (.75 radius)

Sold Separately

K-4126...... Includes kits K-4127, K-4128, K-4129, K-4130

K-4127...... Axle adapter assembly, 3.340 diameter, for Gulfstream GII, GIII, GIV, GIVSP, G400

K-4128...... Axle adapter assembly, 3.536 diameter, for Gulfstream GII, GIII, GIV, GIVSP, G400

K-4129...... Axle adapter assembly, 3.610 diameter, for Gulfstream GV, GVSP, G350, G450, G500, G550, G650 K-4130...... Axle adapter assembly, 3.840 diameter, for Gulfstream GV, GVSP, G350, G450, G500, G550, G650

NOTE: Aircraft adapters will vary depending on Gulfstream aircraft model and aircraft service change 155

6.0 INSPECTION/MAINTENANCE

To keep your Tronair equipment fully operational and last for years you should adhere to the following suggestions:

- 1. Before each use:
 - Visually inspect unit to ensure all components are present and functional
 - a. All pivot bolts & nuts are secure
 - b. Cylinder is free of leaks & relief valve is operational
 - c. All casters & locks are operational
 - d. No bent or broken components

WARNING!

Ensure lift components are free of damage and or excessive wear. Never use lift if any component is bent or broken

2. Periodically:

Check cylinder reservoir level. Replenish with MIL-5606

- a. Check oil level with cylinder fully retracted
- b. Ensure Fluid is at acceptable level
- 3. Annually:

Check pump pressure relief

WARNING!



Pressure relief is factory set. DO NOT attempt to reset or adjust the relief valve. Send pump to an authorized Enerpac dealer.



WARNING!

Failure to remove landing gear strut servicing tool prior to inflating shock strut may cause fatal or serious injuries to personnel and damage to aircraft.

7.0 PROVISION OF SPARES

7.1 SPARE PARTS

Spare parts may be obtained from the manufacturer:

TRONAIR, Inc.	Telephone:	(419) 866-6301 or 800-426-6301
1 Air Cargo Pkwy East	Fax:	(419) 867-0634
Swanton, Ohio 43558 USA	E-mail:	sales@tronair.com
	Website:	www.tronair.com

7.2 PARTS LISTS & ILLUSTRATIONS

Reference the following page for Replacement Parts available.



8.0 IN SERVICE SUPPORT

Contact Tronair, Inc. for technical services and information. See Section 1.3 - Manufacturer.

9.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.


The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.

10.0 APPENDICES

APPENDIX I	Declaration of Conformity
APPENDIX II	Enerpac Turbo II Air Pump
APPENDIX III	Royal Line 2500 PSI Cylinder



Parts List When ordering replacement parts/kits, please specify model, serial number and color of your unit.

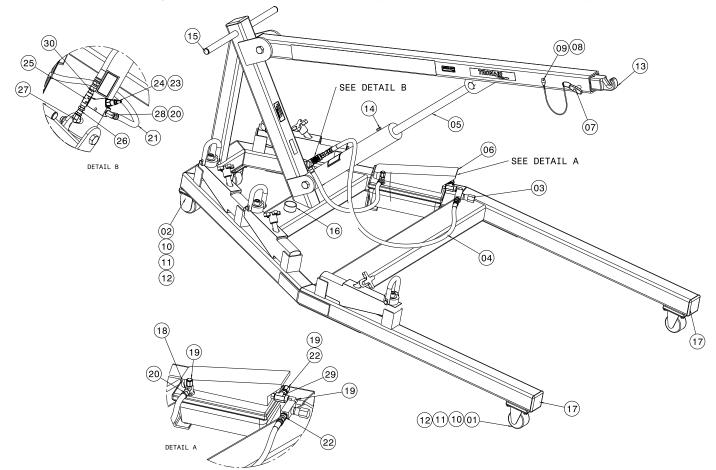

ltem	Part Number	Description	Qty
1	U-1123	Caster, Rigid	2
2	U-1124	Caster, Swivel	2
3	HC-2247	Valve, Flow Control	1
4	TF-1043-06*38.00	Hose, 3/8 ID	1
5	HC-2346	Cylinder, Hydraulic	1
6	HC-2347	Pump, Hydraulic	1
7	G-1310-0831	Pin, T-Handle Ball Lock	1
8	H-1026*07.0	Lanyard	1
9	G-1351-02	Rivet	1
10	G-1100-106504	Bolt	16
11	G-1250-1060N	Flatwasher	16
12	G-1251-1060R	Lockwasher	16
13	J-4122	Adapter, Hook	1
14	H-3016	Vent, Breather	1
15	H-2589	Cap, Plug	2
16	HJ-532-01	Pad, Jack	1
17	H-2649-16	Cap, Plug	2
18	N-2017-10-S	Tee, Male Run	1
19	N-2008-05-S	Сар	2
20	N-2026-03-S	Swivel, JIC 37º Hose Fitting	2



Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
21	TF-1047-04*15.0	Hose, ¾ Gray	1
22	N-2009-10-S	Swivel, Female, 37º JIC x 3%	2
23	HC-2653	Manifold, In-Line	1
24	HC-2652	Cartridge, Relief Valve	1
25	N-2208-03-S	Tee, Male Branch	1
26	N-2030-03-S	Swivel, #6 JIC x ¼ NPT	2
27	N-2005-10-S	Elbow, ¾ Male	1
28	N-2005-08-S	Elbow, Male	1
29	N-2209-06-S	Tee, Street	1
30	N-2009-08-S	Connector, Male	1



APPENDIX I

Declaration of Conformity



DECLARATION of CONFORMITY

The design, development and manufacture is in accordance with European Community guidelines

Strut Service Device 14-6919-0100

Relevant provisions complied with by the machinery: 2006/42/EC

Relevant standards complied with by the machinery: EN ISO 12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

unch

Quality Assurance Representative



APPENDIX II

Enerpac Turbo II Air Pump



06/10

Repair Parts Sheet

Turbo II Air Pumps

L2533 Rev. I


For Date Codes Beginning with the Letters "C", "D" and "E"

To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil.

Enerpac recommends that all kit components be installed to insure optimum performance of the repaired product.

Note: Storing the pump in the vertical position may cause it to lose its prime. If pump loses its prime:

- 1. Remove cover.
- 2. Remove relief valve.
- 3. Fill chamber with oil.
- 4. Apply Loctite 545 to threads and torque to 10-12 ft-lbs. [14-16 Nm].
- 5. Replace pump cover. See Figure 1 for gasket orientation detail and cover screw torquing sequence.

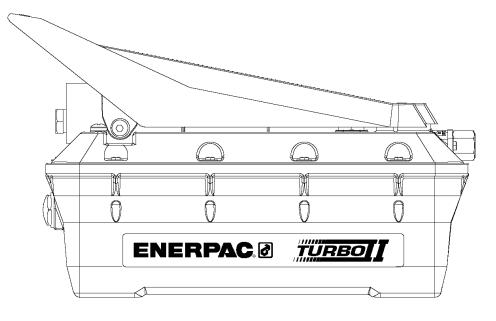

Contents:

Figure 1 — Treadle Assembly, T Version	2
Figure 2 — Treadle Assembly, M, C, S Version	3
Figure 2a & 2b - Handle Assembly, R Version	4
Figure 3 — Cover Assembly	5
Figure 4 — Hydraulic Section Detail	6
Figure 5 — Seal Push Tool	7
Figure 6 — Seal Push Tool	7

Figure 7 — Air Motor Assembly	8
Figure 8 — Release Valve	9
Figure 9 — Manual Valve	10
Figure 10 — Pump Manifolds, PAS Version	11
Figure 11 — Pump Manifold, PAC Version	11
Table 1 — Relief Valve Setting	12
Table 2 — Repair Kit Application	12

* Turbo II original release starts at Date Code "C".

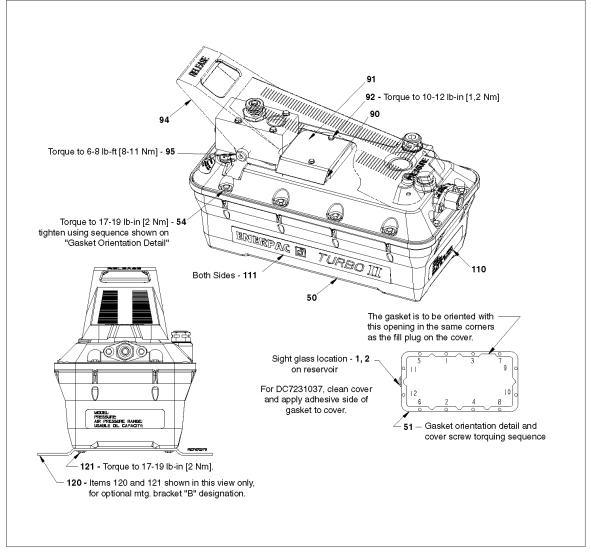


Figure 1, Treadle Assembly, T Version

	Repair Parts List for Figure 1								
ltem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description		
1	DA12288022	1	Sight Glass	91	DA5690098	1	Muffler Cover		
2	★ B1908503	1	O Ring	92	DC7851028	2	Hi Lo Screw		
50	DC4321900SR	1	Reservoir, 2 L, Yellow	94	DA4849218	1	Treadle		
	DC4322900SR	1	Reservoir, 2 L, Black	95	DA4236242	2	Shoulder Screw		
	DC4323900SR	1	Reservoir, 2 L, Red	110	DA4296026	1	Model No. Decal		
	DC4320900SR	1	Reservoir, 5 L, Black	111	DC2262026	2	Decal, Enerpac Turbo II Blk		
51	★ DC4027167	1	Reservoir Gasket, 2 L		DC2260026	2	Decal, Enerpac Turbo II Wh		
	†★DC7231037	1	Reservoir Gasket, 5 L (foam)	120	DA5389111	2	Mtg. Bracket		
54	DA5938028	12	Hi Lo Screw	121	DA5938028	4	Hi Lo Screw		
90	DA8625116	1	Muffler						

† Replaces DC714517 O-ring gasket.

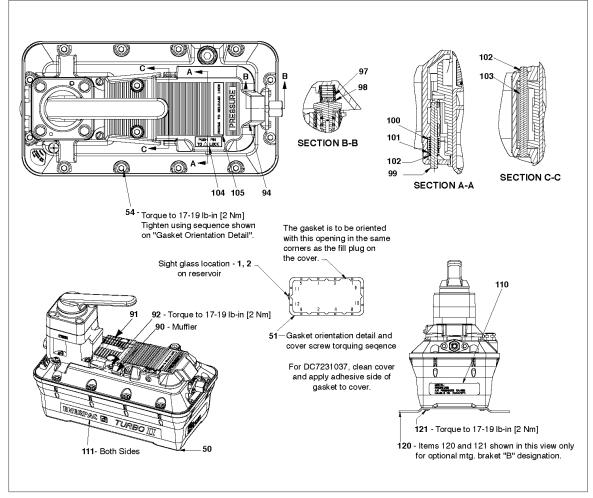


Figure 2, Treadle Assembly, M, C, S Version

			Repair Parts L		•		T
ltem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description
1	DA12288022	1	Sight Glass	97	DA8506110	1	Spring
2	★ B1908503	1	O Ring	98	DA8670013	1	Spring Guide
50	DC4321900SR	1	Reservoir, 2 L, Yellow	99	DA7940061	1	Latch Pin
	DC4322900SR	1	Reservoir, 2 L, Black	100	DA8508110	1	Spring
	DC4323900SR	1	Reservoir, 2 L, Red	101	DA8505186	1	Spacer
	DC4320900SR	1	Reservoir, 5 L, Black	102	DA5025349	2	Ret. Ring
51	★ DC4027167	1	Reservoir Gasket, 2 L	103	DA7939061	1	Hinge Pin
	†★DC7231037	1	Reservoir Gasket, 5 L (foam)	104	DA8744026	1	Decal
54	DA5938028	12	Hi Lo Screw	105	DA8743026	1	Decal
90	DA8625116	1	Muffler	110	DA4296026	1	Model No. Decal
91	DA7935111	1	Mtg. Bracket Casting Muffler	111	DC2262026	2	Decal, Enerpac Turbo II Blk
			Cover		DC2260026	2	Decal, Enerpac Turbo II Wht
92	DA5938028	4	Hi Lo Screw	120	DA5389111	1	Mtg. Bracket
94	DA7937218	1	Treadle	121	DA5938028	4	Hi Lo Screw

† Replaces DC714517 O-ring gasket.

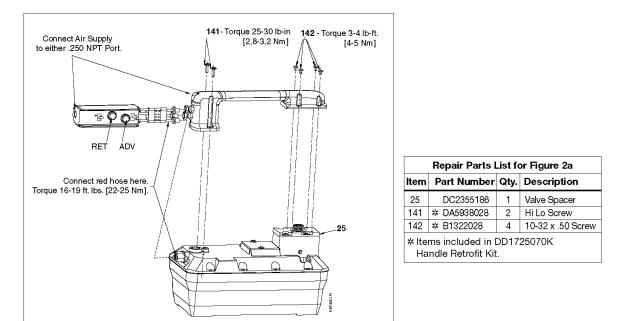


Figure 2a, Remote Pendant Turbo Pump Assembly


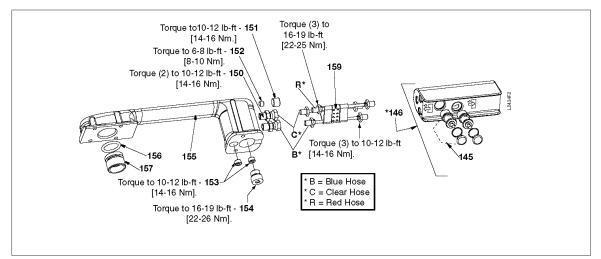


Figure 2b, Pendant Handle Assembly

	Repair Parts List for Figure 2b							
ltem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description	
145	DC2363660SR	2	Air Cartridge Valve	154	* B1005006	1	#6 SAE Hex Plug	
146	DC2354840SR	1	Air Pendant Assy. (includes No. 145)	155	◆*★ DC2347070	1	Handle Assembly	
150	DC2367006	2	1/8" NPT Swivel Fitting	154	* B1019503	1	O-ring 70 DUPR-213	
151	* A1008245	1	Hex Plug	157	◆*★ DC473051	1	Pneumatic Dump Piston	
152	* A1006245	1	1/16 Flush Plug w/Sealant	159	DC2365646SR	1	Hose Assembly	
153	* A1007245	2	1/8 Flush Plug w/Sealant					
	ms included in Pump f ms included in DD172		Kit, see Table 2 on page 12. Khandle Retrofit Kit.					

♦ Handle (item 155) and piston (item 157) MUST be replaced as a set. Old and new parts are NOT interchangeable.

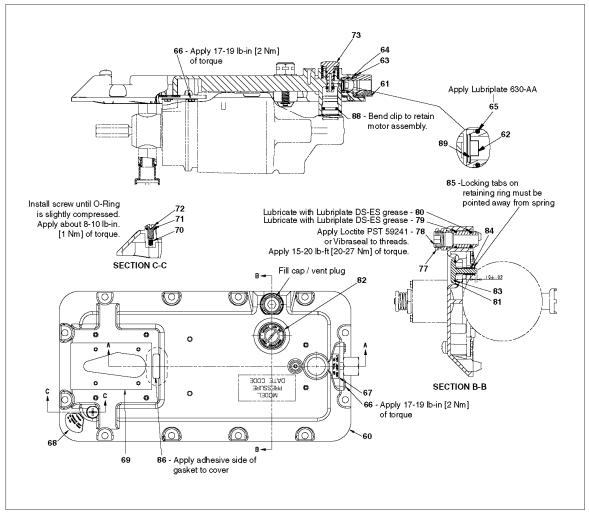

Repair Parts List for Figure 3										
tem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description			
60	DC3913900SR	1	Blk Cover Assy. (incl 61-87)	73	DA4802051SR	1	Air Button			
	DC3914900SR	1	Red Cover Assy. (incl 61-87)	77	DA4871118	1	Breather			
61	DA5295034	1	Swivel Coupler	78	A1009245	1	3/8 Flush Plug W/Sealant			
62	★ A8001018SR	1	Filter	79	★ DA5349503	1	O Ring (Wear Coated)			
63	DA4847799	1	Stamped Bracket	80	★ B1010503	1	O Ring			
64	DA5026349	1	Ret. Ring	81	DC708440	1	Poppet			
65	★ B1220503	1	O Ring Ref B839503	82	U972038026-2	1	Breather Vent Decal			
66	DA5938028	6	Hi Lo Screw	83	B1224503	1	O Ring Ref J711041			
67	U972038026-3	1	Air Tool Oil Decal	84	DC821110	1	Compression Spring			
68	DA7931026	1	Caution Decal	85	DC4077160	1	3/16" Retainer			
69	★ DC4997900K	1	Gasket Set	86	†★ DA6956037	1	Gasket			
70	★ DA4390118	1	Filter	88	★ DA5521149	1	Retaining Pin			
71	★ B1005503	1	O Ring	89	★ DC5217049	1	Retaining Ring			
72	★ DC7838028	1	1/4 x 3/8" Hi Lo Screw				_			

† Replaces and interchangeable with gasket DC7872037.

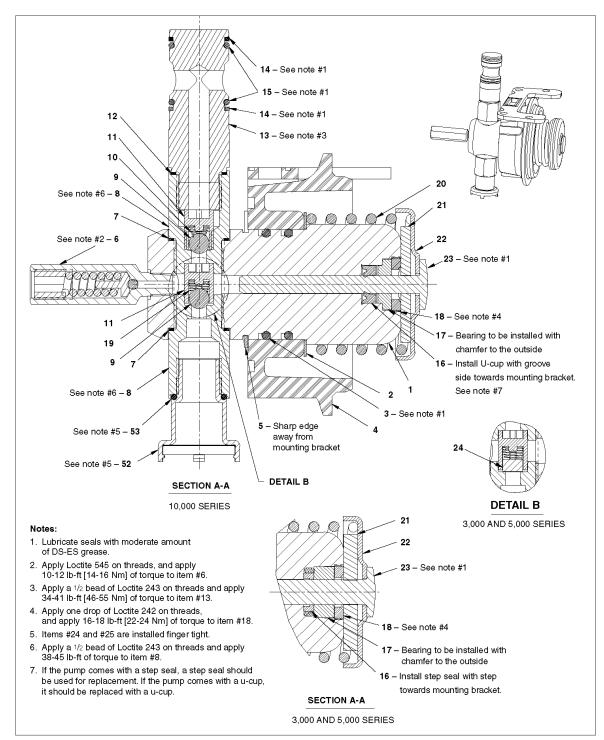


Figure 4, Hydraulic Section Detail

	Repair Parts List for Figure 4									
tem		Part Number	Qty.	Description	ltem		Part Number	Qty.	Description	
1		DC114030	1	Hydraulic Cylinder, Turbo 10 KSI	17	×	CB624108	1	Bearing 10 KSI	
		DC116030	1	Hydraulic Cylinder, Turbo 3 KSI		*	DA9056108	1	Bearing 3 KSI	
		DC115030	1	Hydraulic Cylinder, Turbo 5 KSI		*	DA5352155	1	Bearing 5 KSI	
2		DA4298108	1	Washer	18	*	DA1204044	1	Bearing Retainer 10 KSI	
3	×	B1258503	2	O-Ring		*	DA7888044	1	Bearing Retainer 3 KSI	
4		DA4287111	1	Mtg. Bracket		*	DA1204044	1	Bearing Retainer 5 KSI	
5		DA4343044	1	Bowed Ret. Ring	19	*	DA6911210	1	Conical Spring	
6		DA8802900SR	1	Relief Valve Assy	20		DA4285110	1	Spring	
7	*	DA3811167	2	Copper Gasket	21		DA6600108	1	Rubber Washer 10 KSI	
8		DC283290SR	2	Seat			DA9280108	1	Rubber Washer 3 KSI	
9	×	B1007016	2	1/4" Dia. Ball			DA5976108	1	Rubber Washer 5 KSI	
10	*	DA4874110	1	Conical Spring	22		DA4284108	1	Spring Washer, Turbo, 10 KS	
11	×	DA3682013	2	Ball Guide			DA9281108	1	Spring Washer, Turbo, 3 KS	
12	×	DC170167	1	Copper Gasket			DA4628108	1	Spring Washer, Turbo, 5 KS	
13		DC5268SR	1	Pressure Tube 10 KSI	23		DC6428040	1	Plunger, 10 KSI	
14	*	DA4974367	2	Backup Ring			DC6406040	1	Plunger, 3 KSI	
15	×	B1016803	2	O-Ring – Global			DC6427040	1	Plunger, 5 KSI	
16	*	CB918041	1	U-Cup 10 KSI	24	*	DC4440	1	Poppet	
	*	DA9269476	1	Step Seal 3 KSI	52		DC442900SR	1	Intake Tube Assy	
	×	DC6446041	1	U-Cup 3 KSI	53	*	B1221503	1	O-Ring Ref. C403503	
n Page 6.	*	DA5351476	1	Step Seal 5 KSI						
	×	DDC6447041	1	U-Cup 5 KSI						

★ Items included as part of Repair Kits: (DC2222900K, 10,000 Series); (DC2220900K, 3,000 series); (DC2221900K, 5,000 series) Also included in complete Pump Repair Kit, see Table 2 on page 12.

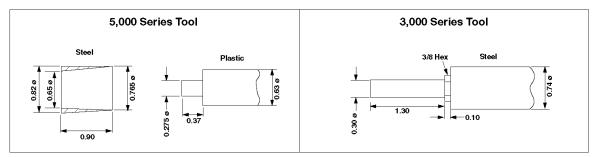


Figure 5, Seal Push Tool


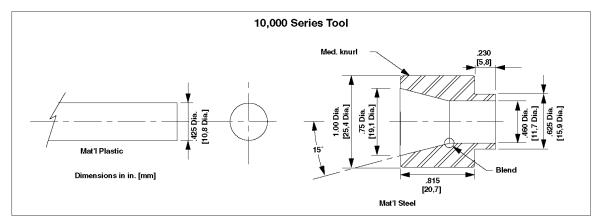


Figure 6, Seal Push Tool

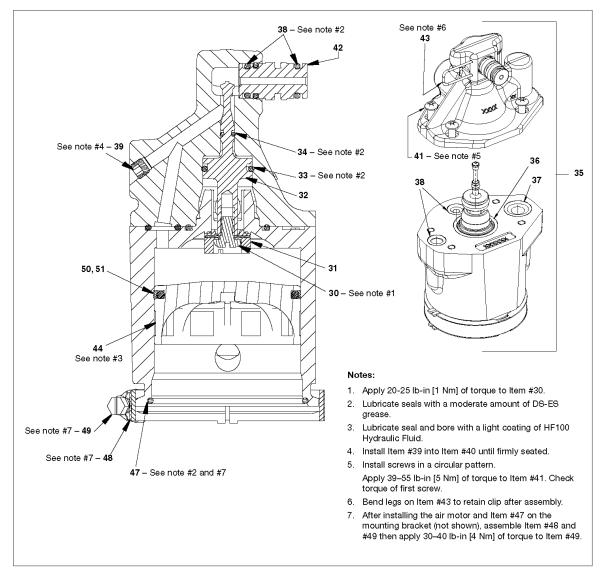

	Repair Parts List for Figure 7									
ltem		Part Number	Qty.	Description	ltem		Part Number	Qty.	Description	
30	*	DA7085028	1	Screw – .250-20 Special	41		DC2261628	4	Screw, Torx (.25-20 x .75 lg.	
31	×	DA3706120	1	B/U Washer	42		DC2182099	1	Extension Fitting, Air Motor	
32	×	DC2234051	1	Piston	43	×	DA5521149	1	Retaining Pin	
33	×	B1013503	1	O-Ring	44		DC4122051SR	1	Air Motor Piston	
34	×	B1001503	1	O-Ring (.12 x .25 x .06)	47	*	B1282503	1	O-Ring	
35		DC2200900SR	1	Air Motor, Complete	48		DA2687111	2	Clamp Brk.	
36	×	B1260503	1	O-Ring	49		DA2686299	1	Hose Clamp	
37	×	B1014503	1	O-Ring Ref M760041	50	*	DC4119703	1	O-ring	
38	×	B1009503	4	O-Ring Ref K1041	51	*	DC4120141	1	Glyde Ring	
39		A1006245	1	1/16 Flush Plug w/Sealant						

 \star Items included in and available only as part of Repair Kit DC2234900SF

Also included in complete Pump Repair Kit, see Table 2 on page 12.

Notes:

- 1. Torque Item #19 to 72-78 lb-ft [98-105 Nm] with threads lubricated.
- 2. Torque Item #11 to 17-19 lb-in [2 Nm].
- 3. Lubricate all seals and mating surfaces w/DS-ES Grease prior to assembly unless otherwise noted.
- 4. Prior to assembling Item #6 seat, coin seat with a ø .219 ball to a force of 95–105 lbs. [444 N].

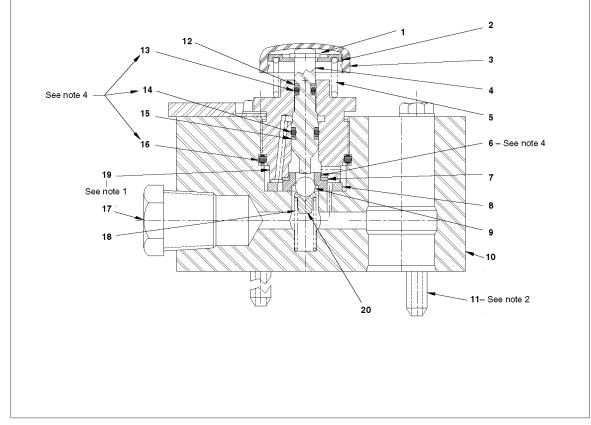


Figure 8, Release Valve

	Repair Parts List for Figure 8										
ltem		Part Number	Qty.	Description	ltem		Part Number	Qty.	Description		
1	×	DA5025349	1	Ret. Ring	11		DA4294028	4	Thd. Form Screw		
2		DA4848108	1	Spring Washer	12	×	B1006564	1	B/U Washer		
3	×	DA4831020	1	Сар	13	×	B1001503	1	O-Ring (.12 x .25 x .06)		
4		DA4832040	1	Release Plunger	14	×	B1003503	1	O-Ring (.19 x .31 x .06) BUNA		
5	×	DA6971110	1	Spring	15	×	B1008564	1	Back-up Washer		
6	×	CB581290	1	Ball Seat	16	×	B1118903	1	O-Ring		
7	×	P20037	1	Gasket	17		R515245-2	1	Plug		
8	×	CL344167	1	Gasket	18	×	CJ656110	1	Spring		
9	×	B1006016	1	7/32" Dia. Ball	19		DA4872013	1	Release Guide		
10		DA4833190	1	Manifold	20	×	DA7572013	1	Ball Guide		

Also included in complete Pump Repair Kit, see Table 2 on page 12.

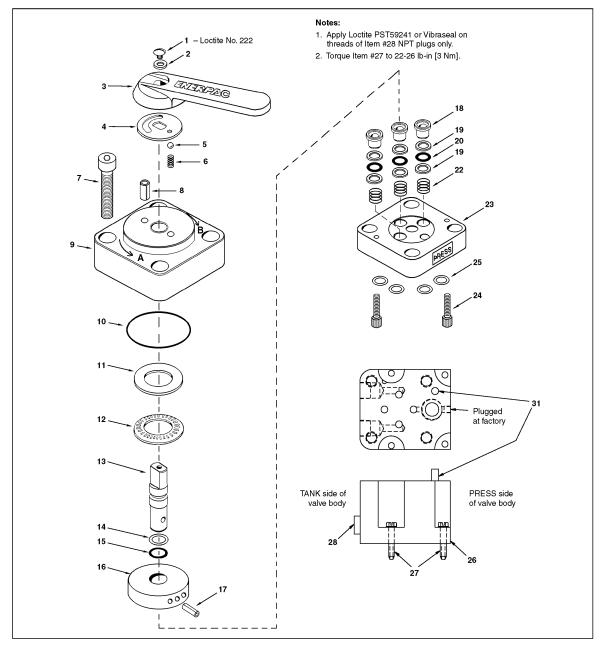


Figure 9, Manual Valve

IMPORTANT

Do not attempt to repair the pump by substituting another valve. The 4-way manual valve used on Turbo II pumps is not interchangeable with a standard Enerpac VM-4 valve. Using a valve that is not designed for this mounting configuration may result in the reservoir becoming pressurized during operation.

For complete replacement valve, order:

DA5118900SR for NPT Ports

DA9744900SR for BSPP Ports

em	Part Number	Qty.	Description	ltem		Part Number	Qty.	Description
1	A8076048	1	Screw	17		B1109057	1	Roll Pin
2	B1086108	1	Washer	18		DA9560041	3	Seal
3	Y325070	1	Handle	19	*	B1011564	6	Back-Up Washer
4	A8005071	1	Disc	20	*	B1006503	3	O-Ring
5	★ B1006016	1	7/32" Ball	22	*	CB28110	3	Spring
6	★ A8039110	1	Spring	23		CH539190	1	Body
7	B1389028	4	Bolt	24		B1326028	2	Bolt
8	B1126057	1	Roll Pin	25	*	B1111803	4	O-Ring
9	CB324001	1	Valve Cap	26		DA5132840SR	1	Manifold - NPT Ports
10	★ B1269503	1	O-Ring			DA9745840SR	1	Manifold - BSPP Ports
11	CB327101	1	Bearing Plate	27		DC1523028	4	Screw
12	CB328281	1	Bearing	28		CS235006	2	Plug - BSPP Ports
13	CH536104	1	Shaft			R515245-2	2	Plug - NPT Ports
14	★ B1012564	1	Back-Up Washer	 30		DA5579026	1	Decal VM4 (not shown)
15	★ B1007503	1	O-Ring	31		B1051057	1	Pin
16	CH542950SR	1	Disc Assembly	- /			+ .	

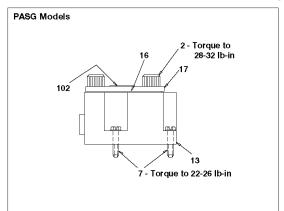


Figure 10, Pump Manifolds, PAS Version

Pump Manifolds

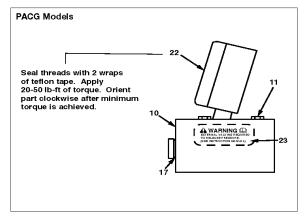


Figure 11, Pump Manifold, PAC Version

	Repair Parts List for Figure 10								
ltem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description		
2	B1323028	4	SCHS SAE Manifolds	13	DA9259840SR	1	Manifold BSPP		
	CBA515028-1A	4	SHCS BSPP Manifolds	16	★ DA9787037	1	Gasket		
7	DC1523028	4	Screw	17	DA9788098	1	Cover		
13	DC94840SR	1	Manifold SAE	102	DA9884026	1	Warning Decal		

	Repair Parts List for Figure 11										
ltem	Part Number	Qty.	Description	ltem	Part Number	Qty.	Description				
10	DA5307190	1	Valve Body - SAE Ports	22	G2517L	1	2.5" Gauge 0-6000 psi				
	DA9747190	1	Valve Body - BSPP Ports	1	A1008245	1	Hex Plug (BSPP only)				
11	DA4294028	4	Thread Forming Screw	23	DA9554026	1	Warning Decal				
17	B1007503	1	O-Ring (SAE Only)								
★ Ind	icates parts included	in and	available only as part of Repa	air Kit. See	Table 2 on page 12	for Rep	air Kit ordering information.				

Table 1 - Relief Valve Settings									
Pump Model	Pressure Rating	Relief Valve Pressure Setting							
PA_G1	10,000 psi	10,400 to 11,000 psi							
PA_G5	5,000 psi	5,200 to 5,700 psi							
PA_G3	5,000 psi	5,200 to 5,700 psi							

For standard models with special pressure settings,

Actuant China Ltd. (Peking) 709B Diyang Building

+86 10 845 36166 +86 10 845 36220

+33 1 60 13 68 68

+33 1 69 20 37 50

+49 211 471 490

+49 211 471 49 28

+91 80 40 792 777 +91 80 40 792 792

+39 02 4860 1288

Dong San Huan North Rd.

France, Switzerland

Francophone ACTUANT - ENERPAC France S.A., ZA de Courtaboeuf 32, avenue de la Baltique 91140 Villebon / Yvettte

Germany, Austria, Switzerland,

Greece, Baltic States, Central and Eastern Europe ENERPAC GmbH

P.O. Box 300113 D-40401 Düsseldorf Willstätterstrasse13

D-40549 Düsseldorf

ENERPAC Hydraulics (India) Pvt. Ltd.

Peenya Industrial Area, IInd Phase

Italy ENERPAC S.p.A.

Via Canova 4

Bangalore, 560 058 India

20094 Corsico (Milano) Tel: +39 02 4861 111

Germany

Tel:

Fax:

India

ام۲

Fax:

Fax:

No. 1A.

Xin No 2

Tel: Fax:

France

Tel:

Fax:

Beijing City

100028 China

the model number will have a "dash" followed by 4 more digits to indicate the pressure setting.

To determine the pressure settings locate the model number stamp. The model number will be in the format PAYYYYY-XXXX, where XXXX is the maximum pressure rating. The relief valve should be set from (XXXX + 250 psi to (XXXX) + 750 psi).

	Table 2 - Repair Kit Application								
	Pump Model	Recommended Repair Kit							
PATG1	PARG1	PATG1100K							
PATG5	PARG5	PATG5100K							
PATG3	PARG3	PATG3100K							
PAMG1		PAMG1400K							
PAMG5	PACG5 PASG5	PAMG5400K							
PAMG3	PACG3 PASG3	PAMG3400K							

Enerpac Worldwide Locations

Africa ENERPAC Middle East FZE Office 423, JAFZA 15 P.O. Box 18004 Jebel Ali, Dubai United Arab Emirates +971 (0)4 8872686 +971 (0)4 8872687 Ter: Fax:

Australia, New Zealand Actuant Australia Ltd. Block V Unit 3 Regents Park Estate 391 Park Road 391 Park Road Regents Park NSW 2143 (P.O. Box 261) Australia Tel: +61 297 438 988 Fax: +61 297 438 648

Brazil

Power Packer do Brasil Ltda Rua dos Inocentes, 587 04764-050 - Sao Paulo (SP) +55 11 5687 2211 +55 11 5686 5583 Tel· Fax: Toll Free in Brazil 0800 891 5770 Tel: vendasbrasil@enerpac.com

Canada Actuant Canada Corporation 6615 Ordan Drive, Unit 14-15 Mississauga, Ontario L5T 1X2 Tel: +1 905 564 5749 +1 905 564 0305 Fax: Toll Free: Tel: +1 800 268 4987 +1 800 461 2456 Fax: Technical Inquiries: techservices@enerpac.com

China Actuant Industries Co. Ltd. No. 6 Nanjing Road Taicang Economic Dep Zone Jiangsu, China Tel: +86 0512 5328 7529 +86 0512 5328 7500 7529 Fax: +86 0512 5335 9690

e-mail: info@enerpac.com

Japan Applied Power Japan LTD KK Besshochou 85-7 Kita-ku, Saitama-shi 331-0821 Japan Tel: +81 48 662 4911 +81 48 662 4955 Fax:

Middle East, Turkey and Caspian Sea ENERPAC Middle East FZE Office 423, JAFZA 15 P.O. Box 18004

Jebel Ali Dubai United Arab Emirates +971 (0)4 8872686 +971 (0)4 8872687 Tel: Fax:

Russia and CIS (excl. Caspian Sea Countries) Actuant LLC Admiral Makarov Street 8 125212 Moscow, Russia Tel: +7-495-9809091 Fax: +7-495-9809092

Sweden, Denmark, Norway, Finland and Iceland ENERPAC Scandinavia AB Fabriksgatan 7 412 50 Gothenburg Sweden Tel: +46 31 7990281 +46 31 7990010 Fax:

scandinavianinquiries@enerpac.com Singapore Actuant Asia Pte. Ltd. 37C, Benoi Road Pioneer Lot, Singapore 627796 Tel: Fax: Tel: +65 68 63 0611 Fax: +65 64 84 5669 Toll Free: +1800 363 7722 Technical Inquiries: tech.service-sg@enerpac.com

internet: www.enerpac.com

South Korea

Actuant Korea Ltd. 3Ba 717, Shihwa Industrial Complex

Spain and Portuga

& D

(Madrid)

Sweden

Inquiries:

Luxembourg ENERPAC B.V.

Tel:

Fax:

Fax:

Spain Tel:

Fax:

 Shihwa Industrial Complex

 Jungwang-Dong, Shihung-Shi,

 Kyunggi-Do

 Republic of Korea 429-450

 Tel:
 +82 31 434 4506

 Fax:
 +82 31 434 4507

ENERPAC SPAIN, S.L. Avda. Los Frailes, 40 – Nave C

Pol. Ind. Los Frailes 28814 DAGANZO DE ARRIBA

Sweden, Denmark, Norway,

Finland and Iceland

Enerpac Scandinavia AB Fabriksgatan 7 412 50 Gothenburg

+34 91 884 86 06 +34 91 884 86 11

+46 (0) 31 7990281 +46 (0) 31 7990010

Scandinavianinquiries@enerpac.com

Galvanistraat 115, 6716 AE Ede P.O. Box 8097, 6710 AB Ede The Netherlands

beneluxinquiries@enerpac.com Technical Inquiries Europe:

techsupport.europe@enerpac.com

+31 318 535 800 +31 318 525 613

+31 318 535 848

The Netherlands, Belgium,

United Kingdom, Ireland

Enerpac Ltd Bentley Road South Darlaston, West Midlands WS10 8LQ, United Kingdom Tel: +44 (0)121 50 50 787 +44 (0)121 50 50 799 Fax:

USA. Latin America and Caribbean ENERPAC P.O. Box 3241 6100 N. Baker Road Milwaukee, WI 53209 USA +1 262 781 6600 +1 262 783 9562 Tel Fax:

User inquiries: +1 800 433 2766 Inquiries/orders:

+1 800 558 0530 Technical Inquiries: techservices@enerpac.com

ENERPAC 704 W. Simonds Dallas, TX 75159 USA Tel: +1 972 287 2390 +1 972 287 4469 Fax

09/30/09

All Energiac products are quaranteed against defects in workmanship and materials for as long as you own them. For your nearest authorized Enerpac Service Center, visit us at www.enerpac.com



APPENDIX III

Royal Line 2500 psi Cylinder

		ROYAL	LINE					
Frince	2500 PSI							
				7				
		BORE 1 3/8" ROD	DESCRIPTION	NOTES				
MODEL		QTY PART NO. 1		NOTES				
PIVIC-5408 PMC-5412		1020700166 1020700168	PISTON ROD					
PMC-5414		1 020700169	PISTON ROD					
		1						
		1020700172 1020700174						
		1020700174 1020700178						
PMC-5436		1 020700180	PISTON ROD					
PMC-5442	<u>1</u>	1	PISTON ROD					
PMC-5408		1	BUTT & TUBE ASSEMBLY					
PIVIC-5412		1						
PMC-5414	······2 ······	1	BUTT & TUBE ASSEMBLY					
PMC-5420		1	BUTT & TUBE ASSEMBLY					
PMC-5424	2	1	BUTT & TUBE ASSEMBLY					
PMC-5430	2	.1	BUTT & TUBE ASSEMBLY					
		1						
PMC-5442	2	.1	BUTT & TUBE ASSEMBLY					
PMC-5400		1 071300016	PISTON					
		1						
PMC-5400	7	1 270010002	GREASE ZERK					
PMC-5400	8	1	PISTON RING	KIT				
PMC-5400	9	2 240000330	O-RING	KIT				
PMC-5400		2	LEATHER BU-WASHER	KIT				
			O-RING					
PMC-5400		1	WPER	KIT				
PMC-5400		.1						
PMC-5400	*	1	BU-WASHER	KIT				
			QUAD RING	KIT				
INCLODED II	Y FAUNING KIT AS K	LELAUCIVIENT SCALS FOR ULDE						
		DRATION • P.O. BOX 7000 • 612 NORTH						

PRINCE MANUFACTURING CORPORATION • P.O. BOX 7000 • 612 NORTH DERBY LANE • NORTH SIOUX CITY, SD 57049-7000 PH: 605-235-1220 • OEM SALES FAX: 605-235-1082 • DISTRIBUTOR SALES FAX: 605-217-6300 • URL: www.princehyd.com

CPB 01-05-10-01