




Operation & Service Instructions

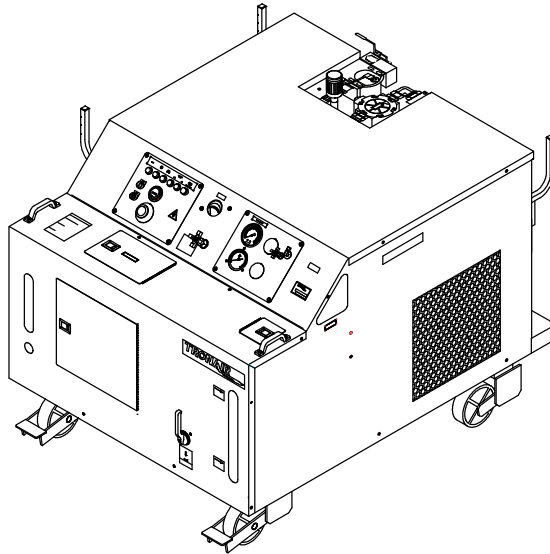

**Model: 5Q11
Hydraulic Power Unit**



06/2010 – Rev. 05

1740 Eber Rd
Holland, OH 43528-9794
USA

Tronair, Inc.
www.tronair.com
Email: sales@tronair.com

Phone: (419) 866-6301
800-426-6301
Fax: (419) 867-0634

Model: 5Q11
Hydraulic Power Unit

TABLE OF CONTENTS

	<u>PAGE</u>
1.0 Product Information	1
1.1 Description.....	1
1.2 Model & Serial Number	1
1.3 Manufacturer.....	1
1.4 Function.....	1
1.5 Requirements	1
2.0 Safety Information	1
2.1 Usage And Safety Information.....	1
2.2 Explanation Of Warning & Danger Signs	2
2.3 Component Safety Features.....	2
2.4 Functional Safety Features.....	2
2.5 Personal Protection Equipment	2
2.6 Safety Guidelines.....	2
2.7 General Comment.....	2
2.8 General Comment.....	2
3.0 Preparation Prior To First Use	3
3.1 General.....	3
3.2 Servicing Reservoir	3
3.3 Connecting Electrical Leads	3
4.0 Training	3
4.1 Training Requirements	3
4.2 Training Program	3
4.3 Operator Training.....	3
5.0 Operation	4
5.1 Operating Parameters	4
5.2 Numerical Values.....	4
5.2.1 Model 5q11	4
5.2.2 Physical	4
5.2.3 Hydraulic Pump	4
5.2.4 Electric Motor.....	5
5.2.5 Filters	5
5.2.6 Hand Pump (Option M)	5
5.3 Location & Layout Of Controls.....	6
5.3.1 Front Panel Controls	6
5.3.2 Electrical Control Panel.....	7
5.3.3 Hydraulic Control Panel	9
5.3.4 Rear Panel Controls.....	10
5.3.5 Hydraulic Pump Controls.....	11
5.3.6 Hand Pump Controls (Option M)	12
5.4 Start Up Procedures.....	13
5.4.1 Procedure For First Time Or Different Electrical Supply Only.....	13
5.4.2 Initial Start Up Of The HPU	13
5.5 Preliminary Adjustments For Operation	14
5.5.1 Flow Control Adjustment	14
5.5.2 Pressure Control Adjustment.....	14
5.5.3 Reservoir Selector Valve Operation.....	14
5.5.4 Bypass Valve Operation.....	15
5.6 Bleeding Air From System.....	15
5.6.1 To Easily Purge The Unit Of Air.....	15
5.7 Triple System Operation.....	15
5.7.1 To Operate The Triple System	16
5.8 Hand Pump Operation (Option M)	16
5.8.1 To Operate The Hand Pump	16
5.9 Sample Valve.....	16
5.10 Emergency Shut Down Procedure.....	16
5.11 Description Of Alarm Systems.....	17

Model: 5Q11
Hydraulic Power Unit

5.11.1	High Fluid Temperature Indicator	17
5.11.2	Voltage/Phase Monitor Indicator (Options G – J)	17
5.11.3	High And Low Reservoir Level Indicator (Option L).....	17
5.11.4	Clogged Filter Indicator Light.....	17
6.0	Packaging And Storage.....	18
6.1	Packaging Requirements	18
6.2	Handling	18
6.3	Packaging Protection	18
6.4	Labeling Of Packaging	18
6.5	Storage Compatibility	18
6.6	Storage Environment	18
6.7	Storage Space And Handling Facilities.....	18
7.0	Transportation.....	18
8.0	Trouble Shooting.....	19
8.1	HPU Will Not Start	19
8.2	No Flow	20
8.3	Reduced Flow	20
8.4	No Pressure Or Reduced Pressure	21
8.5	Fluid Overheats.....	21
8.6	Hand Pump (Option M) Is Not Pumping Fluid	21
9.0	Maintenance.....	22
9.1	General.....	22
9.2	Electric Motor.....	22
9.3	Hydraulic Pump.....	23
9.3.1	Hydraulic Pump Replacement Parts.....	23
9.4	Hydraulic Fluid.....	24
9.5	Filters.....	24
9.5.1	Pressure Filter Element.....	25
9.5.2	Return Filter Element	26
9.5.3	Hand Pump (Option M) Filter Element.....	27
9.5.4	Desiccant Air Filter.....	28
9.5.5	Pressure Filter Assembly With Electric Filter Clogging Indicator	28
9.5.6	Return Filter Assembly.....	30
9.6	Hydraulic Hoses.....	31
9.7	Instrument Panel.....	32
9.7.1	Electric Panel.....	33
9.7.2	Hydraulic Panel.....	34
9.7.3	Pressure Manifold Assembly	35
9.7.3.A	System Pressure Relief Valve	36
9.7.3.B	Check Valve	37
9.7.3.C	Bypass Valve.....	37
9.8	Reservoir Assembly	38
9.9	Return Manifold Assembly	40
9.9.1	Return System Pressure Relief Valve.....	41
9.10	Electrical Components	43
9.10.1	Electrical Components With 100 Ft. Input Cord Option	49
9.11	Heat Exchanger Assembly	52
9.12	External Components.....	53
9.13	Additional Features	54
9.13.1	50 Ft (15.2 M) Hoses (Option B).....	54
9.13.2	Triple System.....	55
9.13.3	Voltage/Phase Monitor (Options G – J)	56
9.13.4	Electric Reservoir Level (Option L)	57
9.13.5	Hand Pump (Option M)	58
9.13.5.A	Two Stage Pump With Relief.....	60
9.13.6	Towing Trailer (Option N).....	62
9.14	Replacement Labels Parts Lists	64
9.14.1	Base Unit.....	64
9.14.2	Fluid Labels	64
9.14.3	Filter Element Kit Labels	64



Model: 5Q11
Hydraulic Power Unit

9.14.4	Triple System.....	64
9.14.5	Hand Pump (Option M) Labels	65
10.0	Provision Of Spares.....	65
10.1	Source Of Spare Parts	65
10.2	Recommended Spare Parts Lists	65
10.2.1	Spare Electrical Parts.....	65
10.2.2	Spare Parts.....	65
11.0	Electrical Power Requirements	66
12.0	Calibration Of Instrumentation	66
12.1	Source Of Calibration.....	66
12.2	Analog Pressure Gauge – System Pressure.....	66
12.2.1	Self Calibration	66
12.3	Analog Pressure Gauge (Hand Pump Pressure- Option M Only)	68
12.3.1	Self Calibration	68
12.4	Analog Temperature Gauge (Pyrometer).....	68
12.4.1	Self Calibration	68
13.0	In Service Support.....	69
14.0	Guarantees/Limitation Of Liability	69
15.0	Appendices	69

Model: 5Q11
Hydraulic Power Unit

REVISION	DATE	TEXT AFFECTED
OR	04/2008	Original Release
02	08/2008	Modified Appendix II Hydraulic Schematic
03	10/2009	Modified 9.10 Electrical Components
04	02/2010	Added 9.10.1 Electrical Components with 100 ft. Input Cord Option
05	03/2010	Modified illustration for 5.3.5 Hydraulic Pump Controls and 9.2 Electric Motor, modified 9.3.1 Hydraulic Pump Replacement Parts

Model: 5Q11
Hydraulic Power Unit

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

Hydraulic Power Unit

Model Number: 5Q11	Fluid Type: MIL-PRF-5606
------------------------------------	------------------------------------

1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit.

1.3 MANUFACTURER

TRONAIR, Inc.
1740 Eber Road
Holland, Ohio 43528-9794 USA

Telephone: (419) 866-6301 or 800-426-6301
Fax: (419) 867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

1.4 FUNCTION

The Hydraulic Power Unit (HPU) provides a source of clean, pressurized hydraulic fluid for performing required aircraft maintenance. An electric motor drives a pressure compensated piston pump. Filters are provided on the pressure and return systems. A bypass (dump) valve allows starting and stopping of the unit under a no-load, safe condition. The unit may use either the aircraft or on-board HPU reservoir. Cooling is provided for continuous operation.

1.5 REQUIREMENTS

Adequate electrical power must be provided for proper functioning of the HPU. See the unit nameplate for proper voltage and frequency. See the Technical Manual for proper sizing of electrical supply and protection equipment in the facility.

2.0 SAFETY INFORMATION

2.1 USAGE AND SAFETY INFORMATION

The HPU provides pressurized hydraulic fluid for performing aircraft maintenance.

To insure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



WARNING! — Warning is used to indicate the presence of a hazard that **can cause severe personal injury, death, or substantial property damage** if the warning notice is ignored.

CAUTION! — Caution is used to indicate the presence of a hazard that **will or can cause minor personal injury or property damage** if the caution notice is ignored.

2.0 Safety information continued on following page.

TRONAIR

06/2010 – Rev. 05

- 1 -

**Model: 5Q11
Hydraulic Power Unit**

2.0 SAFETY INFORMATION *(continued)*

2.2 EXPLANATION OF WARNING & DANGER SIGNS



Accidental Starts! Before servicing the HPU or equipment, always disconnect electrical power supply to prevent accidental starting.



Rotating Parts! Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate the HPU with covers, shrouds, or guards removed.



Electrical Shock! Never touch electrical wires or components while the HPU is attached to the power source. They can be sources of electrical shock. DO NOT operate HPU with cabinet panels removed.



Pressurized Fluid! Before servicing the HPU or equipment, always open the bypass valve to relieve any residual pressure in the hydraulic system.

2.3 COMPONENT SAFETY FEATURES

- Pump/Motor coupling guard
- Sheet metal panels
- Pressure and return system relief valves
- Control circuit fuses
- Motor overload protection

2.4 FUNCTIONAL SAFETY FEATURES

- Emergency shut off switch
- Floor lock
- Calibration port shut off valve
- Fluid sample shut off valve

2.5 PERSONAL PROTECTION EQUIPMENT

- Safety glasses must be worn when operating the HPU.
- Additional equipment recommended by the fluid manufacturer (gloves, etc.). **Reference Appendix pertaining to Material Safety Data Sheet pertaining to fluid(s).**

2.6 SAFETY GUIDELINES

- Operator must be properly trained prior to operating the HPU.
- HPU power switch must be in "Off" position when connecting or disconnecting hoses to the aircraft.
- Bypass valve must be in the "Open" position when starting or stopping the HPU.
- Electrical power must be disconnected from the HPU and the bypass valve must be in the "Open" position before servicing the HPU. (Reference Technical Manual for details on servicing the HPU.)

2.7 GENERAL COMMENT

The HPU is intended to be operated by personnel trained in the proper use in conjunction with the aircraft maintenance manual.

2.8 GENERAL COMMENT

The HPU must be used in accordance with the Technical and Operator Manuals and the intended aircraft.

**Model: 5Q11
Hydraulic Power Unit**

3.0 PREPARATION PRIOR TO FIRST USE

3.1 GENERAL

Prior to operating the HPU, the user should become familiar with this Operator Manual.

3.2 SERVICING RESERVOIR

Fill the reservoir with the correct fluid (see label next to reservoir fill for correct type of fluid) until fluid level is above the minimum fluid level mark but below the maximum fluid level. **See Figure 5.3.1 Front Panel Controls** for reservoir fill location.

3.3 CONNECTING ELECTRICAL LEADS



Electrical Shock! Never touch electrical wires or components while electrical power is attached. Only qualified electricians should connect the electrical leads.

Install plug onto the electrical cord. If motor rotation is not correct, change any two of the three leads at the plug. **Reference 11.0 Electrical Power and Protection Requirements** for power requirements and fuse sizes. (See **5.4 Start up Procedures** before starting HPU.)



WARNING!

Balanced three phase voltage must be available to prevent overheating and damage to the motor.

Voltage unbalanced between phases occurs when the voltages differ from one another.

Some reasons for imbalance are:

- 1. Unequal loading of each phase**
- 2. Poor connections in the supply**
- 3. Single phase condition caused by blown fuses or bad connections**

If these conditions occur in the incoming power system, a protective device, such as a voltage monitor, should be installed on the machine to prevent motor damage.

4.0 TRAINING

4.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the HPU.

4.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the HPU in and around the intended aircraft at the intended aircraft servicing location.

4.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the HPU.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.

**Model: 5Q11
Hydraulic Power Unit**

5.0 OPERATION

5.1 OPERATING PARAMETERS

- The user shall use the HPU in accordance with the aircraft manufacturer's instructions.
- The user shall operate the HPU in accordance with the Technical and Operator Manuals.
- The employer of the operator shall provide all necessary training.

5.2 NUMERICAL VALUES

5.2.1 Model 5Q11
Fluid Type MIL-PRF-5606

5.2.2 Physical

- Weight (Dry): 3,150 lbs (1,430 kg)
- Dimensions: Width = 71.25 in (181 cm)
 Height = 59 in (149.9 cm)
 Depth = 78 in (198 cm)
- Power Cord: 50 ft (15.24 m) long
- Pressure Hoses: 25 ft (7.62 m)..... Standard Length
 50 ft (15.24 m)..... Optional Length
 -12 (3/4 in, 19 mm)..... Working Diameter
- Return Hoses: 25 ft (7.62 m)..... Standard Length
 50 ft (15.24 m)..... Optional Length
 -16 (1 in, 25.4 mm)..... Working Diameter
- Hand Pump Hose: 15 ft (4.57 m)..... Standard Length
 -6 (3/8 in, 9.53 mm)..... Working Diameter

5.2.3 Hydraulic Pump

- A pressure compensated, adjustable maximum volume piston pump.
- Maximum flow at 60 Hz 25 gpm (94.6 lpm)
- Maximum flow at 50 Hz 20 gpm (78 lpm)
- Maximum operating pressure at 50 Hz and 60 Hz..... 3,500 psi (241 bar)
- System pressure relief valve setting 3,750 psi (259 bar)
- Performance Curve for 50 Hz and 60 Hz Reference **Figure 5.2.3**

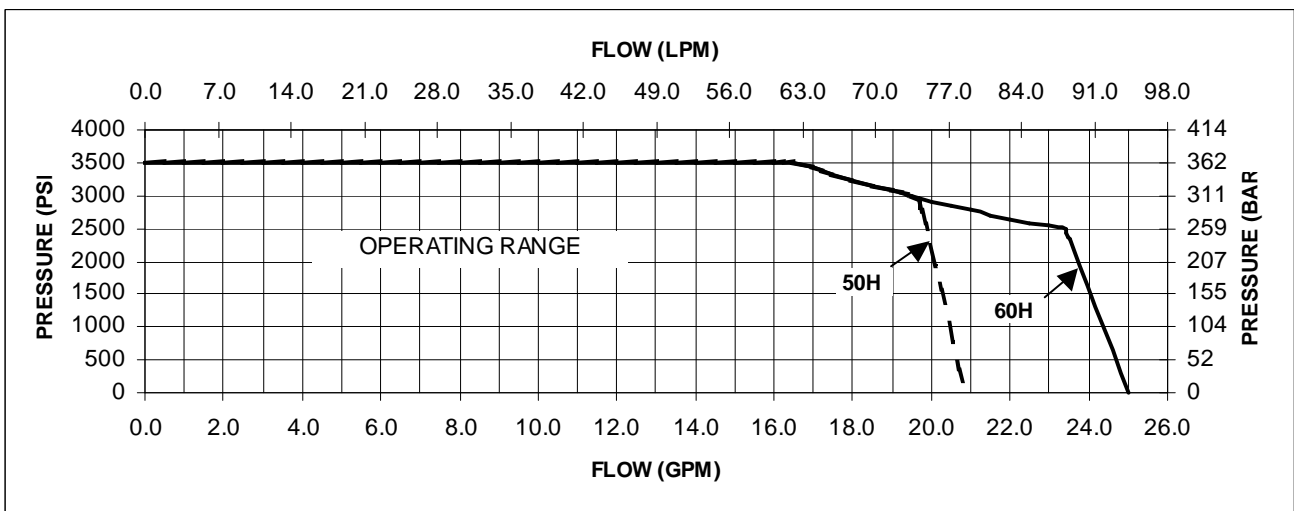


FIGURE 5.2.3 – Performance Curve (50 Hz and 60 Hz)

**Model: 5Q11
Hydraulic Power Unit**

5.2 NUMERICAL VALUES *(continued)*

5.2.4 Electric Motor

A 40 horsepower, TEFC electric motor is the prime mover for the HPU. This is attached to the hydraulic pump using a pump/motor adapter and a spider/coupling rotating interface.

MOTOR POWER REQUIREMENTS			
60 Hz Applications		50 Hz Applications	
Voltage	Full Load Amps	Voltage	Full Load Amps
208	117.2	200	120.5
230	106.0	220	103.0
380	57.0	380	62.0
460	53.0	415	60.0
575	42.0	440	56.0

FIGURE 5.2.4 –Motor Power Requirements

5.2.5 Filters

- Pressure 2 micron rating, non-bypass high collapse microglass type. Non-cleanable element.
- Return 5 micron rating, 25 psi (1.72 bars) bypass microglass type. Non-cleanable element.
- Hand Pump (*Option M*) 2 micron rating, non-bypass microglass type. Non-cleanable element.
- Air/Desiccant 3 micron filter, silica gel desiccant type. Non-cleanable element.

5.2.6 Hand Pump (*Option M*)

Two stage hand pump, low pressure stage 0–500 psi (0–34.47 bars) and 500–5,000 psi (34.47–344.74 bars) high pressure stage. Pump automatically changes stage internally based on system pressure.

Low Pressure Stage:	Piston Diameter 1½ in (38.1 mm)
	Working Pressure 0–500 psi (0–34.47 bar)
	Displacement/Stroke 2.1 in ³ (34.4 cm ³)
	Force/100 psi (6.89 bar) 12.0 lbs/100 psi (7.74 N/bar)
High Pressure Stage:	Piston Diameter 5/8 in (15.88 mm)
	Working Pressure 500–5000 psi (34.47–344.74 bar)
	Displacement/Stroke 0.4 in ³ (6.55 cm ³)
	Force/100 psi (6.89 bar) 2.2 lbs/100 psi (1.42 N/bar)
Pressure Relief Setting:	5,250 psi (362.0 bar)

5.0 Operation continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

5.0 OPERATION *(continued)*

5.3 LOCATION & LAYOUT OF CONTROLS

5.3.1 Front Panel Controls

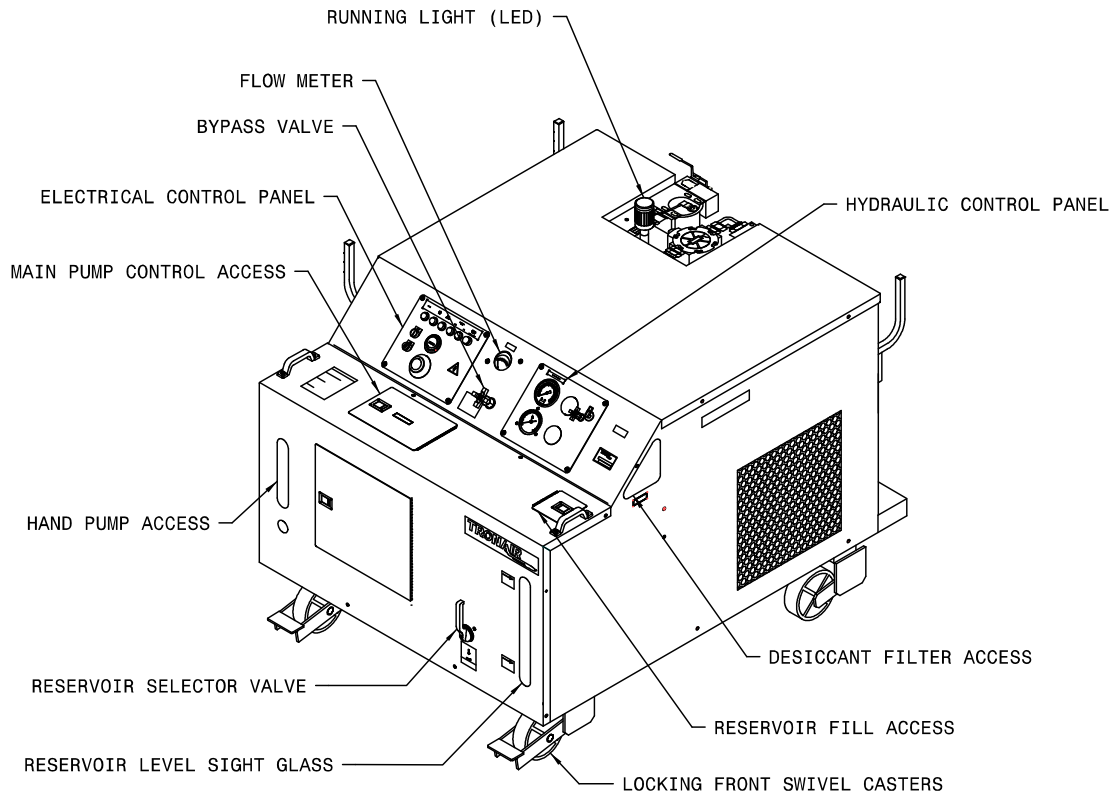


FIGURE 5.3.1 – Front Panel Controls

- Electrical Control Panel See Section 5.3.2
- Hydraulic Control Panel..... See Section 5.3.3
- Bypass Valve For loading and unloading the Hydraulic Pump.
- Flowmeter Displays the flow from the Hydraulic Pump.
- Pump Control Access..... See **Figure 5.3.5 - Hydraulic Pump Controls**.
- Reservoir Selector..... For selecting between using the aircraft reservoir or the HPU reservoir.
- Sight Gauge Visual indicator displays the fluid level in the reservoir.
- Reservoir Fill Access Locking cap for servicing the HPU reservoir.
- Desiccant Filter Access to the reservoir air filter/desiccant filter.
- Hand Pump (*Option M*)..... Access for hand pump and relief screw, handle stored inside.
- Locking Swivel Caster Locking/unlocking, foot actuated and released locking front caster.
- Running Light..... Displays green LED light when unit is running.

**Model: 5Q11
Hydraulic Power Unit**

5.3 LOCATION & LAYOUT OF CONTROLS *(continued)*

5.3.2 Electrical Control Panel

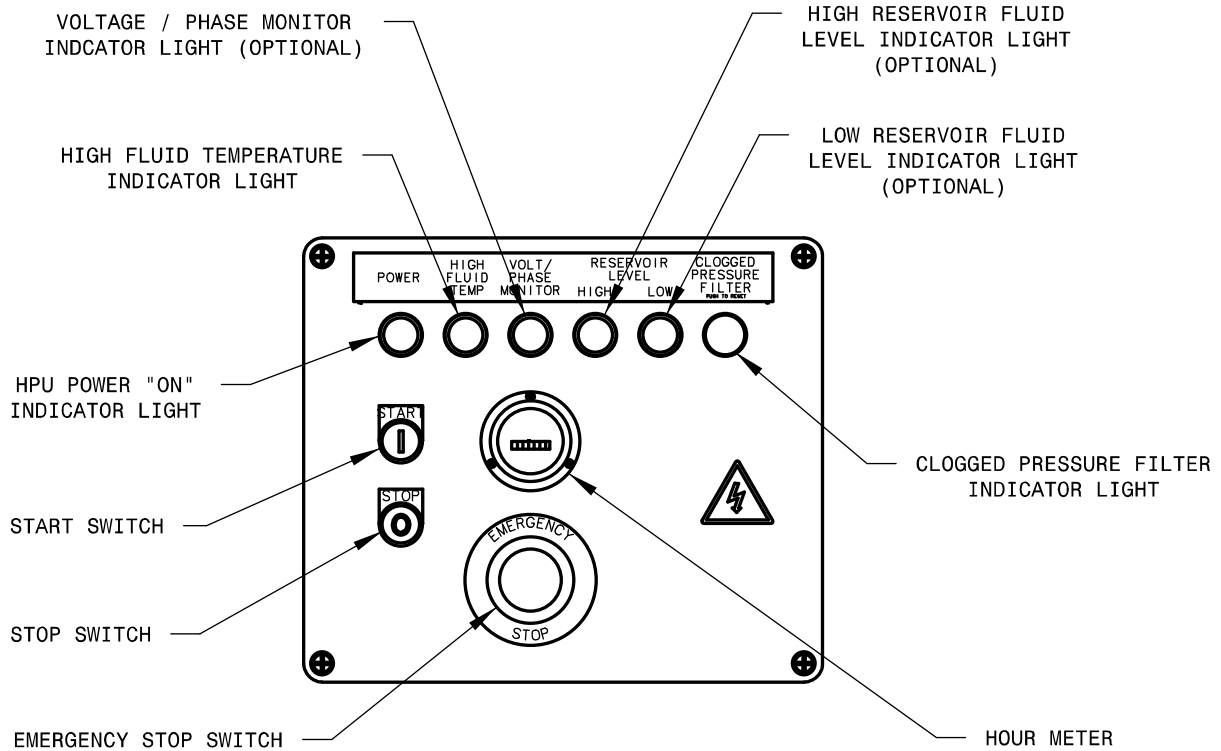


FIGURE 5.3.2 – Electrical Control Panel

- Emergency StopRemoves power to all electrical devices, must turn to reset.
- Stop SwitchTurns off the electric motors driving the hydraulic pump and cooling fan.
- Start SwitchTurns on the electric motors driving the hydraulic pump and cooling fan.
- HPU Power "On" Indicator Light.....Light is illuminated when the electric motors driving the hydraulic pump and cooling fan are on.
- High Fluid TemperatureLight is illuminated when the return fluid temperature reaches 160° F (71° C) or above. The HPU will shut down when light is illuminated. The HPU can be re-started when the fluid has cooled and the indicator light is off.
- High Reservoir Fluid LevelLight is illuminated when the fluid level in the reservoir is above the normal operating range. The HPU will shut down until the fluid level is restored to a normal operating level.

5.3.2 Electrical control panel continued on following page.

Model: 5Q11
Hydraulic Power Unit

5.3.2 Electrical Control Panel *(continued)*

- Low Reservoir Fluid Level.....Light is illuminated when the fluid level in the reservoir Indicator Light (*Option L*) is below the normal operating range. The HPU will shut down until the fluid level is restored to a normal operating level.

- Voltage/Phase Monitor.....Light is illuminated if any of the following conditions occur Indicator Light (*Options G – J*)
 - Voltage imbalance between L1, L2, L3, greater than 5%
 - Loss of voltage from L1, L2, L3
 - Over voltage from L1, L2, L3, greater than 5%
 - Change in phase orientation between L1, L2, L3. The HPU will shut down until the electrical problem is corrected.

- Clogged Pressure FilterLight is illuminated when the pressure filter element requires Indicator changing. The HPU will not shut down when illuminated. Pressing the illuminated button will reset the light.

**Model: 5Q11
Hydraulic Power Unit**

5.3 LOCATION & LAYOUT OF CONTROLS *(continued)*

5.3.3 Hydraulic Control Panel

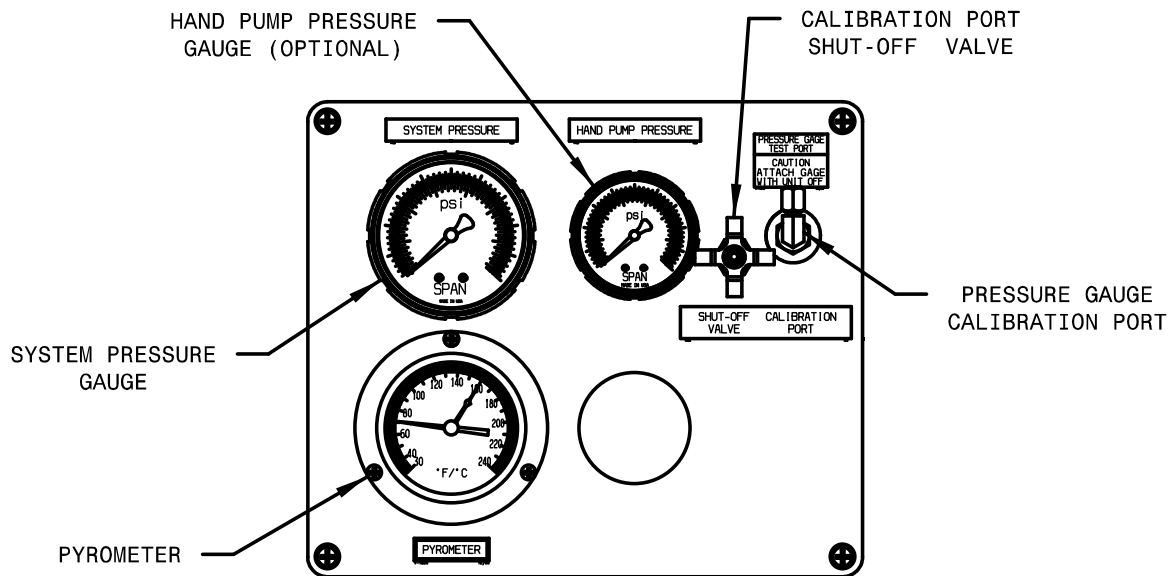


FIGURE 5.3.3 – Hydraulic Control Panel

- System Pressure GaugeDisplays the system pressure on an analog fluid dampened gauge.
- Pyrometer.....Displays the fluid temperature in the return system on an analog gauge. A warning indicator preset to 160° F (71° C) warns of high operating temperature.
- Pressure Gauge Calibration.....Allows for calibration of the system pressure gauge up to the operating pressure of HPU. Calibration port shut off valve must be used in conjunction with the calibration port.
- Calibration Port Shut Off ValveUsed to shut off pressure to the calibration port. This valve should only be opened when the external standard gage is attached. (See Technical Manual for proper procedure.)
- Hand Pump Pressure GaugeDisplays the hand pump system pressure on an analog fluid dampened gauge. (Option M)

5.3 Location & Layout of Controls continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

5.3 LOCATION & LAYOUT OF CONTROLS *(continued)*

5.3.4 Rear Panel Controls

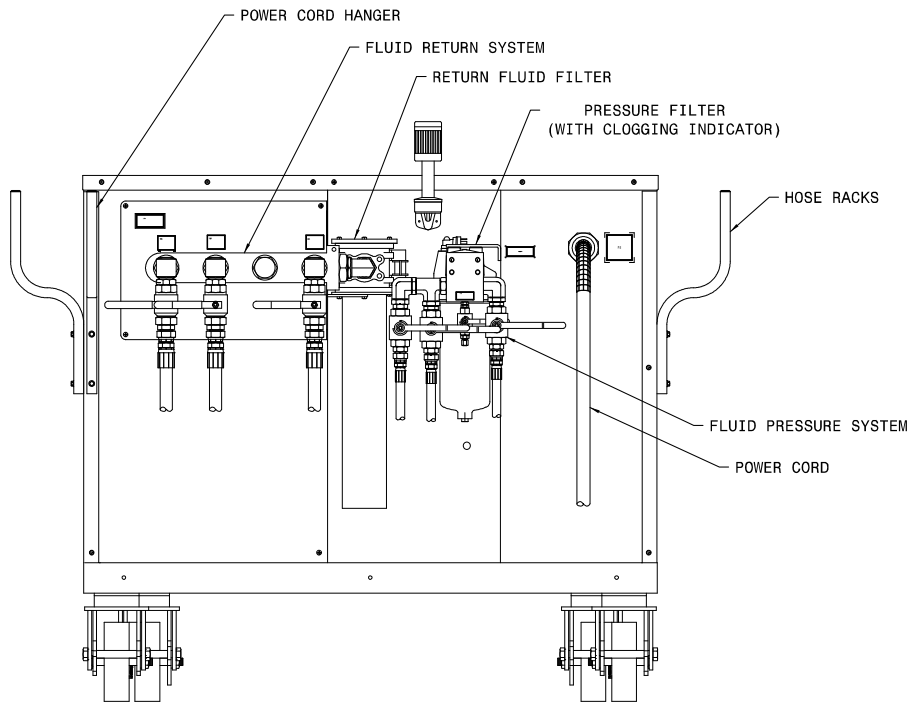


FIGURE 5.3.4 – Rear Panel Controls

- * Fluid Pressure System.....The source of pressurized fluid from the HPU that flows to the aircraft pressure system through the pressure hose.
- * Fluid Return SystemFluid returning to the HPU from the aircraft that flows through the return hoses.
- Pressure Fluid FilterFilters the pressurized fluid before it flows to the aircraft pressure system.
- Return Fluid FilterFilters the fluid returning from the aircraft before it enters the HPU.
- Pressurized Fluid Sample PortA sample valve is provided to obtain a fluid sample for analysis. In order to obtain a representative sample, it is suggested that ANSI/B93.19M-1972 (R1993) be followed.
- Hand Pump Pressure FilterFilters the pressurized fluid before it flows to the aircraft system. *(Option M)*
- Hose RacksLocation for storing the pressure, return and optional hand pump hoses when not in use.
- Power Cord HangerLocation for storing the power cord when not in use.

**Model: 5Q11
Hydraulic Power Unit**

5.3 LOCATION & LAYOUT OF CONTROLS *(continued)*

5.3.5 Hydraulic Pump Controls

The hydraulic pump flow control and pressure control are located through the pump control access door.

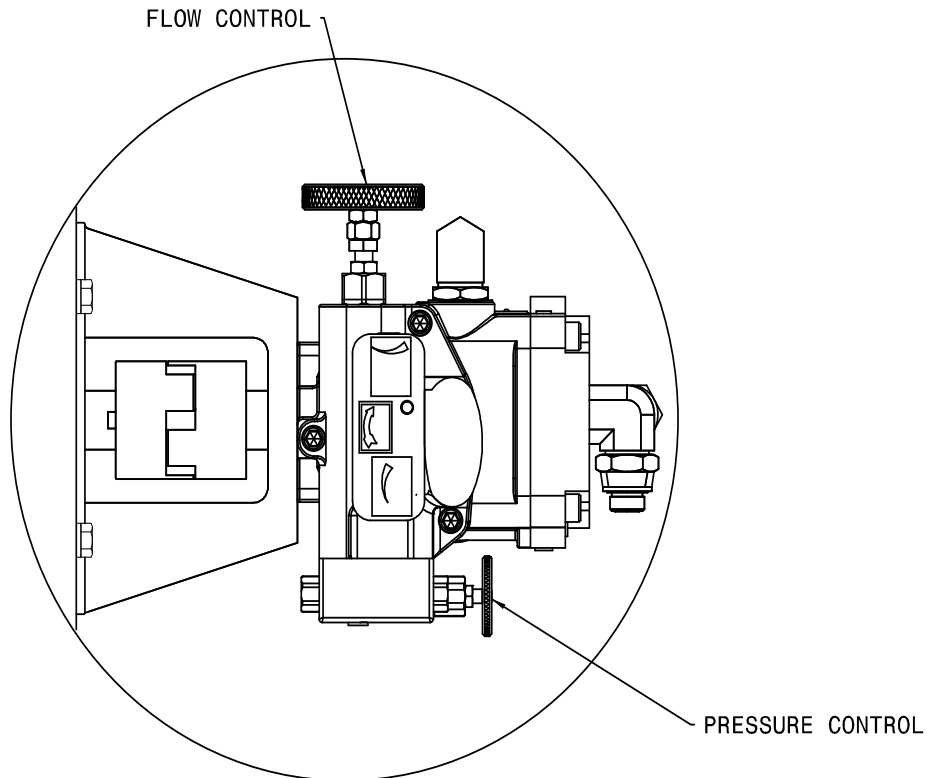


FIGURE 5.3.5 – Hydraulic Pump Controls

- Flow ControlThis control is used to set the maximum flow required from the HPU.
- Pressure Control.....The pressure control is used to set the system pressure of the HPU during operation.

5.3 Location & Layout of Controls continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

5.3 LOCATION & LAYOUT OF CONTROLS *(continued)*

5.3.6 Hand Pump Controls *(Option M)*

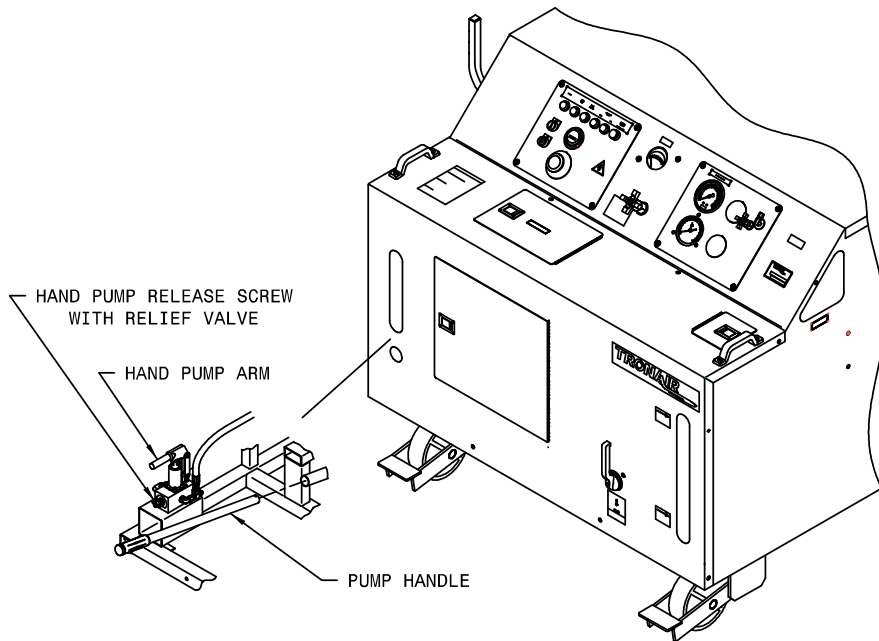


FIGURE 5.3.6 – Hand Pump Controls

Reference 5.8 Hand Pump Operation.

- Pump Handle.....Located inside the front access door is the hand pump handle used for opening and closing the hand pump relief screw and stroking the hand pump arm.
- Hand Pump Relief Screw.....Accessed through the front panel opening, this screw allows opening and closing of the hand pump hydraulic circuit using the hand pump handle.
- Hand Pump Arm.....The handle is used to access the hand pump arm used for up and down motion to produce hydraulic flow and pressure.

**Model: 5Q11
Hydraulic Power Unit**

5.0 OPERATION (continued)

5.4 START UP PROCEDURES

5.4.1 Procedure for First Time or Different Electrical Supply ONLY

Phase Monitor (Options G – J Only): Check that the phase monitor light on the instrument panel is not illuminated. If the light is illuminated, change any two of the three input leads at the plug. Once the phase monitor light is not illuminated with power attached, check for proper motor rotation.

- a. Remove the pump/motor coupling guard. Reference **Figure 5.4.1 – Pump/Motor Coupling Access**.




Rotating Parts! Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate the HPU with covers, shrouds, or guards removed.



Electrical Shock! Never touch electrical wires or components while the HPU is attached to the power source. They can be sources of electrical shock.

Do not operate HPU with cabinet panels removed.

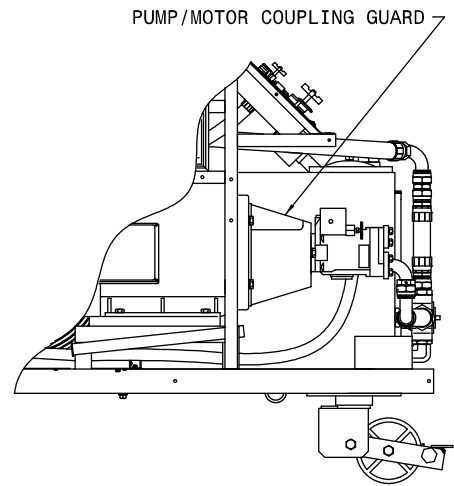

**FIGURE 5.4.1
Pump/Motor Coupling Access**

- b. Verify that the unit has been prepared for use by connecting electrical leads and servicing the reservoir. (Reference section 3.0 *Preparation Prior to First Use*.)
- c. Keeping hands clear of the pump/motor coupling area, momentarily press the start button and immediately press the stop button.
- d. Observe direction of rotation of the pump/motor coupling. When the Operator is facing the front panel, the pump/motor coupling should be rotating in a clockwise direction.
- e. If the pump/motor coupling is rotating in a counter-clockwise direction, change any two of the three leads at the plug. Observe direction of rotation to verify that pump/motor is rotating in a clockwise direction.
- f. Replace the pump/motor coupling guard.

5.4.2 Initial Start Up of the HPU

- a. Unit must be prepared per section 3.0 *Preparation Prior to First Use* and section 5.4.1 *First Time or Different Electrical Supply ONLY* before starting the HPU.
- b. Operator must be familiar with this manual and be properly trained prior to starting the HPU.
- c. Connect quick disconnects to hose ends or cap the pressure and return hose ends.
- d. Place the reservoir selector valve in "HPU Reservoir" position.
- e. Place the bypass valve in the "Open" position.
- f. Press the start switch and adjust the flow control until approximately 10 gpm (38 lpm) is displayed on the flowmeter. (If no flow displays on the flowmeter after adjusting the flow control, reference *Trouble Shooting 8.2 No Flow*).
- g. Close the bypass valve, adjust the pressure control until 3,000 psi (206.84 bar) is displayed on the pressure gauge. (If no pressure displays on the system pressure gauge after adjusting the pressure control, reference *Trouble Shooting 8.4 No Pressure or Reduced Pressure*).
- h. Open the bypass valve; press the stop switch.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.

5.0 Operation continued on following page.

TRONAIR

06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

5.0 OPERATION *(continued)*

5.5 PRELIMINARY ADJUSTMENTS FOR OPERATION

The following are basic to the operation of the HPU and should be thoroughly understood. The pressure and flow controls have lock nuts to prevent rotation of the control shaft during operation. These nuts should be moved away from the pump during adjustment of flow or pressure in order to eliminate binding of the control shafts.

5.5.1 Flow Control Adjustment

- a. Open bypass valve.
- b. Select "Hydraulic Power Unit" position with reservoir selector valve.
- c. Start HPU.
- d. Adjust flow control on pump for maximum desired flow. Observing the flowmeter, read flow in gallons (liters) per minute directly from flowmeter. Be sure the control shaft lock nut is loose during adjustment. Tighten after adjustment to maintain setting.

5.5.2 Pressure Control Adjustment

- a. Open bypass valve.
- b. Select "Hydraulic Power Unit" position with reservoir selector valve.
- c. Start HPU.
- d. Close bypass valve.
- e. Adjust pressure control for desired pressure; observing the system pressure gauge, read in psi (bars). Be sure the control shaft lock nut is loose during adjustment. Tighten after adjustment to maintain setting.

NOTE: *Once the flow and pressure controls have been adjusted, it is not necessary to change these settings after each operation unless desired.*

5.5.3 Reservoir Selector Valve Operation

Operation of the reservoir selector valve allows the operator to select either the aircraft reservoir (closed loop) or the HPU reservoir (open loop).

CAUTION!



The reservoir selector valve should only be operated when the HPU is not running. The operation of the reservoir selector valve should be done prior to starting the HPU.

- a. Aircraft Reservoir Position (Closed Loop)
In this position, the HPU is dependent on the aircraft reservoir and system for an adequate supply of fluid. Cavitation, due to an inadequate fluid supply from the aircraft, may be indicated by erratic fluctuation of the system pressure gauge or flowmeter. At times, the aircraft fluid supply will be restricted due to small return oil lines in the aircraft. If this is a problem, decrease the flow control setting until the cavitation is eliminated.
- b. HPU Reservoir Position (Open Loop)
In this position, the HPU reservoir supplies fluid to the pump and accepts return fluid from the aircraft. It is desirable to operate the HPU in this mode since it eliminates any possibility of cavitation.
Since the HPU reservoir is vented to atmosphere and the aircraft is at a higher level, it is normal for the aircraft reservoir to drain into the HPU reservoir. It is, therefore, necessary to be sure that sufficient room is available in the HPU reservoir to accommodate the additional fluid.



CAUTION!

The aircraft system reservoir must be serviced after completion of operational testing.

In the "HPU Reservoir" position, faster landing gear swings are usually possible since there is no restriction to flow at the pump inlet.

TRONAIR

06/2010 – Rev. 05

- 14 -

**Model: 5Q11
Hydraulic Power Unit**

5.5 PRELIMINARY ADJUSTMENTS FOR OPERATION (*continued*)

5.5.4 Bypass Valve Operation

The bypass valve is used for unloading the pump. The valve should be either in the fully open or fully closed position only. Do not operate the valve in a partially open position.

a. Start Up Operation

The bypass valve must be opened prior to starting the HPU in order to allow the motor to start under a no load condition and not pressurize the aircraft hydraulic system.

b. Shut Down Operation

Prior to shutdown, the bypass valve must be opened to bleed off any residual system pressure.

CAUTION!



Excessive heat, which could damage machine components, will be generated if the bypass valve is partially open or is used for regulating flow or pressure.

- Use the flow and pressure controls for regulation.
- Use the bypass valve for unloading the system only.

5.6 BLEEDING AIR FROM SYSTEM

Rapid fluctuations of the pressure gage and flow-meter are indications of cavitation or entrapped air in the hydraulic lines and/or components. Air may enter the system when:

- Operating the unit with insufficient oil in the reservoir.
- Changing a component on the aircraft.
- Changing hose connections and/or couplings.

5.6.1 To Easily Purge the Unit of Air

- a. Fill reservoir to recommended level.
- b. Open bypass valve.
- c. Place reservoir selector valve in "Hydraulic Power Unit" position.
- d. Start unit and adjust flow control to maximum position.

NOTE: If fluid is not flowing, shut off HPU and reference 8.2 No Flow in Trouble Shooting section of Technical Manual

- e. Run unit for five (5) minutes and shut off.
- f. If additional bleeding is required, connect the pressure and return hoses together and open all pressure and return ball valves at the rear of the HPU. Start the HPU and slowly close the bypass valve (**system pressure should remain under 200 psi (approximately 14 bars)**). Allow fluid to flow at full flow for five (5) minutes, then shut the HPU off.



WARNING!

Failure to open the return ball valves will cause hose or valve rupture. Property damage and personal injury can result.

5.7 TRIPLE SYSTEM OPERATION

The triple system option allows control of fluid flow to aircraft with two hydraulic systems. The systems consist of two sets of hoses and valves located in the pressure and return systems. The valves are mounted on the rear of the hydraulic power unit and are of the 90o ball type. The valves are open when the operating handle is in line with the valve.

Although both systems may be operated simultaneously, usually only one system is required at any one time. If both valve sets are open simultaneously, the pump output will be divided between the two systems. Also, cross flow between aircraft reservoirs may occur if a reservoir level or pressure differential exists. Select valve positions prior to starting machine.

5.7 Triple system operation continued on following page.

TRONAIR

06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

5.7 TRIPLE SYSTEM OPERATION (*continued*)

5.7.1 To Operate the Triple System

- a. Before starting machine, open pressure and return valves of the same system.



WARNING!

Ensure pressure and return hoses of the same system are paired and used together.

- b. After completing tests on one system, shut the machine off before selecting the second system.

WARNING!



NEVER open or close triple system valves without shutting off the Hydraulic Power Unit. Damage to the aircraft system or reservoir may result if either return line valve is closed while the machine is running.

5.8 HAND PUMP OPERATION (*Option M*)

The Hand Pump Option allows for filling the reservoir (low pressure) or static testing of components or system (high pressure). The hand pump circuit is separate from the main hydraulic system; a separate filter and hose are attached to the back panel of the HPU.

5.8.1 To Operate the Hand Pump

- a. Remove the pump handle from inside the front access door. (Reference **Figure 5.3.6 – Hand Pump Controls**)
- b. Insert the end of the pump handle through the front panel opening into the hand pump relief screw.
- c. Turn the pump handle clockwise to close the relief screw.
- d. Insert the pump handle onto the hand pump arm through the front panel slot.
- e. Pump the handle using an up and down motion. Observe the hand pump system pressure on the hydraulic control panel (**Figure 5.3.3 Hydraulic Control Panel**). The pump is an automatic two stage pump. 500 psi (34.47 bars) can be produced with high fluid flow and 5,000 psi (344.74 bars) can be produced with low fluid flow.
- f. Turning the relief screw in a counter-clockwise direction releases hydraulic pressure in the hand pump system.



Pressurized Fluid! Before disconnecting the hand pump pressure hose, ALWAYS open the relief screw valve to relieve any residual pressure in the hydraulic system.

5.9 SAMPLE VALVE

A sample valve is provided on the rear of the unit to obtain a fluid sample for analysis or inspection.

In order to obtain a representative fluid sample, it is suggested that ANSI/B93.19M-1972 (R1993) be followed. Reference Appendix.



Pressurized Fluid! Before servicing the HPU or equipment, ALWAYS open the bypass valve to relieve any residual pressure in the hydraulic system.

5.10 EMERGENCY SHUT DOWN PROCEDURE

In the event an emergency shut down is necessary, press the emergency stop switch located on the electrical panel. (Reference Figure 5.3.2 – Electrical Control Panel) Open the bypass valve to remove any system pressure.

**Model: 5Q11
Hydraulic Power Unit**

5.0 OPERATION *(continued)*

5.11 DESCRIPTION OF ALARM SYSTEMS

Reference **Figure 5.3.2 – Electrical Control Panel.**

5.11.1 High Fluid Temperature Indicator

The indicator light for high fluid temperature is an active light which will illuminate when the return fluid temperature is 160° F (71° C) or above. The HPU will shut down if the light is illuminated. The HPU can be re-started when the fluid has cooled sufficiently and the light has shut off.

If the high temperature light is illuminated reference section **8.0 Trouble Shooting.**

5.11.2 Voltage/Phase Monitor Indicator *(Options G – J)*

The indicator light for the voltage/phase monitor is an active light which will illuminate if there is a problem with the incoming electrical power source. The HPU will shut down if the light is illuminated.

If the voltage/phase monitor light is illuminated, reference section 8.0 Trouble Shooting.

5.11.3 High and Low Reservoir Level Indicator *(Option L)*

The indicator lights for high and low reservoir level are active lights which will illuminate when the reservoir fluid level is either above the maximum level or below the minimum level. The HPU will shut down if either of the lights are illuminated.

If the light on either of the reservoir level indicator lights, restore the fluid level in the reservoir to a normal operating range.

5.11.4 Clogged Filter Indicator Light

The indicator light for the clogged filter is a passive light which will illuminate if the pressure filter element becomes clogged or is in need of replacement. The HPU will not shut down if the light is illuminated.

If the clogged filter indicator light is illuminated, the pressure filter element requires changing. Reference section 9.13.11 Electric Filter Clogging Indicator (Option R) for maintenance procedure. Pressing the clogging filter indicator light will reset the light and the light will turn off.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.

**Model: 5Q11
Hydraulic Power Unit**

6.0 PACKAGING AND STORAGE

6.1 PACKAGING REQUIREMENTS

- a. Drain hydraulic fluid until level is below the minimum fluid level indicator.
- b. Block up the unit on a pallet so the wheels are not touching the pallet or shipping container.
- c. Plug all hose ends.
- d. Strap unit to pallet or shipping container using the tie down rings located on the frame bottom.

NOTE: Use at least four (4) straps with a minimum 4,000 lb (1,814 kg) capacity each.

6.2 HANDLING

The unit is designed to be moved by hand using the handles located on the front of the unit. The unit can be lifted by means of a fork truck from the center of the machine. Lifting must be from the motor side of the unit only.

NOTE: Be sure the forks are long enough to reach the frame cross members for stability during lifting. Spread the forks to their maximum width for stability. Reference Figure 7.0 – HPU on Forklift.

6.3 PACKAGING PROTECTION

No special packaging material for cushioning or suspension is required.

6.4 LABELING OF PACKAGING

Packaging should be labeled as follows:

**DO NOT DROP
THIS SIDE UP
DO NOT STACK**



6.5 STORAGE COMPATIBILITY

No special considerations for short term storage (less than three months).

6.6 STORAGE ENVIRONMENT

Cover HPU with a suitable, non-abrasive tarp if storing outside. For storage periods greater than three months, drain hydraulic fluid from all hoses and the reservoir. Cover unit to protect outside surface.

If storing outside, protect unit from freezing water, sand, dirt, and direct sunlight. A cover is highly recommended.

6.7 STORAGE SPACE AND HANDLING FACILITIES

- Weight (Dry): 3,150 lbs (1,430 kg)
- Dimensions: Width: 71.25 in (181 cm)
Height: 59 in (149.9 cm)
Depth: 78 in (198 cm)

7.0 TRANSPORTATION

1. Do not stack Hydraulic Power Units.
2. The unit can be lifted by means of a fork truck from the motor side center of the HPU.

NOTE: Be sure the forks are long enough to reach frame cross members for stability during lifting. Spread the forks to their maximum width for stability. Reference Figure 7.0 – HPU on Forklift.

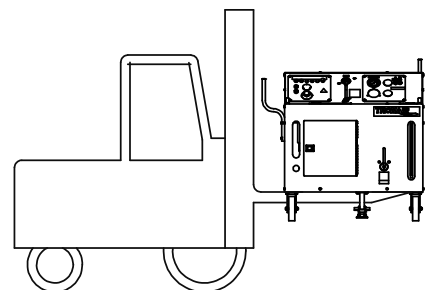


FIGURE 7.0 – HPU on Forklift

**Model: 5Q11
Hydraulic Power Unit**

8.0 TROUBLE SHOOTING

The following is a guide to solutions of common problems associated with the HPU. See related Appendix for Hydraulic and Electrical Schematics.

If the problem is not resolved using the trouble shooting information, call the manufacturer for Technical Assistance (See Section **1.3 Manufacturer**).

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained Technician.

8.1 HPU WILL NOT START

Possible Cause	Solution
Supply power off	Check incoming power and restore power. Check across-the-line voltage on all three phase legs.
Supply power fuses are blown/.....	Check and replace. Check across-the-line voltage
Circuit breakers tripped	on all three phase legs.
Control Transformer fuses blown.....	Check and replace.
Supply power phase or voltage incorrect	Voltage/Phase Monitor Indicator light will be illuminated. Refer to Section 3.3 Connecting Electrical Leads .
<i>(Phase/Voltage Monitor Option G – J only)</i>	
Reservoir fluid level is too high or too low	One reservoir level indicator light (Low or High) will be illuminated. Fill the reservoir above the Minimum Fluid Level arrow to extinguish the Low Level light. Drain fluid below the Maximum Fluid Level arrow to extinguish the High Level light.
<i>(Electric Reservoir Level Option L only)</i>	
High return fluid temperature	High Fluid Temperature indicator light will be illuminated. Allow the hydraulic fluid to cool until the light goes out. Refer to <i>Section 8.5 for Over-heated Causes</i> .
Motor has tripped thermal overload device	Allow the motor to cool. The thermal overload device (motor starter) will reset automatically after sufficient cooling. The tripped condition is usually caused by loading the motor beyond its rated capacity, however, any condition (such as unbalanced voltage) that causes an increase in amperage can result in a tripped condition.

NOTE: Using the bypass valve to meter flow or pressure will increase the motor load and may cause the thermal overload device to trip. Refer to section 5.5.4 Bypass Valve Operation for proper use of the bypass valve.

8.0 Trouble shooting continued on following page.



**Model: 5Q11
Hydraulic Power Unit**

8.0 TROUBLE SHOOTING *(continued)*

8.2 NO FLOW

Possible Cause	Solution
Motor turning in wrong direction	See Section 3.3 Connecting Electrical Leads .
Flow control set too low	Increase flow setting.
Fluid level in reservoir too low	Service the HPU reservoir.
Air in pump inlet lines	Disconnect the HPU from the aircraft. Fill the HPU reservoir to a level above the pump inlet port. Set the reservoir selector valve to the HPU Reservoir position. Fully open the Bypass Valve. Close the Pressure and Return ball valves at the rear of the unit. Adjust the pump flow to maximum and "bump" the start and stop switches to "jog" the motor. Flow should be indicated at the Flowmeter on first or second "jog".

NOTE: Under some conditions where a large amount of air has entered the system, the pump may not be able to draw an initial prime. If this occurs, loosen the inlet hose near the pump and allow air to escape. Re-tighten the hose when fluid appears.

Motor is turning but pump is not	Check pump and motor couplings to ensure they are tight.
Flow path does not exist.....	A flow path (such as a moving actuator or an open circuit) must exist for flow to be present. When system pressure exceeds the compensator control setting, or when the system no longer requires flow, the control de-strokes the pump while maintaining the preset pressure.

8.3 REDUCED FLOW

Possible Cause	Solution
Flow control is set too low	Increase flow setting.
Pressure adjustment is set too low	Slightly increase pressure setting.
Pressure compensator control is	When system pressure exceeds the compensator control setting, or when the system no longer requires flow, the control de-strokes the pump while maintaining the preset pressure.
Pump inlet is not receiving enough	Follow the procedure for "Air in pump inlet lines" in Section 8.2.
Motor is "Single Phasing"	Motor is not getting power on all three phase legs. Check across-the-line voltage on all three phase legs.
Supply voltage is 50 Hz.....	Pumps used on 50 Hz units will flow at only 83% of the pump nameplate rating. An HPU designed to run on 50 Hz will supply flow as stated in the specifications for that unit.

**Model: 5Q11
Hydraulic Power Unit**

8.0 TROUBLE SHOOTING *(continued)*

8.4 NO PRESSURE or REDUCED PRESSURE

Possible Cause	Solution
Pressure adjustment is set too low	Increase pressure adjustment.
Motor is "Single Phasing"	Motor is not getting power on all three phase legs. Check across-the-line voltage on all three phase legs.
Pump inlet is not receiving enough fluid (cavitation)	Follow the procedure for "Air in pump inlet lines" in section 8.2.
Flow path is open.....	Pressure is resistance to flow. The HPU will reach full pressure as flow paths (such as moving actuators and open valves) are closed.

8.5 FLUID OVERHEATS

Possible Cause	Solution
Fan is not functioning properly.....	Check the cooler fan output. Forced air should be easily detected at the right hand side of the HPU. Check the fuses for the fan motor (See Appendix Electrical Schematic INS-1725).
Bypass valve or rear ball valve is being used in a partially closed position	The bypass valve and all ball valves must be used in a fully open or fully closed position. These valves are not intended for metering flow. All flow adjustments must be made using the pump flow control.

8.6 HAND PUMP (Option M) IS NOT PUMPING FLUID

Possible Cause	Solution
Release screw is open	Use the slotted end of the pump handle to close the release screw located at the base of the pump.
Ball valve is closed.....	Open the ball valve for the pump inlet line located at the bottom of the reservoir.
Pump piston is filled with air	If the pump is not primed after several strokes, remove the bleed screw from the top of the pump piston (see section 9.13.9.a – <i>Pump Diagram</i>). Slowly stroke the pump until fluid is present at the bleed screw. Replace the bleed screw.

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE

9.1 GENERAL

Periodically inspect the HPU for loose fasteners, hose fittings, damaged hoses, and worn electrical cables. Make repairs as needed for safe operation.

Reference Sections **9.2 – 9.14** for Parts Lists, Descriptions and Illustrations.

9.2 ELECTRIC MOTOR

The Electric Motor is pre-greased by the manufacturer. Periodic greasing is necessary on a frequently used HPU. **Reference Appendix – Lincoln Motor Manual** for details.

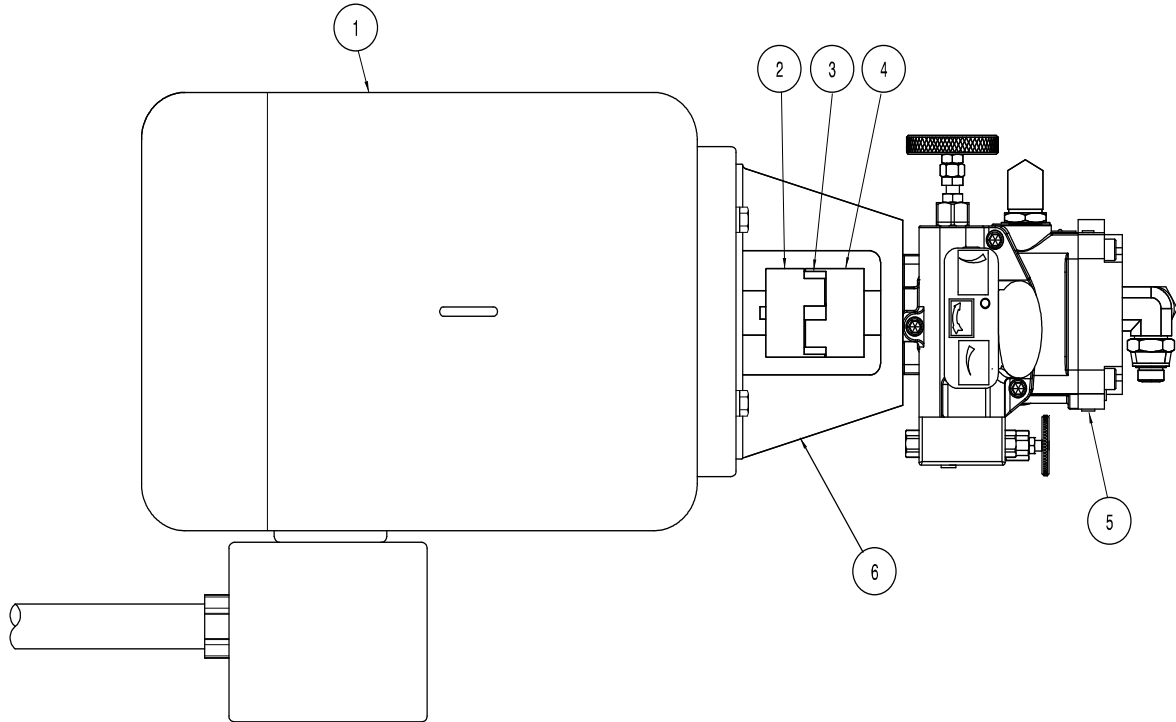


FIGURE 9.2 – Electric Motor/Hydraulic Pump Assembly

PARTS LIST

Item	Part Number	Description	Qty																										
1	Reference following:	Electric Motor	1																										
<table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <p style="text-align: center;">60 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>208</td> <td>EC-1224-05</td> </tr> <tr> <td>230</td> <td>EC-1224-05</td> </tr> <tr> <td>380</td> <td>EC-1224-04</td> </tr> <tr> <td>460</td> <td>EC-1224-05</td> </tr> <tr> <td>575</td> <td>EC-1224-06</td> </tr> </table> </td> <td style="width: 50%; vertical-align: top;"> <p style="text-align: center;">50 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>200</td> <td>EC-1555-15</td> </tr> <tr> <td>220</td> <td>EC-1555-14</td> </tr> <tr> <td>380</td> <td>EC-1224-05</td> </tr> <tr> <td>415</td> <td>EC-1224-05</td> </tr> <tr> <td>440</td> <td>EC-1555-13</td> </tr> </table> </td> </tr> </table>				<p style="text-align: center;">60 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>208</td> <td>EC-1224-05</td> </tr> <tr> <td>230</td> <td>EC-1224-05</td> </tr> <tr> <td>380</td> <td>EC-1224-04</td> </tr> <tr> <td>460</td> <td>EC-1224-05</td> </tr> <tr> <td>575</td> <td>EC-1224-06</td> </tr> </table>	Voltage	Part Number	208	EC-1224-05	230	EC-1224-05	380	EC-1224-04	460	EC-1224-05	575	EC-1224-06	<p style="text-align: center;">50 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>200</td> <td>EC-1555-15</td> </tr> <tr> <td>220</td> <td>EC-1555-14</td> </tr> <tr> <td>380</td> <td>EC-1224-05</td> </tr> <tr> <td>415</td> <td>EC-1224-05</td> </tr> <tr> <td>440</td> <td>EC-1555-13</td> </tr> </table>	Voltage	Part Number	200	EC-1555-15	220	EC-1555-14	380	EC-1224-05	415	EC-1224-05	440	EC-1555-13
<p style="text-align: center;">60 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>208</td> <td>EC-1224-05</td> </tr> <tr> <td>230</td> <td>EC-1224-05</td> </tr> <tr> <td>380</td> <td>EC-1224-04</td> </tr> <tr> <td>460</td> <td>EC-1224-05</td> </tr> <tr> <td>575</td> <td>EC-1224-06</td> </tr> </table>	Voltage	Part Number	208	EC-1224-05	230	EC-1224-05	380	EC-1224-04	460	EC-1224-05	575	EC-1224-06	<p style="text-align: center;">50 Hz Applications</p> <table style="width: 100%; border: none;"> <tr> <th style="text-align: left;">Voltage</th> <th style="text-align: left;">Part Number</th> </tr> <tr> <td>200</td> <td>EC-1555-15</td> </tr> <tr> <td>220</td> <td>EC-1555-14</td> </tr> <tr> <td>380</td> <td>EC-1224-05</td> </tr> <tr> <td>415</td> <td>EC-1224-05</td> </tr> <tr> <td>440</td> <td>EC-1555-13</td> </tr> </table>	Voltage	Part Number	200	EC-1555-15	220	EC-1555-14	380	EC-1224-05	415	EC-1224-05	440	EC-1555-13				
Voltage	Part Number																												
208	EC-1224-05																												
230	EC-1224-05																												
380	EC-1224-04																												
460	EC-1224-05																												
575	EC-1224-06																												
Voltage	Part Number																												
200	EC-1555-15																												
220	EC-1555-14																												
380	EC-1224-05																												
415	EC-1224-05																												
440	EC-1555-13																												
2	H-2226-03	Coupling (Motor Half)	1																										
3	H-2229	Spider (Hytrel)	1																										
4	H-2226-14	Coupling (Pump Half)	1																										
5	Reference 9.3 and 9.3.1	Hydraulic Pump	1																										
6	HC-1427-02	Pump/Motor Adapter	1																										

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.3 HYDRAULIC PUMP

The hydraulic pump does not require regular maintenance. Under normal operating conditions, the pump will perform for thousands of hours of use without rebuilding. See **Appendix – Oilgear Pump Manual** for further details.

9.3.1 Hydraulic Pump Replacement Parts

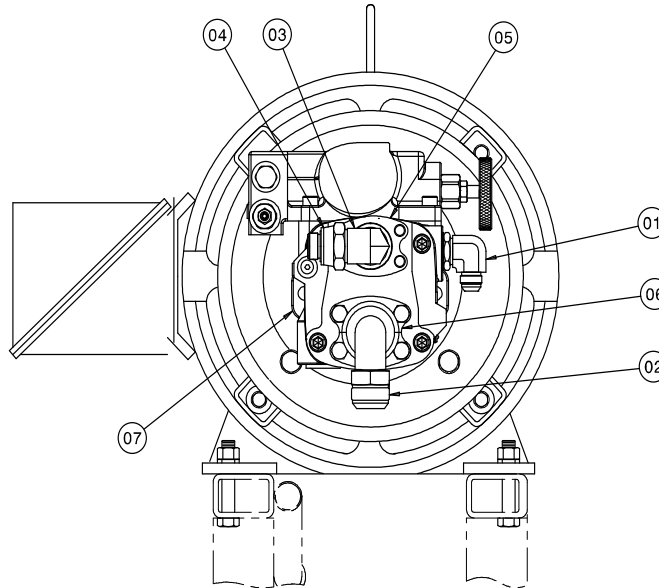


FIGURE 9.3.1 – Hydraulic Pump

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	N-2001-24-S-B	Elbow, 12-16	1
2	N-2078-11	Flange, 90° Elbow	1
3	N-2679-12	Flange, Elbow	1
4	N-2055-20-S	Reducer, Tube	1
5	N-2664-03-S-B	Kit, Flange	1
6	N-2545-06-S-B	Kit, Flange	1
7	HC-2494-01	Hydraulic Pump	1

9.3.2 Hydraulic Pump Replacement Seal Kits

Fluid Type: MIL-PRF-5606

Part Number	Description
K517105-969	Kit, Pump Seal
K5517107-006	Kit, Control Seal
L517104-301	Kit, Shaft and Bearing Seal

9.0 Maintenance continued on following page



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE (continued)

9.4 HYDRAULIC FLUID

Any time an unusual color, smell or visual indicator is noticed with the hydraulic fluid, a sample analysis should be performed to determine the condition of the fluid. (See Section 5.9 – **Sample Valve Operation**)

Refer to the manufacturer of the specific fluid for your unit to obtain additional information:

Model Number:	Fluid Type:
5Q11.....	MIL-PRF-5606

9.5 FILTERS

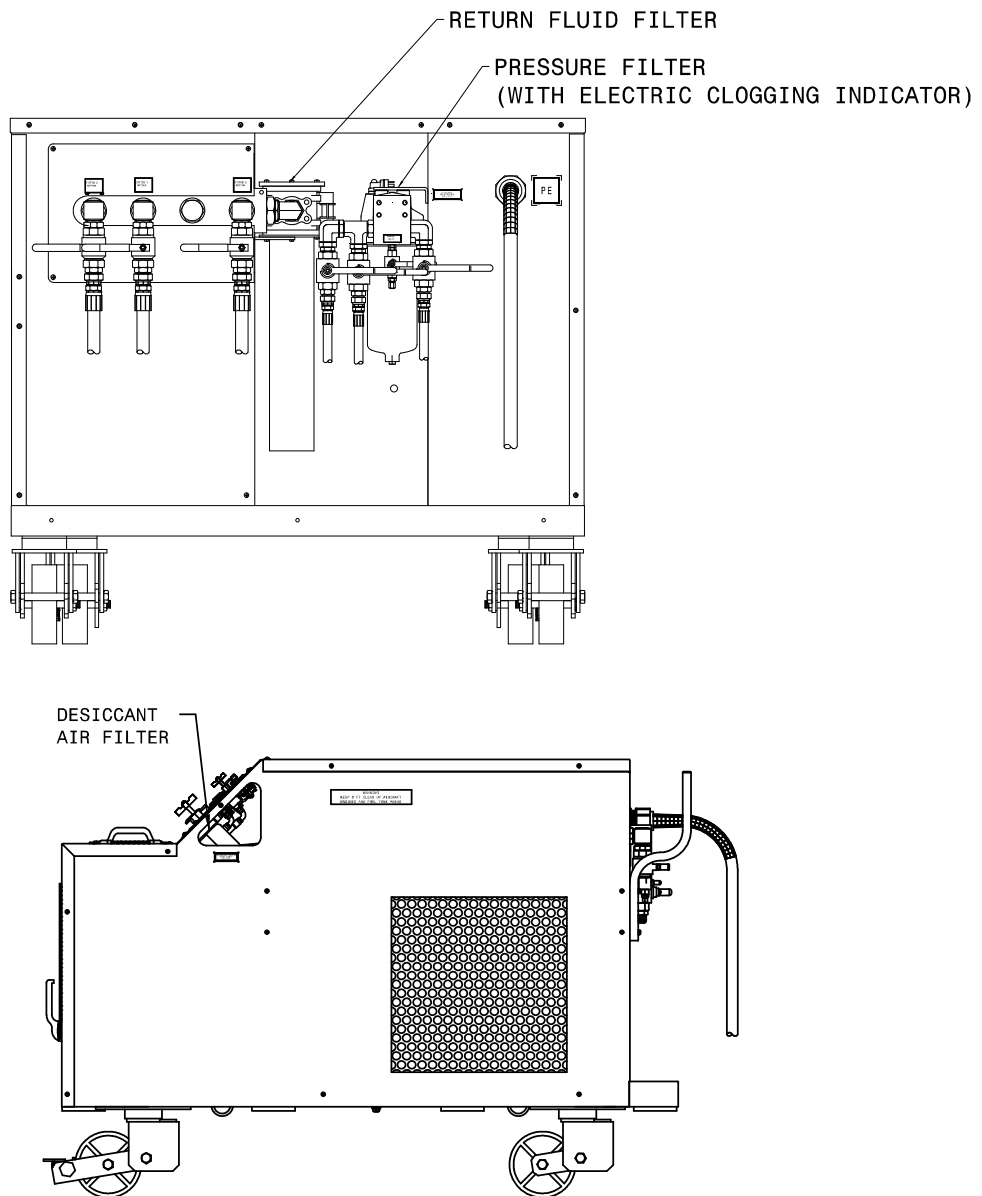


FIGURE 9.5 – Filter Locations

**Model: 5Q11
Hydraulic Power Unit**

9.5 FILTERS *(continued)*

9.5.1 Pressure Filter Element

Replace the filter element any time the clogged filter indicator light is triggered.

Replace the filter element annually to ensure proper cleanliness of the hydraulic system. This is a minimum requirement.

Standard filter changes depend on how frequently the HPU is used and the cleanliness of the fluid, along with the environment to which the HPU is exposed. Periodic fluid analysis is recommended to properly determine the optimum frequency of filter element changes.

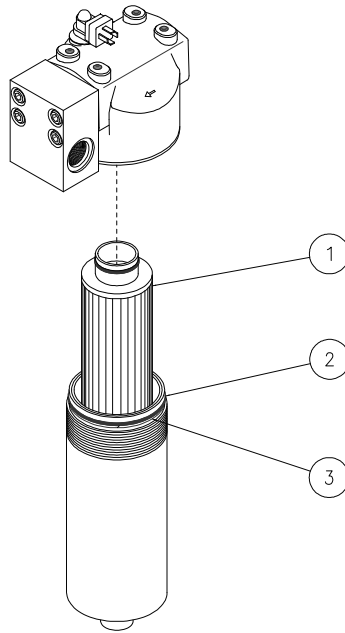


FIGURE 9.5.1 – Pressure Filter Element Replacement

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1 – 3	K-3613	Kit, Replacement Filter Element	1
2 & 3	K-3798	O-ring and Backup Ring	1

9.5 Filters continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.5 FILTERS (*continued*)

9.5.2 Return Filter Element

Replace the return filter element at the same time the pressure filter element is being replaced.

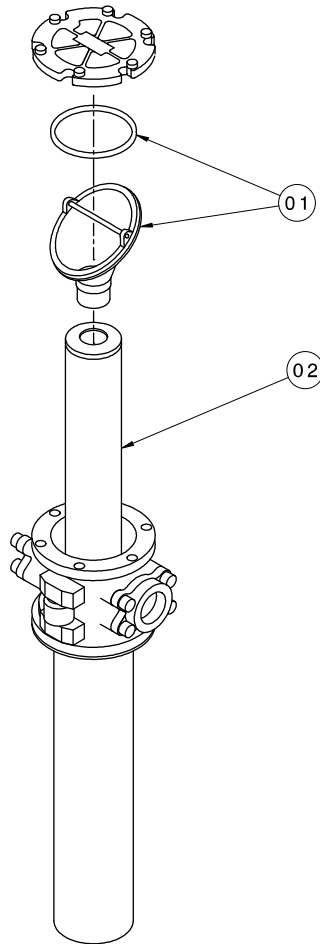


FIGURE 9.5.2 – Return Filter Element Replacement

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	HC-2000-350	O-ring	2
1 & 2	K-3615	Kit, Replacement Filter Element	1



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.5 FILTERS *(continued)*

9.5.3 Hand Pump (Option M) Filter Element

Replacement of the hand pump filter element is dictated by frequency of use and the cleanliness of the fluid, along with the environment to which the HPU is exposed. Changing the hand pump filter element at the same time as the pressure filter element will ensure a regular maintenance schedule.

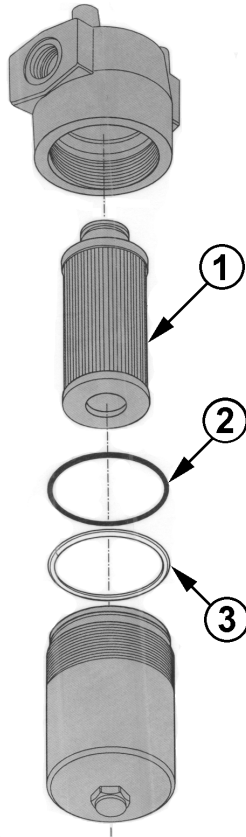


FIGURE 9.5.3 – Hand Pump (Option M) Filter Element Replacement

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1 – 3	K-3751	Kit, Replacement Filter Element	1
2 & 3	K-3796	O-ring and Backup Ring	1

9.5 Filters continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

9.5 FILTERS *(continued)*

9.5.4 Desiccant Air Filter

Replace the desiccant/air filter whenever the material inside the element is pink or reddish in color (see Element Label for details).

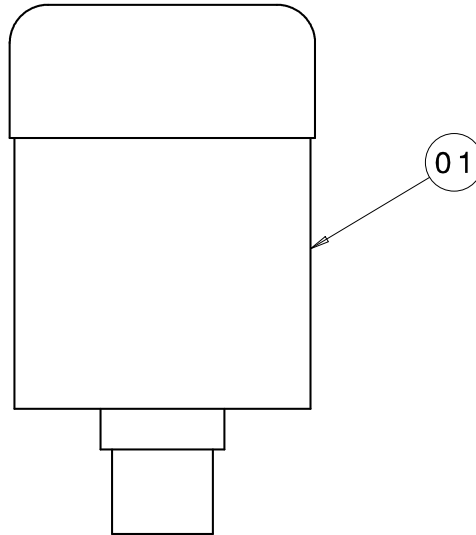


FIGURE 9.5.4 – Desiccant Air Filter Replacement

PARTS LIST

Item	Part Number	Description	Qty
1	HC-1763	Filter Element	1

9.5.5 Pressure Filter Assembly with Electric Filter Clogging Indicator

The Electric Filter Clogging Indicator does not require regular general maintenance. The panel light will illuminate when the clogging indicator senses a 98 psi differential pressure across the filter element. Installing a new filter element will eliminate the clogged condition. Pushing the illuminated button will reset the indicator light.

NOTE: *Higher flow rates will result in higher differential pressures. (Example: The clogging indicator may sense a 98 psi differential pressure at a flow rate of 34 gpm but not show a clogged condition when the flow rate is reduced to 10 gpm.)*

**Model: 5Q11
Hydraulic Power Unit**

9.5.5 Pressure Filter Assembly with Electric Filter Clogging Indicator (continued)

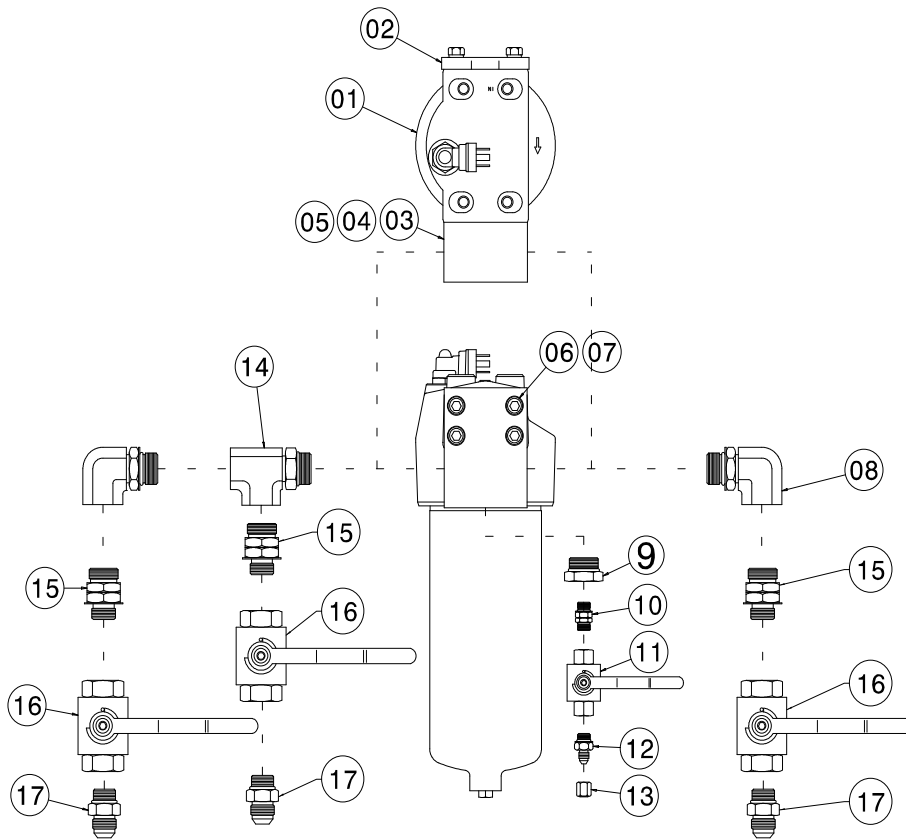


FIGURE 9.5.5 – Pressure Filter Assembly with Electric Filter Clogged Indicator

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	HC-2044-01	Filter, Pressure	1
2	N-2664-03-S-B	Kit, Flange	1
3	J-3280	Flange, SAE Adapter	1
6	G-1251-1090HC	Lockwasher, ½ High Collar	4
7	G-1151-109224	Screw, Socket Head Cap, ½-13	4
8	N-2661-06-S-B	Elbow, Straight Thread	2
9	N-2463-31-S-B	Fitting, Reducer/Expander	1
10	N-2464-05-S-B	Union, #6 Straight Thread	1
11	HC-2206-02	Valve, Ball	1
12	N-2007-05-S-B	Connector, Straight Thread	1
13	N-2008-03-S	Cap, #4	1
14	N-2660-06-S-B	Tee, Straight Thread Run	1
15	N-2464-14-S-B	Union, #16 Straight Thread	3
16	HC-1771-04	Valve, Ball	3
17	N-2007-18-S-B	Connector, Straight Thread	3
Not Shown	HC-2000-222	O-ring, Series 2	1
Not Shown	N-2053-10-S-B	Plug, Hex Head with O-ring	1

9.5 Filters continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.5 FILTERS (*continued*)

9.5.6 Return Filter Assembly

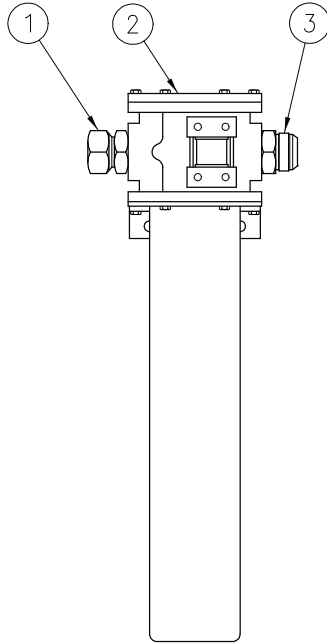


FIGURE 9.5.6 – Return Filter Assembly

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	N-2036-13-S-B	Fitting, 37° Swivel	1
2	HC-2045-01	Filter, Return	1
3	N-2007-31-S-B	Connector, #24 Straight Thread	1

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.6 HYDRAULIC HOSES

Hoses used on the HPU must be periodically inspected for damage, blisters, leaks, or hose end problems. Any damaged or defective hose should be replaced as soon as possible.

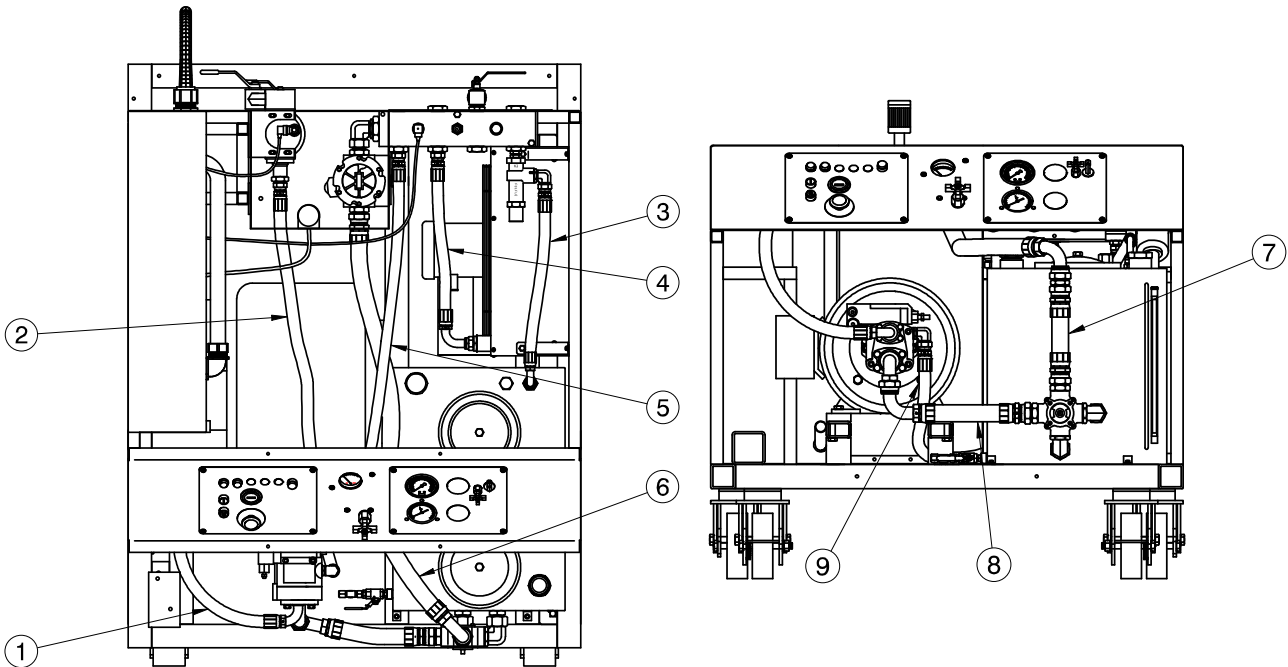


FIGURE 9.6 – Hydraulic Hoses

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	TF-1038-25*80.5	Assembly, Hose #16	1
2	TF-1038-28*39.0	Assembly, Hose #16	1
3	TF-1038-32*27.0	Assembly, Hose #16	1
4	TF-1038-31*27.0	Assembly, Hose #16	1
5	TF-1037-24*50.5	Assembly, Hose #16	1
6	TF-1039-13*56.5	Assembly, Hose #24	1
7	TF-1039-12*11.5	Assembly, Hose #24	1
8	TF-1039-13*17.3	Assembly, Hose #24	1
9	TF-1037-22*60.0	Assembly, Hose #16	1
<i>Not Shown</i>	TF-1038-10*300	External Pressure Hose (-12)	1
<i>Not Shown</i>	TF-1039-02*300	External Return Hose (-16)	1

9.0 Maintenance continued on following page



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE (continued)

9.7 INSTRUMENT PANEL

Refer to Section **9.6 Hydraulic Hoses** concerning hose inspection for general maintenance on Item 3 Hose Assembly.

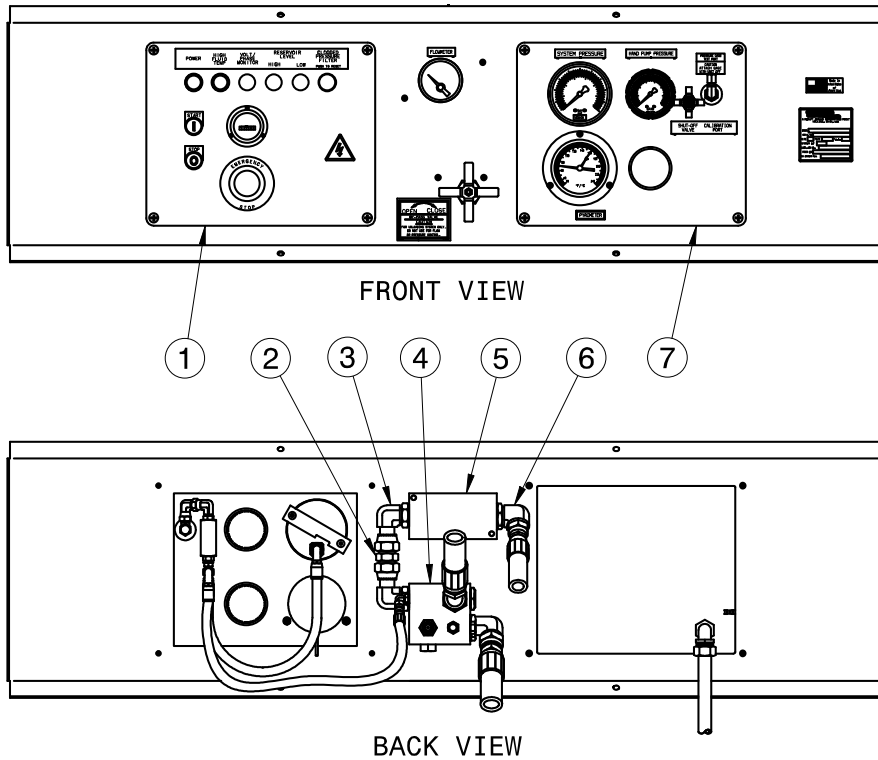


FIGURE 9.7 – Instrument Panel

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	See Page 33	Electric Panel.....	1
2	N-2665-08-S-B.....	Fitting, ORFS Tube End.....	1
3	N-2634-05-S-B.....	Elbow, 90°	1
4	See Page 35	Assembly, Pressure Manifold.....	1
5	HC-1404	Flowmeter.....	1
	HC-1404-A1	Flowmeter (Calibrated)	1
6	N-2001-25-S-B.....	Elbow, 90°	1
7	See Page 34	Hydraulic Panel	1

**Model: 5Q11
Hydraulic Power Unit**

9.7 INSTRUMENT PANEL (continued)

9.7.1 Electric Panel

The Electric Panel does not require regular general maintenance.

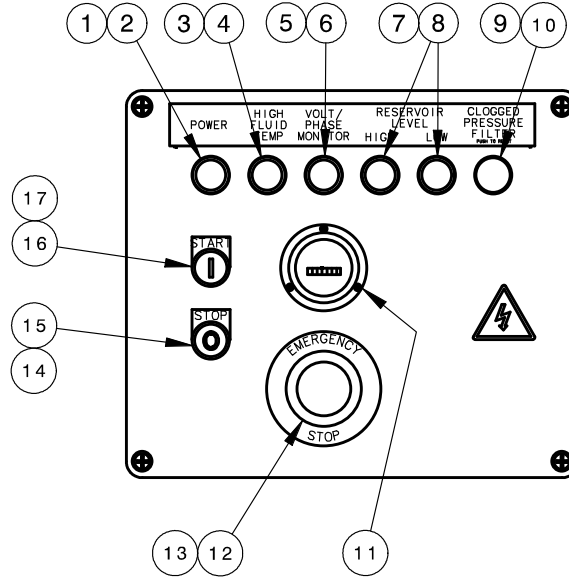


FIGURE 9.7.1 – Electric Panel

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Component	Part Number	Description	Qty
1	Standard	EC-1945-01	Light, Diffused Pilot	1
2	Standard	EC-1951-MN5G	Power, Module w/Latch	1
3	Option	EC-1945-03	Light, Diffused Pilot	1
4	Option	EC-1951-MN5Y	Power, Module w/Latch	1
5	Option	EC-1945-03	Light, Diffused Pilot	1
6	Option	EC-1951-MN5Y	Power, Module w/Latch	1
7	Option	EC-1945-04	Light, Diffused Pilot	2
8	Option	EC-1951-MN5B	Power, Module w/Latch	2
9	Option	EC-1952	Push Button, Illuminated/Flush	1
10	Option	EC-1944	Power, Module w/Contact/Latch	1
11	Option	EC-1577	Hour Meter (50 Hz Operation)	1
11	Option	EC-1578	Hour Meter (60 Hz Operation)	1
12	Standard	EC-1948	Switch, Emergency Stop	1
13	Standard	EC-1946-MX02	Contact Block w/Latch	1
14	Standard	EC-1953-ME205	Push Button, Non-Illuminated	1
15	Standard	EC-1946-MX01	Contact Block w/Latch	1
16	Standard	EC-1953-MF306	Push Button, Non-Illuminated	1
17	Standard	EC-1946-MX10	Contact Block w/Latch	1

9.7 Instrument Panel continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.7 INSTRUMENT PANEL (continued)

9.7.2 Hydraulic Panel

Annual calibration of instrumentation is recommended. See Section 12.0 – **Calibration of Instrumentation** for details of calibration.

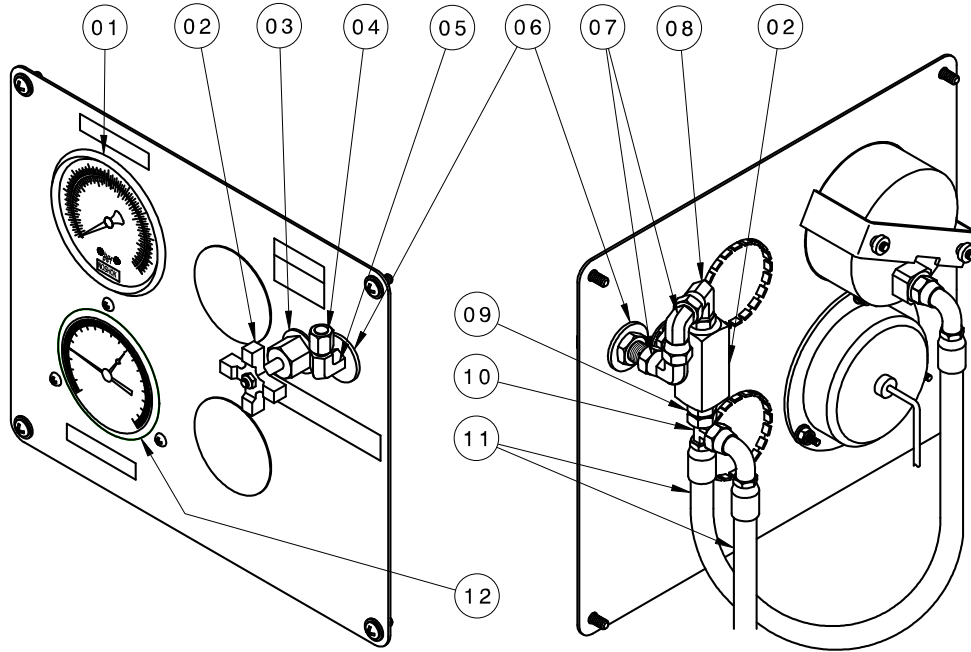


FIGURE 9.7.2 – Hydraulic Panel

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	HC-2144	Gauge, Pressure	1
2	HC-1900-01	Valve, Needle	1
3	HC-1122	Kit, Panel Mounting	1
4	N-2008-03-S	Cap, 3/4 JIC	1
5	N-2022-03-S	Elbow, Bulkhead Union #4	1
6	G-1250-1080W	Flatwasher, 7/16 Wide	1
7	N-2002-03-S	Elbow, 90° Swivel Nut #4	2
8	N-2049-07-S-B	Elbow, 90° Swivel 6-4	1
9	N-2007-03-S-B	Connector, Straight Thread	1
10	N-2016-03-S	Tee, Swivel Nut Run #4	1
11	TF-1038-16*24.0	Assembly, Hose	2
12	HC-2268-01	Gauge, Pyrometer	1

**Model: 5Q11
Hydraulic Power Unit**

9.7 INSTRUMENT PANEL *(continued)*

9.7.3 Pressure Manifold Assembly

The Pressure Manifold components do not require regular general maintenance.

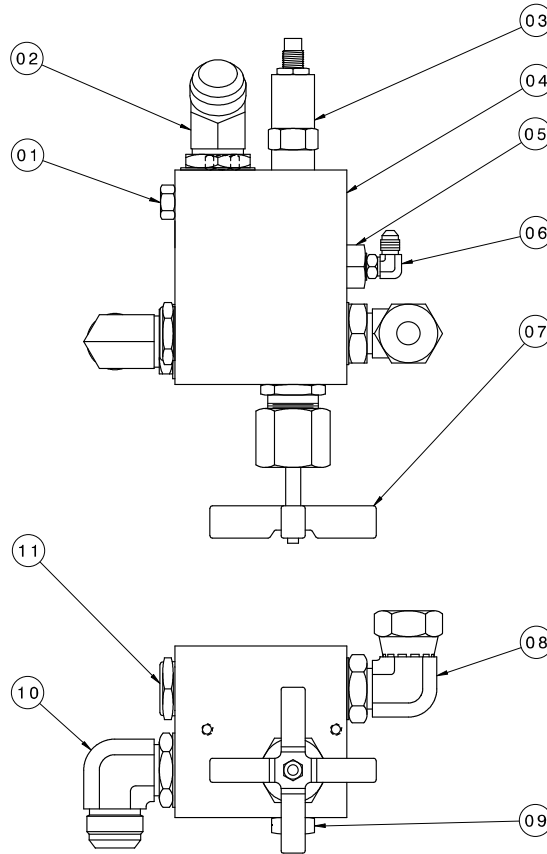


FIGURE 9.7.3 – Pressure Manifold Assembly

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	N-2053-05-S-B	Plug, O-ring Hex Head	2
2	N-2042-16-S-B	Connector, 45° Straight Thread	1
3	HC-1442	Valve, Pressure Relief	1
4	J-3245	Manifold, Pressure	1
5	N-2463-36-S-B	Fitting, Reducer-Expander	1
6	N-2001-03-S-B	Connector, Straight Thread	1
7	HC-1254-05	Valve, Needle	1
8	N-2634-05-S-B	Elbow, 90° Swivel & O-ring	1
9	N-2053-07-S-B	Plug, O-ring Hex Head	1
10	N-2001-24-S-B	Elbow, Straight Thread 90°	1
11	HC-2158	Valve, Check	1

9.7.3 Pressure Manifold Assembly continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.7.3 Pressure Manifold Assembly (continued)

9.7.3.a System Pressure Relief Valve

The System Pressure Relief Valve does not require regular general maintenance. It is possible however, for a contaminant to hold the relief valve in a partially open condition. If service is required, the new or repaired relief valve must be reset to 3,750 psig.

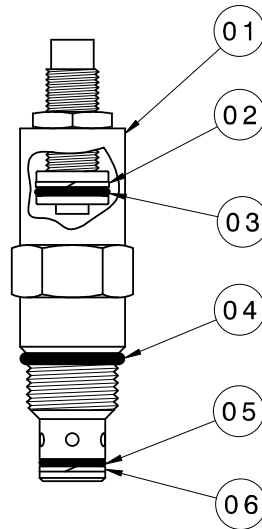


FIGURE 9.7.3.a – System Pressure Relief Valve

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
◆ 1	HC-1442	Pressure Relief Valve (<i>Not Set</i>).....	1
2	HC-2020-015	Backup Ring, (<i>Teflon</i>)	1
3	HC-2000-015	O-ring, Series 2	1
4	HC-2010-910	O-ring, Series 3	1
5	HC-2000-014	O-ring, Series 2	1
6	HC-2020-014	Backup Ring, (<i>Teflon</i>)	1

◆ **Item 1 consists of Items 2 – 6.**

**Model: 5Q11
Hydraulic Power Unit**

9.7.3 Pressure Manifold Assembly (continued)

9.7.3.b Check Valve

The Check Valve does not require regular general maintenance.

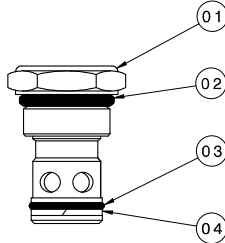


FIGURE 9.7.3.b – Check Valve

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
◆ 1	HC-2158	Check Valve	1
2	HC-2010-912	O-ring, Series 3	1
3	HC-2000-115	O-ring, Series 2	1
4	HC-2020-115	Backup Ring	1

◆ **Item 1 consists of Items 2 – 4.**

9.7.3.c Bypass Valve

The Bypass Valve does not require regular general maintenance.

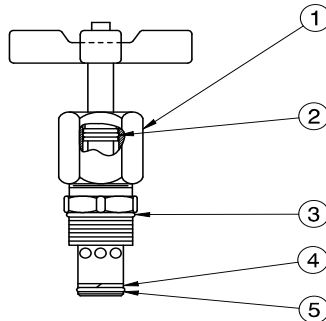


FIGURE 9.7.3.c – Bypass Valve

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
◆ 1	HC-1254-05	Needle Valve	1
2	HC-2000-112	O-ring	1
3	HC-2010-916	O-ring	1
4	HC-2020-118	Backup Ring	1
5	HC-2000-118	O-ring	1

◆ **Item 1 consists of Items 2 – 5.**

9.0 Maintenance continued on following page



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.8 RESERVOIR ASSEMBLY

Replace the desiccant air filter whenever the material inside the element is pink or reddish in color (See Element label for details). The Reservoir Assembly does not require regular general maintenance. If periodic inspections for silt are desired, be certain to thoroughly clean the dome cover and surrounding area before removing the dome cover. The Selector Valve (Item 19) is not field serviceable.

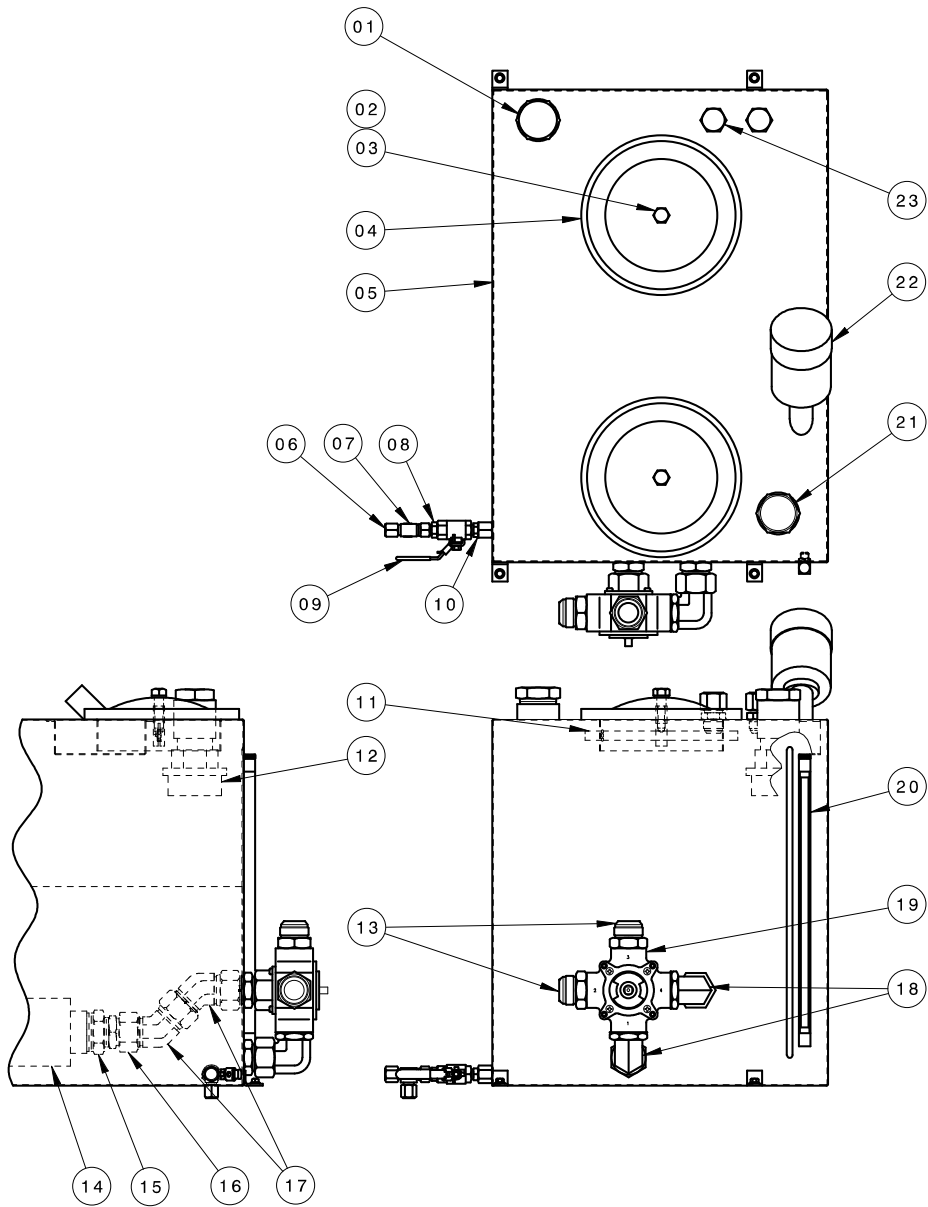


FIGURE 9.8 – Reservoir Assembly

**Model: 5Q11
Hydraulic Power Unit**

9.8 RESERVOIR ASSEMBLY (continued)

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	N-2206-09-S	Plug, Hex Head, 2" NPT	1
2	G-1100-110016	Bolt, Hex Head, Grade 5, 5/8-11 x 1 3/4" long	2
3	H-1735-02	Washer, Nylon	2
4	H-1740	Assembly, Cover	2
5	H-2537	Reservoir, 70 gallon (Stainless Steel)	1
6	N-2008-06-S	Cap, #8	2
7	N-2016-06-S	Tee, Swivel Run, #8 JIC	1
8	N-2007-11-S-B	Connector, Straight Thread #8 SAE x #8 JIC	1
9	HC-1761	Valve, Ball SAE #8 Lockable	1
10	HC-2010-908	O-ring, Series 3	1
11	Z-2394-01	Assembly, Clamp	2
12	HC-1542	Strainer, Nipple Style	1
13	N-2007-31-S-B	Connector, Straight Thread #24 SAE x #24 JIC	2
14	HC-1397-05	Diffuser	1
15	N-2210-25-S	Reducer, Pipe Thread	1
16	N-2030-15-S	Fitting, Swivel Nut	1
17	N-2081-10-S	Fitting, 45° Swivel Nut	2
18	HC-2049-24-S-B	Elbow, 90° Swivel, #24	2
19	HC-2042-01	Valve, Selector, #24 SAE	1
20	HC-1382-18	Gauge, Sight, 18"	1
21	N-2206-09-SS	Plug, Hex Head	1
22	HC-1763	Filter, Desiccant	1
23	N-2008-10-S	Cap, #10	2

9.0 Maintenance continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.9 RETURN MANIFOLD ASSEMBLY

The Return Manifold does not require regular general maintenance.

NOTE: *DO NOT attempt to adjust the Return System Pressure Relief Valve. See Section 9.9.1 – Return System Pressure Relief Valve for details.*

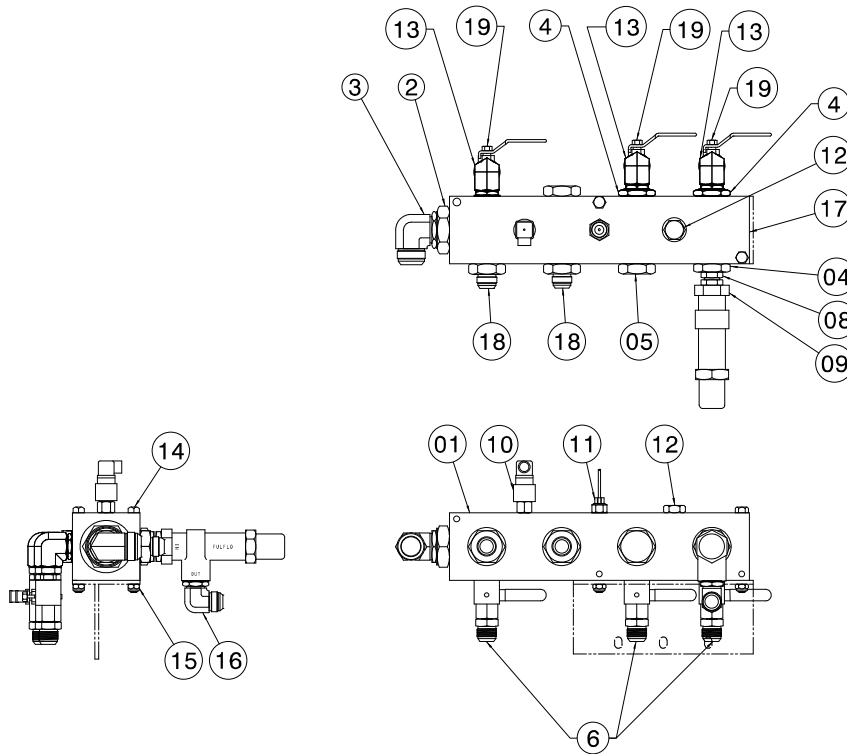


FIGURE 9.9 – Return Manifold Assembly

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	HC-2345	Manifold, Return	1
2	N-2463-28-S-B	Fitting, Reducer/Expander, 24/32 SAE	1
3	N-2001-31-S-B	Elbow, Straight Thread, #24 SAE x #24 JIC	1
4	N-2463-28-S-B	Fitting, Reducer/Expander, 16/24 SAE	3
5	N-2053-12-S-B	Plug, Hex Head, #24 O-ring	2
6	N-2007-24-S-B	Connector, Straight Thread	3
8	HC-2201	Valve, Pressure Relief (<i>Pre-set</i>)	1
9	N-2464-10-S-B	Union, Straight Thread #16 SAE	1
10	EC-1782-01	Switch, Temperature	1
11	HC-2268-01	Gauge, Pyrometer (PE)	1
12	N-2053-08-S-B	Plug, Hex Head, #12 O-ring	1
13	N-2661-06-S-B	Elbow, Straight Thread	3
14	G-1100-109554	Bolt, HH, GR 5, 1/2 - 20 x 5 1/2 LG	2
15	G-1202-1095	ESN, 1/2 - 20	2
16	N-2001-24-S-B	Connector, Straight Thread, #16 SAE x #16 JIC	1
17	HC-2010-932	O-Ring, Series 3	1
18	N-2007-34-S-B	Connector, Straight Thread, #24 SAE x #16 JIC	2
19	HC-1766-02	Valve, Ball #16 SAE	3



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.9 RETURN MANIFOLD ASSEMBLY *(continued)*

9.9.1 Return System Pressure Relief Valve

The Return System Pressure Relief Valve can be purchased as a preset assembly. If the relief valve is serviced by the end user, the valve must be set to crack at 150+/-7 psig **before** being re-installed on the HPU.

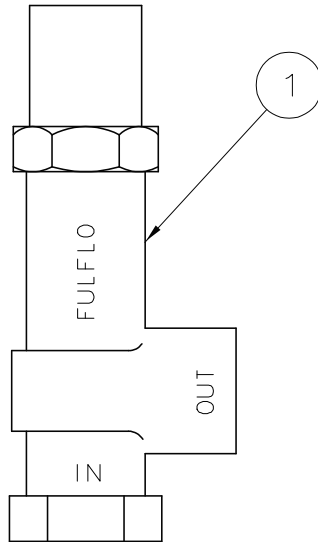


FIGURE 9.9.1 – Return System Pressure Relief Valve

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	HC-2201	Valve, Pressure Relief (<i>Pre-set</i>)	1
<i>Not Shown</i>	◆ HC-2000-220	O-ring, Series 2.....	1
◆ Included with Item 1.			

9.0 Maintenance continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

This page left blank intentionally.

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.10 ELECTRICAL COMPONENTS

Regularly inspect the external power cord for nicks, cuts, abrasion, and fluid damage. Replace power cord if damage is found. See Section 10.0 Provision of Spares for recommended spare fuses.

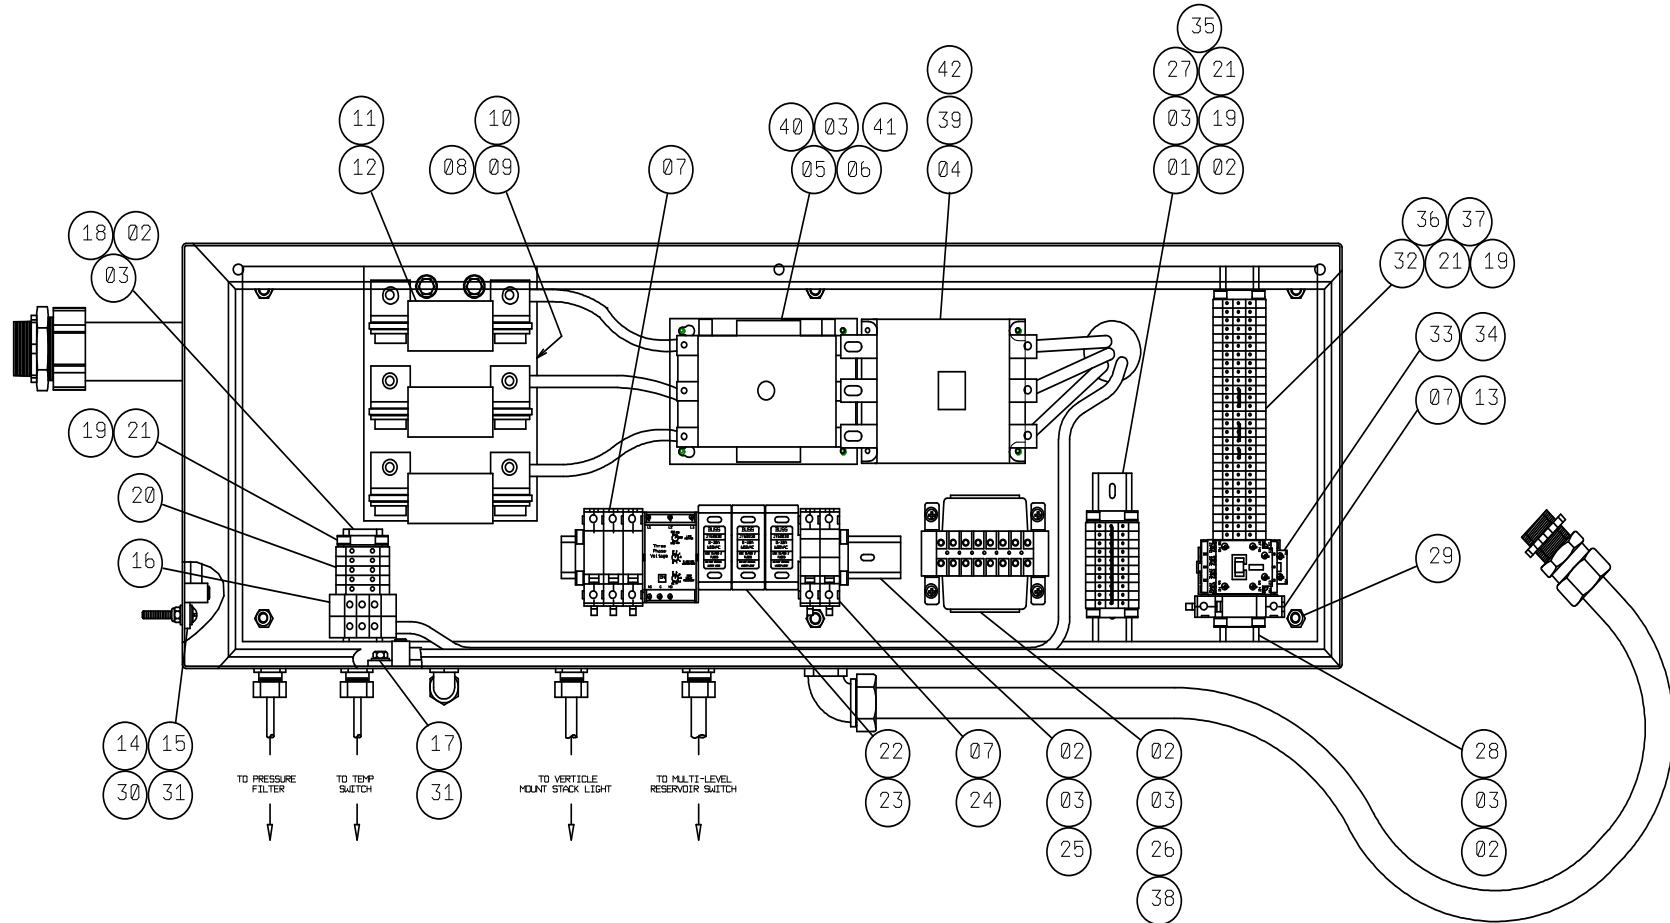


FIGURE 9.10 – Electrical Components

Set Item 04 to Automatic Reset position. Wire per Electrical Schematic INS-1608. Reference Wire Diagram INS-1597.

9.10 Electrical components continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

9.10 ELECTRICAL COMPONENTS *(continued)*

PARTS LIST

Item	60 Hz Applications					Description	Qty
	208	230	380	460	575		
1	EC-1598	EC-1598	EC-1598	EC-1598	EC-1598	Rail, Din	1
2	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	Screw, RD HD CRS REC, #10-32 x ½ Long	12
3	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	Flatwasher, #10 Narrow	16
4	EC-1920	EC-1920	EC-1920	EC-1525	EC-1525	Relay, Overload	1
5	EC-1922	EC-1922	EC-1922	EC-1842	EC-1842	Contactor, IEC Motor	1
6	EC-1924-01	EC-1924-01	EC-1924-01	N/A	N/A	Lug Set, Terminal	2
7	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	Fuse Holder, IEC Class CC	3
8	EC-1560	EC-1560	EC-1559	EC-1559	EC-1563	Fuse Block, Class J	1
9	G-1100-106506	G-1100-106506	G-1100-106506	G-1100-106506	G-1100-106506	Bolt, HH GR 5, 5/16-24 x ¾ Long	4
10	G-1250-1060N	G-1250-1060N	G-1250-1060N	G-1250-1060N	G-1250-1060N	Flatwasher, 5/16 Narrow	4
11	J-3492	J-3492	EC-1585-06	EC-1585-06	EC-1585-12	Cover, Sami Fuse	3
12	EC-1556-07	EC-1556-07	EC-1556-01	EC-1556-01	EC-1556-30	Fuse, Class J	3
13	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	Fuse, LP-CC-Low Peak 1-6/10A	1
14	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	Lug, Ground	1
15	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	Screw, RND HD CRS REC, ¼ - 28 x 1 ¾ Long	1
16	EC-1957	EC-1957	EC-1957	EC-1957	EC-1957	Block, IEC Ground	2
17	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	Lug, Ground	1
18	EC-1600	EC-1600	EC-1600	EC-1600	EC-1600	Rail, Din	1
19	EC-1959	EC-1959	EC-1959	EC-1959	EC-1959	Anchor, IEC End	7
20	EC-1958	EC-1958	EC-1958	EC-1958	EC-1958	Block, IEC Ground	5
21	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	Barrier, End	3
22	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	Fuse Holder, Class J	3
23	EC-1557-03	EC-1557-03	EC-1557-01	EC-1557-01	EC-1557-01	Fuse, Class J	3
24	EC-1726-15	EC-1726-14	EC-1726-08	EC-1726-07	EC-1726-07	Fuse, Class CC	2
25	EC-1599	EC-1599	EC-1599	EC-1599	EC-1599	Rail, Din	1
26	EC-1804-03	EC-1147	EC-1804-03	EC-1147	EC-1804-03	Transformer, Control (150 W)	1
27	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	Block, IEC Terminal (Blue)	10
28	EC-1597	EC-1597	EC-1597	EC-1597	EC-1597	Rail, Din	1
29	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	Stopnut, Elastic 3/8 – 16	6
30	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	Stopnut, Elastic ¼ - 28	1



**Model: 5Q11
Hydraulic Power Unit**

Item	60 Hz Applications					Description	Qty
	208	230	380	460	575		
31	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	Flatwasher, ¼ Narrow	4
32	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	Block, IEC Terminal (Red)	28
33	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	Latch, Mechanical	1
34	EC-1564	EC-1564	EC-1564	EC-1564	EC-1564	Relay, Control	1
35	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	Jumper, Center	1
36	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	Jumper, Center	2
37	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	Jumper, Center	1
38	EC-1826	EC-1826	EC-1826	EC-1826	EC-1826	Guard, Finger Touchproof	1
39	EC-1924-02	EC-1924-02	EC-1924-02	N/A	N/A	Lug Set, Terminal	1
40	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	Screw, RD HD CRS REC, #10-32 x 1 ¼ LG	6
41	N/A	N/A	N/A	EC-1607	EC-1607	Block, Auxiliary Contact	1
42	EC-1965	EC-1965	EC-1965	EC-1965	EC-1965	Shield, Current Adjustment	1

9.10 Electrical Components continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

9.10 ELECTRICAL COMPONENTS *(continued)*

PARTS LIST

Item	50 Hz Applications					Description	Qty
	200	220	380	415	440		
1	EC-1598	EC-1598	EC-1598	EC-1598	EC-1598	Rail, Din	1
2	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	Screw, RD HD CRS REC, #10-32 x ½ Long	12
3	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	Flatwasher, #10 Narrow	16
4	EC-1920	EC-1920	EC-1525	EC-1525	EC-1525	Relay, Overload	1
5	EC-1922	EC-1922	EC-1842	EC-1842	EC-1842	Contactor, IEC Motor	1
6	EC-1924-01	EC-1924-01	N/A	N/A	N/A	Lug Set, Terminal	2
7	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	Fuse Holder, IEC Class CC	3
8	EC-1560	EC-1560	EC-1559	EC-1559	EC-1559	Fuse Block, Class J	1
9	G-1100-106506	G-1100-106506	G-1100-106506	G-1100-106506	G-1100-106506	Bolt, HH GR 5, 5/16-24 x ¾ Long	4
10	G-1250-1060N	G-1250-1060N	G-1250-1060N	G-1250-1060N	G-1250-1060N	Flatwasher, 5/16 Narrow	4
11	J-3492	J-3492	EC-1585-06	EC-1585-06	EC-1585-06	Cover, Sami Fuse	3
12	EC-1556-07	EC-1556-06	EC-1556-01	EC-1556-01	EC-1556-01	Fuse, Class J	3
13	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	Fuse, LP-CC-Low Peak 1-6/10A	1
14	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	Lug, Ground	1
15	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	Screw, RND HD CRS REC, ¼ - 28 x 1 ¾ Long	1
16	EC-1957	EC-1957	EC-1957	EC-1957	EC-1957	Block, IEC Ground	2
17	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	Lug, Ground	1
18	EC-1600	EC-1600	EC-1600	EC-1600	EC-1600	Rail, Din	1
19	EC-1959	EC-1959	EC-1959	EC-1959	EC-1959	Anchor, IEC End	7
20	EC-1958	EC-1958	EC-1958	EC-1958	EC-1958	Block, IEC Ground	5
21	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	Barrier, End	3
22	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	Fuse Holder, Class J	3
23	EC-1557-03	EC-1557-03	EC-1557-01	EC-1557-01	EC-1557-01	Fuse, Class J	3
24	EC-1726-16	EC-1726-15	EC-1726-08	EC-1726-08	EC-1726-08	Fuse, Class CC	2
25	EC-1599	EC-1599	EC-1599	EC-1599	EC-1599	Rail, Din	1
26	EC-1804-03	EC-1147	EC-1804-03	EC-1147	EC-1804-03	Transformer, Control (150 W)	1
27	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	Block, IEC Terminal (Blue)	10
28	EC-1597	EC-1597	EC-1597	EC-1597	EC-1597	Rail, Din	1
29	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	Stopnut, Elastic 3/8 – 16	6
30	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	Stopnut, Elastic ¼ - 28	1



**Model: 5Q11
Hydraulic Power Unit**

Item	50 Hz Applications					Description	Qty
	200	220	380	415	440		
31	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	Flatwasher, ¼ Narrow	4
32	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	Block, IEC Terminal (Red)	28
33	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	Latch, Mechanical	1
34	EC-1564	EC-1564	EC-1564	EC-1564	EC-1564	Relay, Control	1
35	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	Jumper, Center	1
36	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	Jumper, Center	2
37	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	Jumper, Center	1
38	EC-1826	EC-1826	EC-1826	EC-1826	EC-1826	Guard, Finger Touchproof	1
39	EC-1924-02	EC-1924-02	N/A	N/A	N/A	Lug Set, Terminal	1
40	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	Screw, RD HD CRS REC, #10-32 x 1 ¼ LG	6
41	N/A	N/A	EC-1607	EC-1607	EC-1607	Block, Auxiliary Contact	1
42	EC-1965	EC-1965	EC-1965	EC-1965	EC-1965	Shield, Current Adjustment	1

9.10 Electrical components continued on following page.



06/2010 – Rev. 05

Model: 5Q11
Hydraulic Power Unit

This page left blank intentionally.

**Model: 5Q11
Hydraulic Power Unit**

9.10 ELECTRICAL COMPONENTS *(continued)*

9.10.1 Electrical Components With 100 ft. Input Cord Option

Regularly inspect the external power cord for nicks, cuts, abrasion, and fluid damage. Replace power cord if damage is found. See Section 10.0 Provision of Spares for recommended spare fuses.

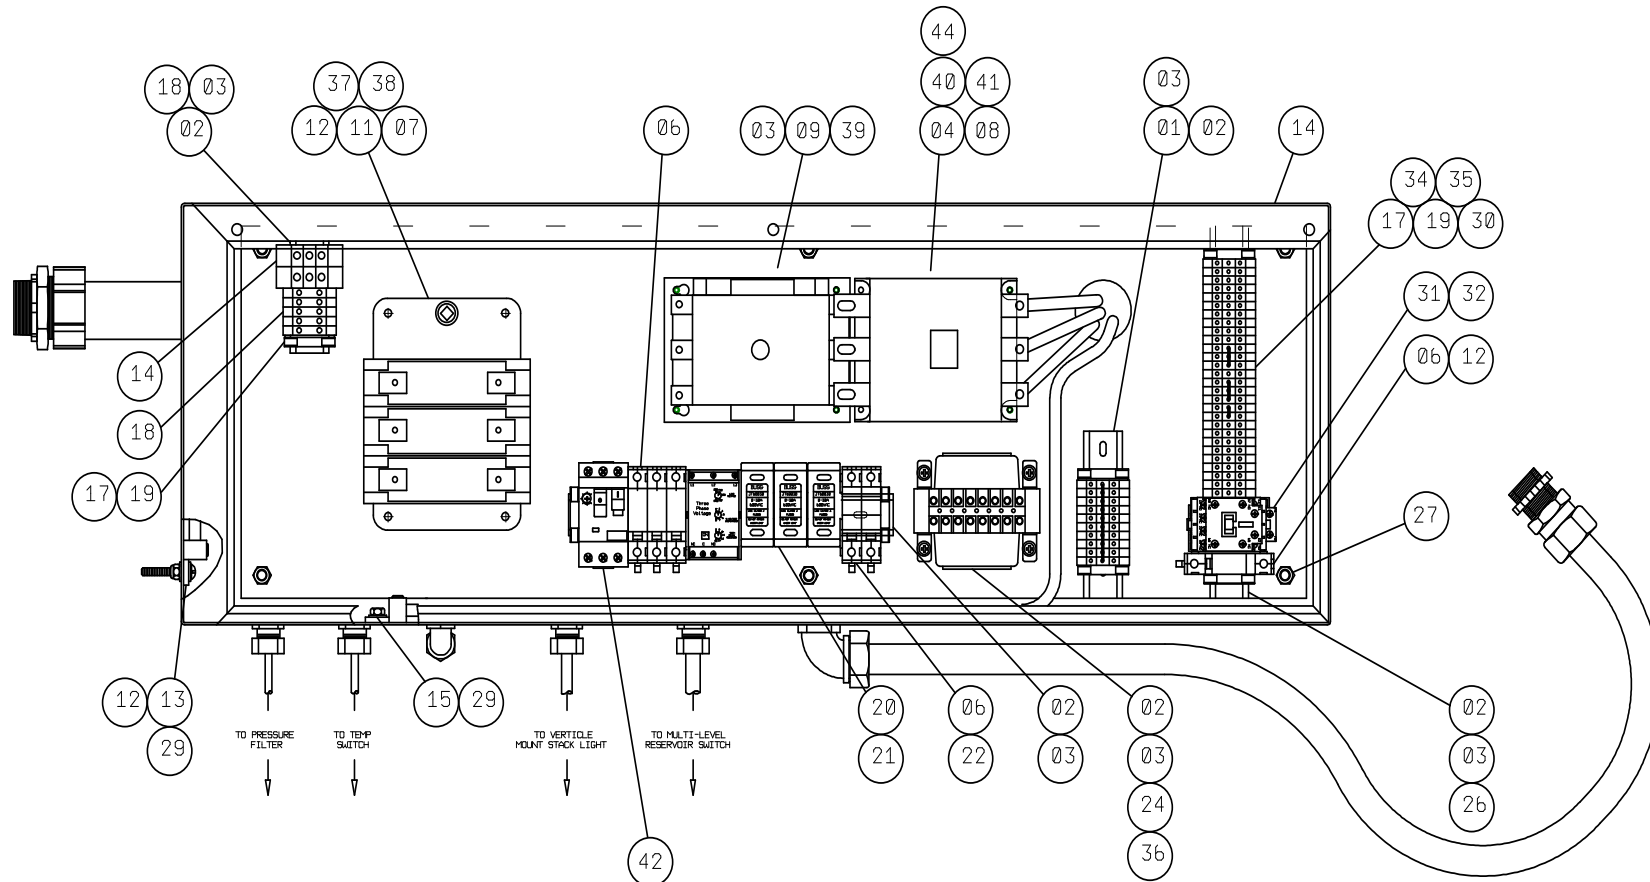


FIGURE 9.10.1 – Electrical Components

Set Item 04 to Automatic Reset position. Wire per Electrical Schematic INS-1608. Reference Wire Diagram INS-1597.

9.10.1 Electrical components with 100 ft. input cord option continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.10.1 Electrical Components With 100 ft. Input Cord Option (continued)

PARTS LIST

Item	60 Hz Applications					Description	Qty
	208	230	380	460	575		
1	EC-1598	EC-1598	EC-1598	EC-1598	EC-1597	Rail, Din	1
2	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	G-1159-103504	Screw, RD HD CRS REC, #10-32 x ½ Long	12
3	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	G-1250-1030N	Flatwasher, #10 Narrow	16
4	EC-1920	EC-1920	EC-1920	EC-1525	EC-1525	Relay, Overload	1
5	EC-1922	EC-1922	EC-1922	EC-1587	EC-1587	Contact, IEC Motor	1
6	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	EC-1541-01	Fuse Holder, IEC Class CC	3
7	EC-1859	EC-1859	EC-1890	EC-1890	EC-1894	Disconnect, Fused	1
8	EC-1924-02	EC-1924-02	EC-1924-02	N/A	N/A	Lug Set, Terminal	2
9	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	G-1159-103510	Screw, RD HD CRS REC, #10-32 x 1 ¼ LG	6
10	EC-1556-07	EC-1556-07	EC-1556-02	EC-1556-01	EC-1557-31	Fuse, Class J	3
11	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	EC-1542-09	Fuse, LP-CC-Low Peak 1-6/10A	1
12	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	EC-1432-04	Lug, Ground	1
13	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	G-1159-105516	Screw, RND HD CRS REC, ¼ - 28 x 1 ¼ Long	1
14	EC-1957	EC-1957	EC-1957	EC-1957	EC-1957	Block, IEC Ground	2
15	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	EC-1532-02	Lug, Ground	1
16	EC-1600	EC-1600	EC-1600	EC-1600	EC-1600	Rail, Din	1
17	EC-1959	EC-1959	EC-1959	EC-1959	EC-1959	Anchor, IEC End	7
18	EC-1958	EC-1958	EC-1958	EC-1958	EC-1958	Block, IEC Ground	5
19	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	EC-1960-01	Barrier, End	3
20	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	EC-1596-01	Fuse Holder, Class J	3
21	EC-1557-03	EC-1557-03	EC-1557-01	EC-1557-01	EC-1557-01	Fuse, Class J	3
22	EC-1726-15	EC-1726-14	EC-1726-08	EC-1726-07	EC-1726-07	Fuse, Class CC	2
23	EC-1599	EC-1599	EC-1599	EC-1599	EC-1599	Rail, Din	1
24	EC-1804-03	EC-1147	EC-1804-03	EC-1147	EC-1804-03	Transformer, Control (150 W)	1
25	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	EC-1956-03	Block, IEC Terminal (Blue)	10
26	EC-1597	EC-1597	EC-1597	EC-1597	EC-1597	Rail, Din	1
27	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	G-1202-1070	Stopnut, Elastic 3/8 – 16	6
28	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	G-1202-1055	Stopnut, Elastic ¼ - 28	1
29	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	G-1250-1050N	Flatwasher, ¼ Narrow	8
30	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	EC-1956-02	Block, IEC Terminal (Red)	28
31	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	EC-1591-04	Latch, Mechanical	1



**Model: 5Q11
Hydraulic Power Unit**

Item	60 Hz Applications					Description	Qty
	208	230	380	460	575		
32	EC-1564	EC-1564	EC-1564	EC-1564	EC-1564	Relay, Control	1
33	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	EC-1961-04	Jumper, Center	1
34	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	EC-1961-02	Jumper, Center	2
35	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	EC-1961-01	Jumper, Center	1
36	EC-1826	EC-1826	EC-1826	EC-1826	EC-1826	Guard, Finger Touchproof	1
37	EC-1858	EC-1858	EC-1858	EC-1858	EC-1858	Shaft, Operating	1
38	EC-1875	EC-1875	N/A	N/A	N/A	Handle, Operating	1
39	N/A	N/A	N/A	EC-1607	EC-1607	Block, Auxiliary Contact	1
40	N/A	N/A	N/A	EC-1965	EC-1965	Shield, Current Adjustment	1
41	N/A	N/A	N/A	EC-1606	EC-1606	Shield, Contact	1
42	EC-2202	EC-2202	EC-2202	EC-2202	EC-2202	Starter, Motor	1

9.0 Maintenance continued on following page.




**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.11 HEAT EXCHANGER ASSEMBLY

The Heat Exchanger Assembly does not require regular general maintenance.

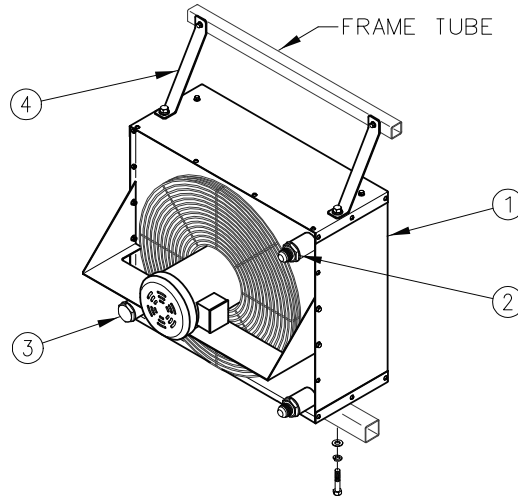

**FIGURE 9.11 – Heat Exchanger Assembly
PARTS LIST**

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	<i>Reference Table below</i>	Heat Exchanger	1
2	N-2007-27-S-B	Connector, #20 SAE x #16 JIC	1
3	N-2066-20-S-B	Plug, O-ring #20	1
4	J-3404-01	Strap	2

Voltage	Frequency	Part Number
208v	60 Hz	HC-2137-01
230v	60 Hz	HC-2137-01
380v	60 Hz	HC-2137-01
460v	60 Hz	HC-2137-01
575v	60 Hz	HC-2137-02
200v	50 Hz	HC-2137-01
220v	50 Hz	HC-2137-01
380v	50 Hz	HC-2137-01
415v	50 Hz	HC-2137-01
440v	50 Hz	HC-2137-01

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.12 EXTERNAL COMPONENTS

Keep HPU clean. Do not allow labels to become damaged; thusly illegible. Regularly inspect casters and floor locks to ensure safe working condition.

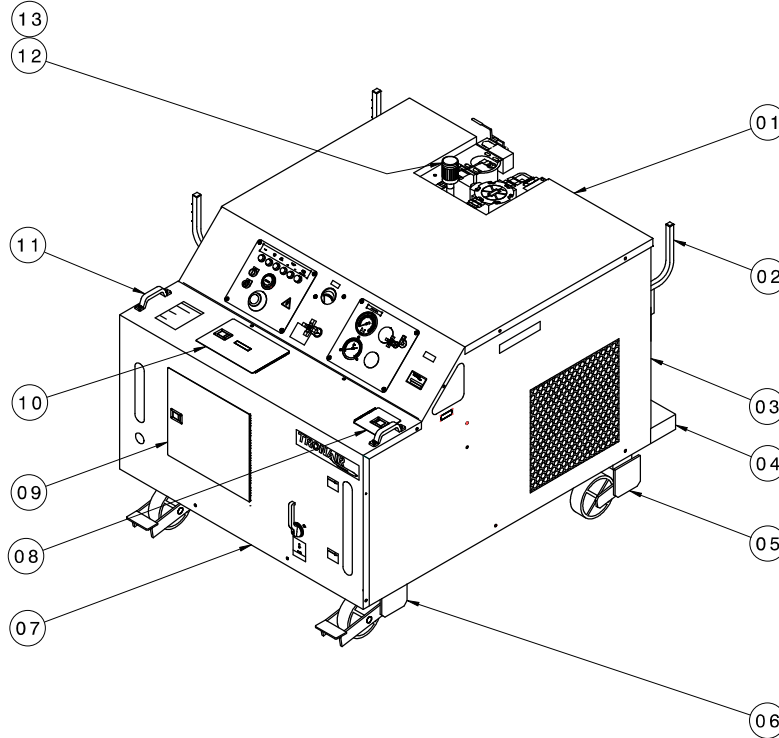


FIGURE 9.12 – External Components

PARTS LIST

Item	Part Number	Description	Qty
1	S-1763-01	Top Panel	1
2	Z-5549-01	Hanger	3
3	Z-5362-01	Right Side Panel	1
4	S-1782-01	Panel, End	1
5	U-1099	Rigid Caster	2
6	U-1100	Swivel Caster	2
7	Z-5408-01	Front Panel	1
8	Z-4781	Filler Door	1
9	Z-5576	Front Access Door	1
10	Z-4783	Pump Access Door	1
11	H-1780	Handle	2
12	EC-1794	Box, Vertical Mount Junction	1
13	EC-1791	Light, Pole Mounted Stack	1
<i>Not Shown</i>	Z-5367-01	Left Side Panel	1
<i>Not Shown</i>	Z-5165-01	Frame	1
<i>Not Shown</i>	S-1703-01	Electrical Box Cover	1

9.0 Maintenance continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.13 ADDITIONAL FEATURES

9.13.1 50 ft (15.2 m) Hoses *(Option B)*

Refer to Section **9.6 Hydraulic Hoses** concerning hose inspection.

PARTS LIST

Fluid Type: MIL-PRF-5606

<u>Part Number</u>	<u>Description</u>	<u>Qty</u>
TF-1038-10*300	Pressure Hose, 50 ft/15 m	1 per Option
TF-1039-02*300	Return Hose, 50 ft/15 m.....	1 per Option
N-2011-08-S.....	Union, #12.....	1 per Option
N-2011-10-S.....	Union, #16.....	1 per Option

**Model: 5Q11
Hydraulic Power Unit**

9.13 ADDITIONAL FEATURES (continued)

9.13.2 Triple System

Refer to Section 9.6 *Hydraulic Hoses* concerning hose inspection.

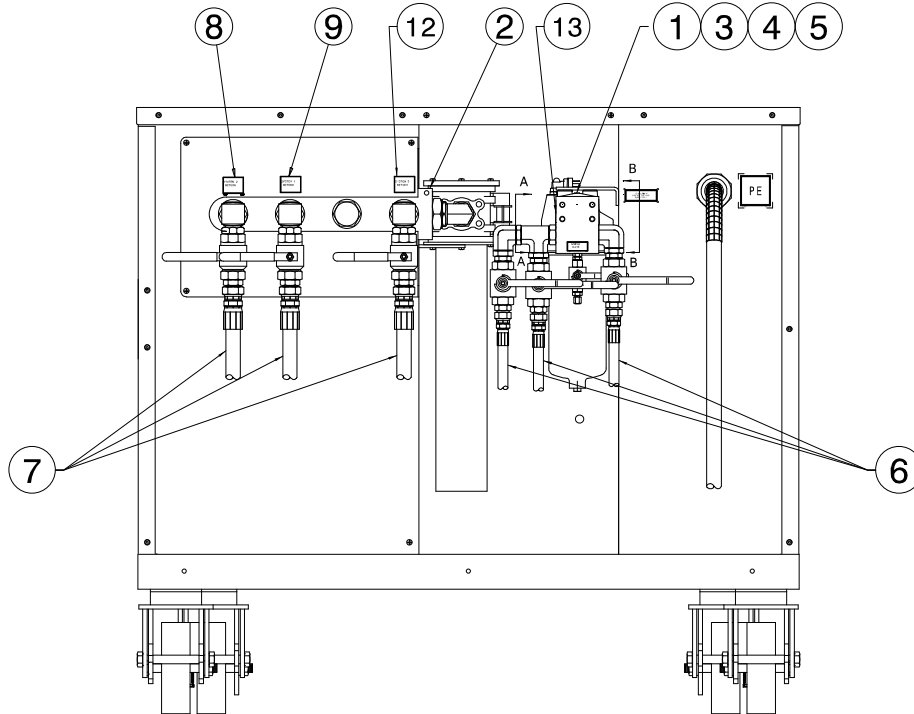


FIGURE 9.13.2 – Triple System

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	Z-6752	Assembly, Pressure Filter	1
2	Z-6753	Assembly, Return Manifold	1
3	G-1114-100020	Bolt, Metric, HH, GR 5, M10 x 20 LG	4
4	G-1250-1070N	Flatwasher, 3/8 Narrow	4
5	H-1901-12	Gromet, 5/16	1
6	TF-1038-10*300	Assembly, Hose #12	3
7	TF-1039-02*300	Assembly, Hose #16	3
8	V-2007	Label, System 2 Return	1
9	V-2006	Label, System 1 Return	1
10	V-2004	Label, System 1 Pressure	1
11	V-2005	Label, System 2 Pressure	1
12	V-2218	Label, System 3 Return	1
13	V-2217	Label, System 3 Pressure	1

9.13 Additional Features continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.13 ADDITIONAL FEATURES (continued)

9.13.3 Voltage/Phase Monitor (Options G – J)

The Voltage/Phase Monitor does not require regular general maintenance. The panel indicator light will illuminate if a tripped condition exists. If the Voltage/Phase Monitor is causing the HPU to shut off, verify the ♦Phase Monitor settings shown. Continued tripping may indicate a serious electrical problem. See Section 10.0 – **Provision of Spares** for recommended spare fuses.

NOTE: Wire per Electrical Schematic INS-1608. Reference Wiring Diagram INS-1597. Reference Section 9.7.1 Electrical Panel (Page 33) for Panel Light.

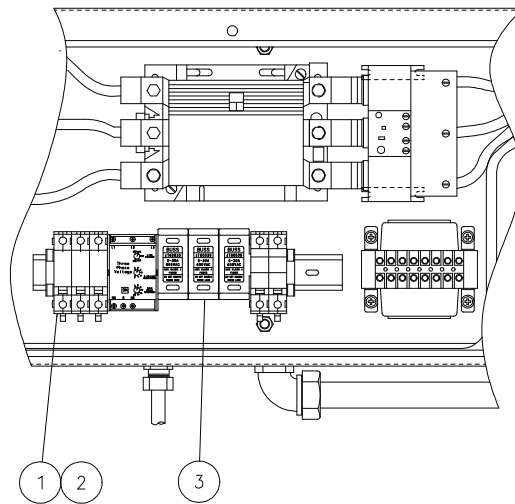


FIGURE 9.13.3 – Voltage/Phase Monitor

PARTS LIST

Item	Part Number	Description	Qty
1	EC-1541-01	Fuse Holder, IEC Class CC.....	3
2	EC-1675-12.....	Fuse, KTK-R, 2 amp	3
♦ 3	See Table below	Phase Monitor	1

Phase Monitor

Option	Voltage	Frequency	Part Number
G	200 – 230	50/60 Hz	EC-1543-02
H	380	50/60 Hz	EC-1543-03
I	415 – 460	50/60 Hz	EC-1543-04
J	575	60 Hz	EC-1543-05

♦ Setting Instructions for Item 3:

1. Set **Line Voltage** to match the voltage rating of the Hydraulic Power Unit.
2. Set **% Voltage Unbalanced** to 5% for 60 Hz unit or 6% for 50 Hz unit.
3. Set **Trip Delay** to three (3) seconds.

**Model: 5Q11
Hydraulic Power Unit**

9.13 ADDITIONAL FEATURES *(continued)*

9.13.4 Electric Reservoir Level *(Option L)*

The Electric Reservoir Level switch does not require regular general maintenance. Panel indicator lights will indicate low or high fluid level.

NOTE: Wire per Electrical Schematic INS-1725. Reference Wiring Diagram INS-1701. Reference 9.7.1 Electrical Panel (Page 33) for Panel Light.

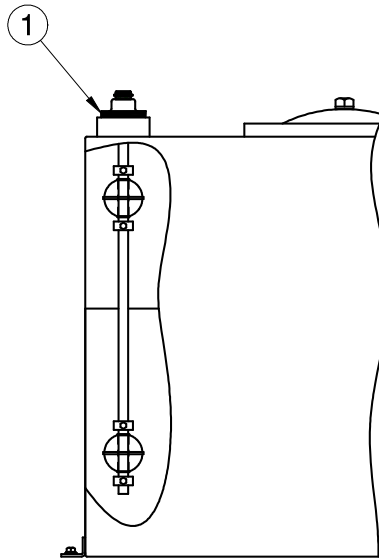


FIGURE 9.13.4 – Electric Reservoir Level

PARTS LIST

Item	Part Number	Description	Qty
1	EC-1783.....	Multi-Level Switch <i>(includes Plug-in Cable)</i>	1

9.13 Additional Features continued on following page.

**Model: 5Q11
Hydraulic Power Unit**

9.13 ADDITIONAL FEATURES (continued)

9.13.5 Hand Pump (Option M)

Refer to Section **9.6 Hydraulic Hoses** concerning hose inspection for general maintenance on Items 4, 5, 7 and 13 hose assemblies. Refer to Section **9.5.3 – Hand Pump (Optional) Filter**.

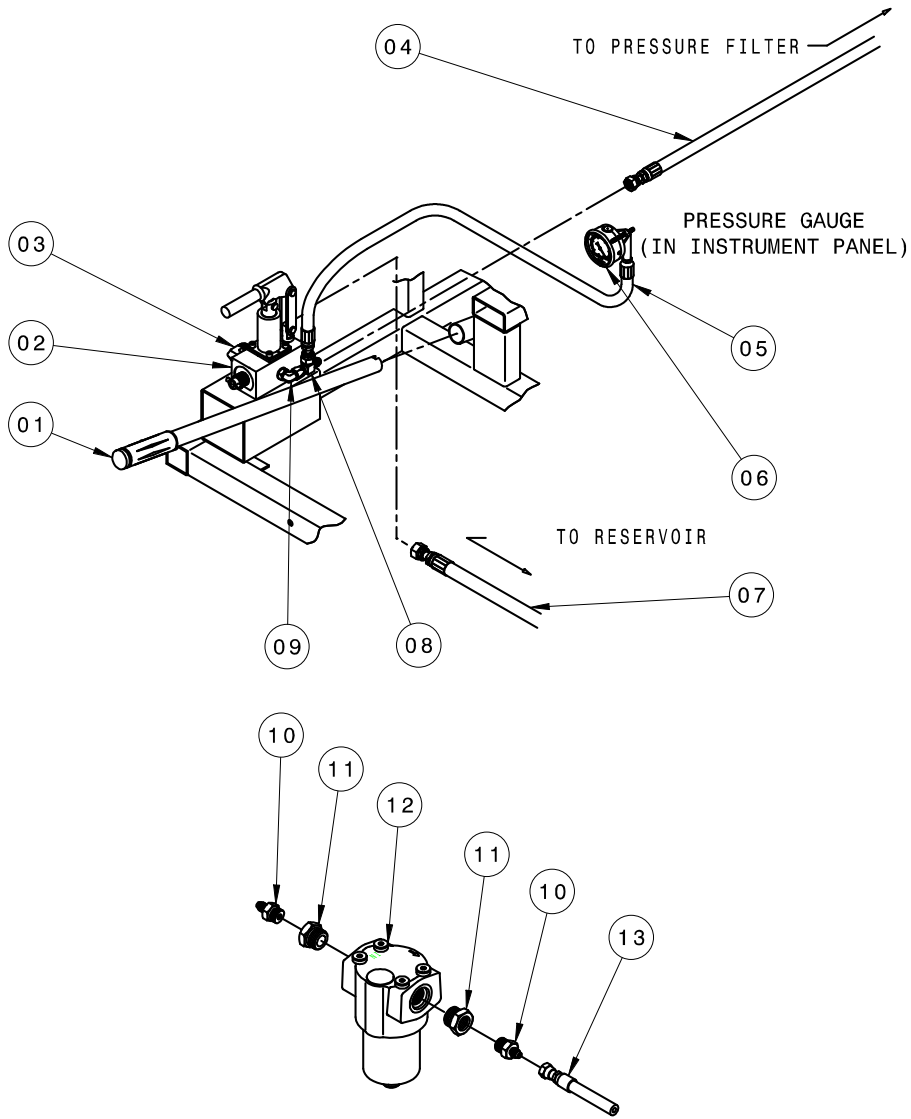


FIGURE 9.13.5 – Hand Pump

**Model: 5Q11
Hydraulic Power Unit**

9.13.5 Hand Pump (Option M) (continued)

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	H-1009-01	Pump Handle	1
2	HC-1778	Hand Pump, Two Stage	1
3	N-2001-11-S-B	Elbow, #8 SAE x #8 JIC Flare	1
4	TF-1038-15*56.5	Hose Assembly, #4	1
5	TF-1038-15*56.5	Hose Assembly, #4	1
6	HC-2146	Pressure Gauge	1
7	TF-1037-21*38.0	Hose Assembly, #8	1
8	N-2016-05-S	Tee, Swivel Nut, #6	1
9	N-2001-08-S-B	Elbow, #6 SAE x #6 JIC Flare	1
10	N-2007-06-S-B	Fitting, Male Connector	1
11	N-2463-10-S-B	Reducer Fitting	2
12	HC-1776	Pressure Filter	1
13	TF-1038-14*180	Hose Assembly, #4	1

9.13.5 Hand pump continued on following page



06/2010 – Rev. 05

Model: 5Q11
Hydraulic Power Unit

9.13.5 Hand Pump (Option M) (continued)

9.13.5.a Two Stage Pump with Relief

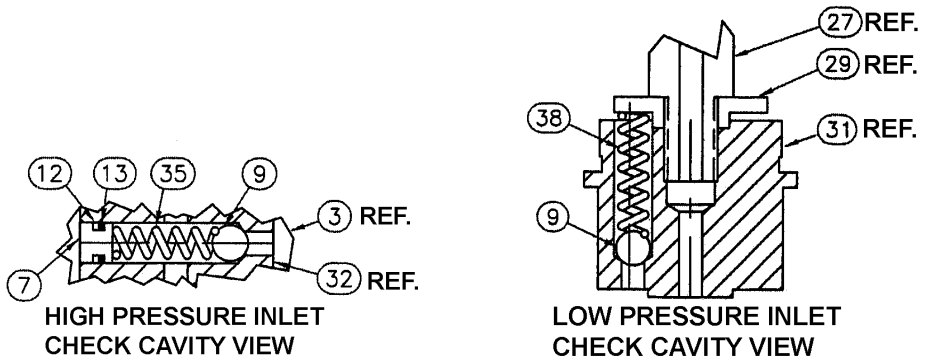
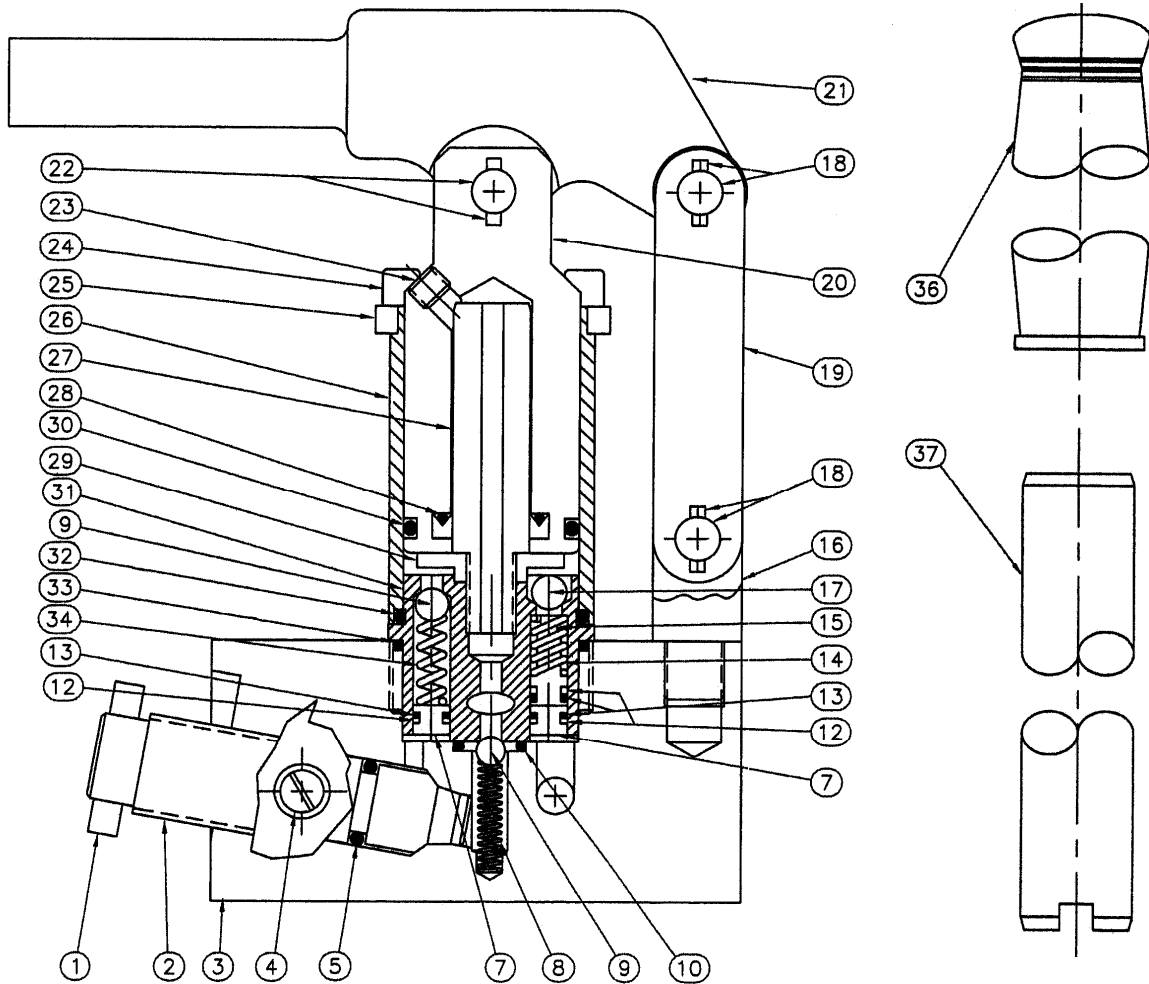


FIGURE 9.13.9.a – Two Stage Pump with Relief

**Model: 5Q11
Hydraulic Power Unit**

9.13.5.a Two Stage Pump with Relief (continued)

PARTS LIST

Fluid Type: MIL-PRF-5606

Item	Part Number	Description	Qty
1	519-000	Pin	1
3	CXC-990022-001	Body	1
7	505-001	Plug, Valve Body	3
15	571-121	Piston, Bypass Assembly	1
16	508-000	Pivot	1
20	566-125	Piston L.P.	1
23	583-120	Plug	1
24	09-ADDF-04-20 X 56	Tie Rod	4
25	582-125	Flange	1
26	563-121	Tube	1
27	562-125	H.P. Piston	1
29	564-120	Retainer	1
31	560-120	Valve Body	1
36	H-1223	Grip, Handle	1
37	H-1009-01	Handle with Grip	1
	HK-1095	Kit, Internal Parts; consists of:	
6	(Not Shown)	Ball, Release	0
8		Spring, Outlet Check	1
9		Ball, Check	4
14		Spring, Bypass	1
17		Ball, Bypass	1
34		Spring, L.P. Outlet	1
35		Spring, H.P. Outlet	1
38		Spring, Intake L.P.	1
	HK-1029	Kit, Pump Seal; consists of: 1	
5		O-ring, BUNA	1
10		O-ring, BUNA	1
12		Backup Ring (Teflon)	4
13		O-ring, BUNA	4
28		H.P. Piston Seal	1
30		O-ring, BUNA	1
32		O-ring, BUNA	1
33		O-ring, BUNA	1
	HK-1068	Kit, Pump Linkage; consists of: 1	
18		Pin Linkage Assembly	2
19		Strap	2
21		Handle Bracket	1
22		Clevis Pin Assembly	1
	HK-3118	Kit, Release Screw; consists of: 1	
2		Screw, Release/Relief	1
4		Retainer, Release Screw	1

9.13 Additional Features continued on following page.



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.13 ADDITIONAL FEATURES (continued)

9.13.6 Towing Trailer (Option N)

Capacity: 4,000 lbs (1,814 kg)

Front Axle Capacity: 2,000 lbs (907 kg)

Rear Axle Capacity: 2,000 lbs (907 kg)

Tires: 4.80-8NHS x 6 Ply
Rated at 970 lbs (440 kg)
(105 psi at 10 mph/7.24 bar at 16 kph)

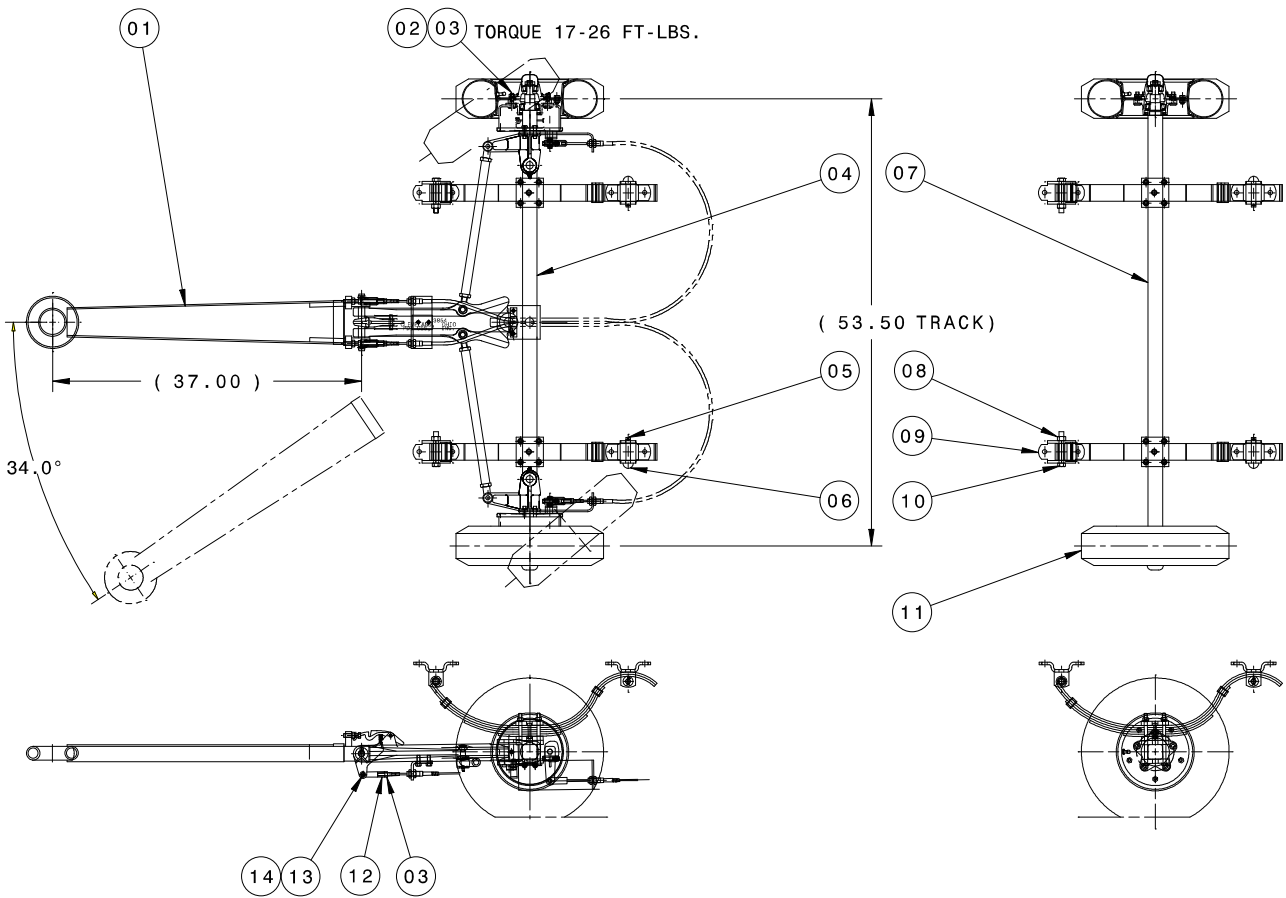


FIGURE 9.13.6 – Towing Trailer

**Model: 5Q11
Hydraulic Power Unit**

9.13.6 Towing Trailer (Option M) (continued)

PARTS LIST

Item	Part Number	Description	Qty
1	59-3502	Assembly, Drawbar	1
2	4700-4	Lockwasher (3/8)	20
3	4601-47	Nut, Hex Head (3/8-24)	22
4	6-1395	Assembly, Front Axle	1
5	4800-3	Pin, Cotter	4
6	5403-1	Rivet	4
7	8-1345	Assembly, Rear Axle	1
8	4601-33	Nut, Self-Locking (9/16-12)	4
9	4251	Bracket, Spring	8
10	4901-19	Bolt (9/16-12 x 3 ³ / ₄ "	4
11	5-3705	Wheel and Tire Assembly	4
12	5205	Yoke	2
13	5206	Pin, Yoke	2
14	4800-2	Pin, Cotter (3/32 x 3/4"	2

9.0 Maintenance continued on following page



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

9.0 MAINTENANCE *(continued)*

9.14 REPLACEMENT LABELS PARTS LISTS

9.14.1 Base Unit

Part Number	Description	Qty
V-1001	"Made in USA"	1
V-1033-01	"TRONAIR"	1
V-1050	ISO Electrical Shock Symbol	2
V-1365	"SYSTEM PRESSURE"	1
V-1366	"HPU BY-PASS VALVE"	1
V-1374	"ROTATION"	1
V-1470	"CAUTION . . ."	1
V-1882	Control Panel Lights	1
V-1883	"HOUR METER"	1
V-1884	"FLOWMETER"	1
V-1886	"PYROMETER"	1
V-1888	"SHUT-OFF/CALIBRATION PORT"	1
V-1893	"SAMPLE VALVE"	1
V-1894	"PRESSURE"	1
V-1895	"RETURN"	1
V-1896	"MAXIMUM OIL LEVEL"	1
V-1897	"MINIMUM OIL LEVEL"	1
V-1898	"PRESSURE and FLOW CONTROLS INSIDE"	1
V-1900	"WARNING KEEP 5 FT CLEAR . . ."	2
V-1914	Reservoir Selector Valve	1
V-1918	"PE"	1
V-1919	"OPERATING INSTRUCTIONS . . ."	1
V-2008	"FLOW INCREASE"	1
V-2009	"PRESSURE INCREASE"	1

9.14.2 Fluid Labels

Fluid Type: MIL-PRF-5606

Part Number	Description	Qty
V-1975	"MIL-PRF-5606"	2

9.14.3 Filter Element Kit Labels

Fluid Type: MIL-PRF-5606

Part Number	Description	Qty
V-1959	"REPLACEMENT FILTER ELEMENT K-3613"	1
V-1961	"REPLACEMENT FILTER ELEMENT K-3615"	1
V-1916	"REPLACEMENT DESICCANT FILTER ELEMENT HC-1763"	1

9.14.4 Triple System

Part Number	Description	Qty
V-2004	"SYSTEM 1 PRESSURE"	1
V-2005	"SYSTEM 2 PRESSURE"	1
V-2006	"SYSTEM 1 RETURN"	1
V-2007	"SYSTEM 2 RETURN"	1
V-2217	"SYSTEM 3 PRESSURE"	1
V-2218	"SYSTEM 3 RETURN"	1



**Model: 5Q11
Hydraulic Power Unit**

9.14 REPLACEMENT LABELS PARTS LISTS *(continued)*

9.14.5 Hand Pump (Option M) Labels

Part Number	Description	Qty
V-1887	"HAND PUMP PRESSURE"	1
V-1915	"HAND PUMP"	1
V-1988	"REPLACEMENT FILTER ELEMENT K-3751"	1

10.0 PROVISION OF SPARES

10.1 SOURCE OF SPARE PARTS

TRONAIR, Inc.
1740 Eber Road
Holland, Ohio 43528-9794 USA

Telephone: (419) 866-6301 or 800-426-6301
Fax: (419) 867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

10.2 RECOMMENDED SPARE PARTS LISTS

It is recommended that the following spare parts be kept on hand and available for immediate use during maintenance.

10.2.1 Spare Electrical Parts

Part Number	Description	Qty
<i>Refer to Section 9.10 Electrical Components Item 20</i>	Fuse, Transformer Primary	2
EC-1542-09	Fuse, Transformer Secondary	1
<i>Refer to Section 9.10 Electrical Components Item 22</i>	Fuse, Heat Exchanger	3
EC-1675-12	Fuse, Phase Monitor <i>(Optional)</i>	3
<i>Refer to Section 9.10 Electrical Components Item 2</i>	Fuse, Main Power	3

10.2.2 Spare Parts

Fluid Type: MIL-PRF-5606

Part Number	Description	Qty
HC-1763	Desiccant Filter Element	1
*	Kit, Gaskets and O-rings for Main Pump	1
K-3613	Kit, Pressure Filter Element	1
K-3615	Kit, Return Filter Element	1
*	Kit, Shaft Seal and Retainer for Main Pump	1
K-3751	Kit, Hand Pump Filter Element <i>(Optional)</i>	1

* *Not available at time of publishing. Call Tronair for Part Number.*



**Model: 5Q11
Hydraulic Power Unit**

11.0 ELECTRICAL POWER REQUIREMENTS

11.1 The electrical power supply for the HPU must include a fused disconnect using Type J or Type R fuses or equivalent magnetic type circuit breakers designed for protecting an electrical motor. This necessary equipment is for protection of the HPU, power cord, and customer-supplied plug and receptacle. *Reference the Table below:*

ELECTRICAL POWER AND PROTECTION REQUIREMENTS

60 Hz Applications					
Voltage	208	230	380	460	575
Full Load Amps	117.2	106	57	53	42
Locked Rotor Amps	642	580	348	290	232
Recommended Fuse Size	150	150	80	70	60
Maximum Fuse Size	175	150	80	80	60

50 Hz Applications					
Voltage	200	220	380	415	440
Full Load Amps	120.5	103	62	60	56
Locked Rotor Amps	642	570	372	360	303
Recommended Fuse Size	150	125	80	80	70
Maximum Fuse Size	175	150	90	90	80

12.0 CALIBRATION OF INSTRUMENTATION

All gauges on the Hydraulic Power Unit can be either returned to Tronair for calibration or certified by the end user if proper calibration equipment is available. Gauges returned to Tronair for calibration will be tested with standards traceable to N.I.S.T. (National Institute of Standards and Technology). Tronair recommends calibration of instrumentation at yearly intervals, but actual calibration dates may be based upon frequency of use and the end users quality system. For information on returning gauges for calibration, Reference **12.1 – Source of Calibration**.

12.1 SOURCE OF CALIBRATION

TRONAIR, Inc.
1740 Eber Road
Holland, Ohio 43528-9794 USA

Telephone: (419) 866-6301 or 800-426-6301
Fax: (419) 867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

12.2 ANALOG PRESSURE GAUGE – System Pressure

12.2.1 Self Calibration

An accurate pressure calibration gauge is required for calibration of the System Pressure gauge. There are two methods available. Method A can be used if the HPU is equipped with a calibration port (*Option Q*). Method B must be used if the HPU is **not** equipped with a calibration port. Follow the necessary steps below.

NOTE: Method A can only test the gauge up to the rated operating pressure of the HPU (3,500 psi).



**Model: 5Q11
Hydraulic Power Unit**

12.2.1 Self Calibration (continued)

Method A: Shut off HPU and disconnect from aircraft. Close the calibration port **Shut-off Valve** on the instrument panel of the HPU. Attach the “Master” calibration gauge to the **Calibration Port** on the instrument panel.

Set up the HPU as follows:

Reservoir Selector ValveSet to HPU Reservoir
 Bypass ValveOpen
 Pressure Ball Valves (at rear of unit).....Closed
 Return Ball Valves (at rear of unit)Closed

Start the HPU. Open the calibration port Shut-off Valve. Close the Bypass valve to build system pressure. Record gauge values at the designated increments.

Open the Bypass valve.

Shut off the HPU and close the calibration port Shut-off Valve before disconnecting the “Master” calibration gauge.

Method B: Shut off the HPU and disconnect it from the power source. Remove the **Hydraulic Panel** from the front instrument panel (four screws). Disconnect the hose from the System Pressure gauge (remove gauge from panel if necessary). Attach calibration test equipment to the gauge and record gauge values at the designated increments.

SYSTEM PRESSURE GAUGE (HC-2144)

Applied Pressure (System Pressure Gauge) (psig)	Minimum Acceptable (psig)	Maximum Acceptable (psig)	Gauge Movement (Direction)	Indicated Pressure (Calibration Gauge) (psig)
1000	940	1060	Increasing	
2000	1940	2060	Increasing	
3000	2940	3060	Increasing	
4000	3940	4060	Increasing	
5000	4940	5060	Increasing	
6000	5940	6060	Increasing	
5000	4940	5060	Decreasing	
4000	3940	4060	Decreasing	
3000	2940	3060	Decreasing	
2000	1940	2060	Decreasing	
1000	940	1060	Decreasing	
Allowable operating tolerance: +/- 1% of full scale (60 psig) at room temperature (70° F).				

12.0 Calibration of instrumentation continued on following page



06/2010 – Rev. 05

**Model: 5Q11
Hydraulic Power Unit**

12.0 CALIBRATION OF INSTRUMENTATION *(continued)*

12.3 ANALOG PRESSURE GAUGE (Hand Pump Pressure- *Option M Only*)

12.3.1 Self Calibration

An accurate pressure calibration gauge is required for calibration of the Hand Pump Pressure gauge. Follow the necessary steps below.

Shut off the HPU and disconnect it from the power source. Remove the **Hydraulic Panel** from the front instrument panel (four screws). Disconnect the hose from the Hand Pump Pressure gauge (remove gauge from panel if necessary). Attach calibration test equipment to the gauge and record gauge values at the designated increments.

HAND PUMP PRESSURE GAUGE (HC-2146)

Applied Pressure (Hand Pump Pressure Gauge) (psig)	Minimum Acceptable (psig)	Maximum Acceptable (psig)	Gauge Movement (Direction)	Indicated Pressure (Calibration Gauge) (psig)
1000	700	1300	Increasing	
2000	1700	2300	Increasing	
5000	4800	5200	Increasing	
8000	7700	8300	Increasing	
10,000	9700	10,300	Increasing	
8000	5940	8300	Decreasing	
5000	4800	5200	Decreasing	
2000	1700	2300	Decreasing	
1000	700	1300	Decreasing	
Allowable operating tolerance: +/- 3% of full scale (300 psig) at room temperature (70° F). +/- 2% of full scale for middle third of scale (200 psig) at room temperature (70° F).				

12.4 ANALOG TEMPERATURE GAUGE (*Pyrometer*)

12.4.1 Self Calibration

An accurate temperature calibration gauge is required for calibration of the Pyrometer. The pyrometer bulb is located in the return manifold (rear of unit) and can be accessed by removal of the HPU top panel. See Section **9.7.2 – Pyrometer** for location. Follow the necessary steps below.

1. Remove the pyrometer bulb from the return manifold by removing the slotted brass nut that retains the bulb in the well.
2. Connect the temperature calibration gauge to the bulb of the pyrometer.

The Temperature Value Must Be:

Pyrometer Temperature Display (° F)	Minimum Acceptable (° F)	Maximum Acceptable (° F)	Temperature Calibration gauge (° F)
140	139	141	

**Model: 5Q11
Hydraulic Power Unit**

13.0 IN SERVICE SUPPORT

Contact Tronair, Inc. for technical services and information. See Section **1.3 – Manufacturer**.

14.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**

15.0 APPENDICES

APPENDIX I	Declaration of Conformity
APPENDIX II	Hydraulic Schematic (INS-1955)
APPENDIX III	Electrical Schematic (INS-1608 & INS-2016)
APPENDIX IV	Wiring Diagram (INS-1597 & INS-2046)
APPENDIX V	Lincoln Motor Manual
APPENDIX VI	Oilgear Pump Manual - PVG
APPENDIX VII	Material Safety Data Sheet (MSDS) pertaining to MIL-PRF-5606 Fluid
APPENDIX VIII	ANSI/B93.19M-1972 (R1993-Excerpt)
APPENDIX IX	Instrument Certification Notice



APPENDIX I

Declaration Of Conformity



Declaration of Conformity

The design, development and manufacture is in accordance with European Community guidelines

Mobile Hydraulic Power Unit (Electric Motor Driven)

Relevant draft complied with by the machinery:
prEN 1915-1:1995

Relevant standards complied with by the machinery:
prEN 982:1996
prEN 60204-1:1997
HFPA/JIC T2.24.1-1990
ISO 4021:1997
ARP 1247B
NFPA 70/NEC 1999

Identification of person empowered to sign on behalf of the Manufacturer:

A handwritten signature in black ink that reads "David L. Kidd". The signature is written in a cursive style and is positioned above a horizontal line.

Quality Assurance representative



APPENDIX II

**Hydraulic Schematic
(INS-1955)**



APPENDIX III

**Electrical Schematic
(INS-1608 & INS-2016)**



APPENDIX IV

**Wiring Diagram
(INS-1597 & INS-2046)**



APPENDIX V

Lincoln Motor Manual

Carefully read and fully understand this Owner's Manual prior to installation, operation and maintenance of your motor.

1. SAFETY DEPENDS ON YOU

Lincoln motors are designed and manufactured with safety in mind. However, your overall safety can be increased by properly installing, operating and maintaining the motor. Read and observe all instructions, warnings and specific safety precautions included in this manual and **THINK BEFORE YOU ACT!**


2. RECEIVING AND INSPECTION

Check packing list and inspect motor to make certain no damage has occurred in shipment. Claims for any damage done in shipment must be made by the purchaser against the transportation company.

Turn the motor shaft by hand to be certain that it rotates freely. Be careful not to cut yourself on the shaft keyway; it is razor sharp!

Check the nameplate for conformance with power supply and control equipment requirements.

3. HANDLING

⚠ WARNING	
	<p>FALLING EQUIPMENT can injure.</p> <ul style="list-style-type: none"> ● Lift only with equipment of adequate lifting capacity. ● If so equipped, use lift ring(s) on the motor to lift ONLY the motor and accessories mounted by Lincoln.

In case of assemblies on a common base, the motor lift ring(s) **CANNOT** be used to lift the assembly and base but, rather, the assembly should be lifted by a sling around the base or by other lifting means provided on the base. In all cases, care should be taken to assure lifting in the direction intended in the design of the lifting means. Likewise, precautions should be taken to prevent hazardous overloads due to deceleration, acceleration or shock forces.

4. STORAGE

Motor stock areas should be clean, dry, vibration free and have a relatively constant ambient temperature. For added bearing protection while the motor is in storage, turn the motor shaft every six months.

A motor stored on equipment and component equipment prior to installation should be kept dry and protected from the weather. If the equipment is exposed to the atmosphere, cover the motor with a waterproof cover. Motors should be stored in the horizontal position with drains operable and positioned in the lowest point. **CAUTION:** Do not completely surround the motor with the protective covering. The bottom area should be open at all times.

Windings should be checked with a megohm-meter (Megger) at the time equipment is put in storage. Upon removal from storage, the resistance reading must not have dropped more than 50% from the initial reading. Any drop below this point necessitates electrical or mechanical drying. Note the sensitivity of properly connected megohm-meters can deliver erroneous values. Be sure to carefully follow the megohm-meter's operating instructions when making measurements.

All external motor parts subject to corrosion, such as the shaft and other machined surfaces, must be protected by applying a corrosion-resistant coating.

5. INSTALLATION

For maximum motor life, locate the motor in a clean, dry, well ventilated place easily accessible for inspecting, cleaning and lubricating. The temperature of the surrounding air should not exceed 104°F (40°C) except for motors with nameplates indicating a higher allowable maximum ambient temperature.

⚠ WARNING	
	<p>MOVING PARTS can injure.</p> <ul style="list-style-type: none"> ● BEFORE starting motor, be sure shaft key is captive. ● Consider application and provide guarding to protect personnel.

5.1 INSTALLATION – MECHANICAL

Base

Mount the motor on a firm foundation or base sufficiently rigid to prevent excessive vibration. On foot-mounted motors, use appropriately sized bolts through all four mounting holes. For frames which have six or eight mounting holes, use the two closest the drive shaft and two on the end opposite the drive shaft (one on each side of the frame). If necessary, properly shim the motor to prevent undue stress on the motor frame and to precision align the unit.

Position

Standard motors may be mounted in any position. The radial and thrust load capacity of the motor's bearing system provides for this feature.

Drains

All motors have drain holes located in the end brackets. As standard, drains are in place for the horizontal with feet down mounting position. Other positions may require either rotation of the end brackets or drilling additional holes to attain proper drainage. Be sure existing drain or vent holes do not permit contaminant entry when motor is mounted in the other positions.

Additional drain holes exist near the bearing cartridge in both end brackets of 284T thru 449T steel frame motors. The drain holes are closed with a plastic plug. When the motor is vertically mounted, the plug located in the lower end bracket must be removed. To access the plug on blower end, simply remove the shroud; on some models, it is also necessary to take off the blower.

Drive – Power Transmission

The pulley, sprocket, or gear used in the drive should be located on the shaft as close to the shaft shoulder as possible. Do not drive the unit on the shaft as this will damage the bearings. Coat the shaft lightly with heavy oil before installing pulley.

Belt Drive: Align the pulleys so that the belt(s) will run true. Consult the belt manufacturer's catalog for recommended tension. Properly tension the belt; excessive tension will cause premature bearing failure. If possible, the lower side of the belt should be the driving side. On multiple belt installations be sure all belts are matched for length.

Chain Drive: Mount the sprocket on the shaft as close to the shaft shoulder as possible. Align the sprockets so that the chain will run true. Avoid excessive chain tension.

Gear Drive and Direct Connection: Accurate alignment is essential. Secure the motor and driven unit rigidly to the base. Shims may be needed to achieve proper alignment.

Excessive motor vibration may result if the full length of the motor shaft key is not completely engaged by the coupling or sheave. For these situations, adjustment of the key length is required.

5.2 INSTALLATION – ELECTRICAL

⚠ WARNING

ELECTRIC SHOCK can kill.

- Disconnect input power supply before installing or servicing motor.
- Motor lead connections can short and cause damage or injury if not well secured and insulated.

- Use washers, lock washers and the largest bolt size which will pass through the motor lead terminals in making connections.
- Insulate the connection, equal to or better than the insulation on the supply conductors.
- Properly ground the motor — see GROUNDING.

Check power supply to make certain that voltage, frequency and current carrying capacity are in accordance with the motor nameplate.

Proper branch circuit supply to a motor should include a disconnect switch, short circuit current fuse or breaker protection, motor starter (controller) and correctly sized thermal elements or overload relay protection.

Short circuit current fuses or breakers are for the protection of the branch circuit. Starter or motor controller overload relays are for the protection of the motor.

Each of these should be properly sized and installed per the National Electrical Code and local codes.

Properly ground the motor – See GROUNDING.

Terminal Box

Remove the appropriate knockout. For terminal boxes without a knockout, either a threaded power-conduit entry hole is provided or the installer is responsible for supplying a correctly sized hole.

The majority of terminal boxes can be rotated in place to allow power lead entry from the 3, 6, 9 or 12 o'clock direction.

Motor Connection

All single speed and two-speed Lincoln motors are capable of across-the-line or autotransformer starting. Reference the lead connection diagram located on the nameplate or inside of the terminal box cover.

Single speed motors have reduced voltage start capability per the following chart.


Number of Motor Leads	Number of Rated Voltages	Lead Numbers	YDS	PWS
3	Single	1-3	No	No
6	Single	1-3, 7-9	No	Yes
	Single	1-6	Yes	No
9	Dual	1-6	Yes ⁽¹⁾	No
	Dual	1-9	No	No
12	Single	1-12	Yes	Yes
	Dual	1-12	Yes	No ⁽²⁾

(1) YDS capability on lower voltage only.


(2) PWS capability on lower voltage only, 1200 RPM, 324T-365T steel frame motors with Model Number efficiency letters of "S" or "H".

Contact Customer Service at 1-800-668-6748 (phone), 1-888-536-6867 (fax) or mailbox@lincolnmotors.com (e-mail) for a copy of across-the-line and other reduced voltage start connection diagrams.


Connection Diagram 1

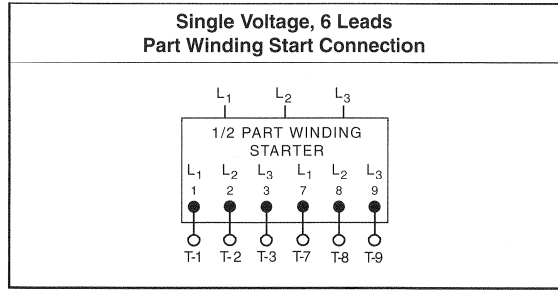


Connection Diagram 2

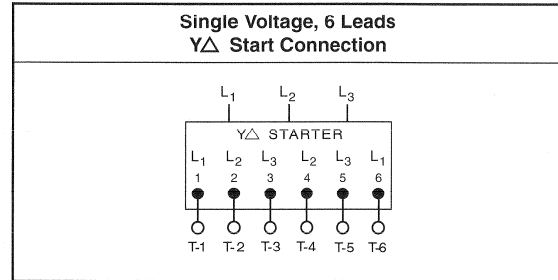


Connection Diagram 3

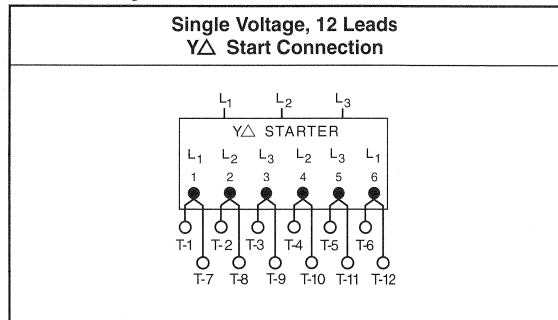

Connection Diagram 4

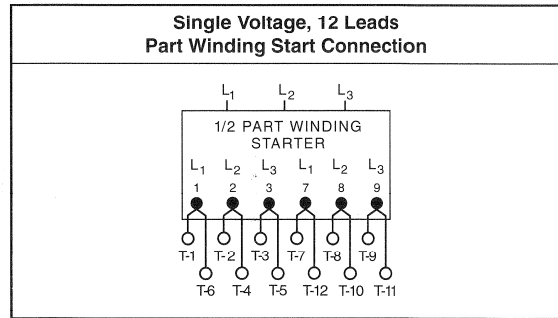

Connection Diagram 5

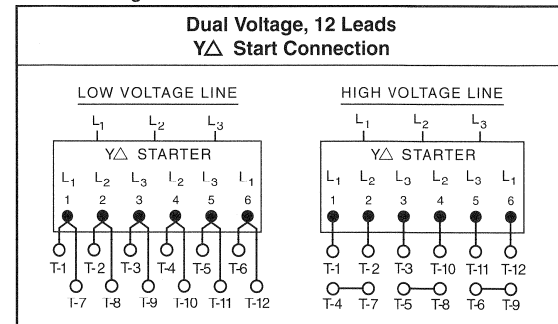

Space Heater (option)

Leads for space heaters are identified as H1 and H2. Heater voltage and watts are marked on the motor nameplate and should be checked prior to connection to power source.

Thermostat (option)

Leads for thermostats (normally closed, automatic reset contacts) are identified as P1 and P2. Connect these to a relay or signaling device. Motor line current cannot be handled by the thermostat.

Table 1 — Thermostat Contact Ratings

Voltage (60 Hz)	110V	220V
Max. Cont. Current (amps)	3.0	1.5
Min. Cont. Current (amps)	0.2	0.1

Thermistor (option)

Leads for thermistors are identified as P3 and P4. Thermistors require connection to Texas Instruments® Control Module Model 32AA or its equivalent for proper operation. This item may be purchased from Lincoln - see LC100 catalog.

Brake (option)

Carefully read and fully understand the instructions supplied by the brake manufacturer (see inside of brake housing or separately enclosed sheet). Contact the brake manufacturer for additional information.

GROUNDING

WARNING

ELECTRIC SHOCK can kill.

- **Connect the motor frame to a good earth ground per the National Electrical Code and local codes to limit the potential to ground in the event of contact between live electrical parts and the metal exterior.**

Lincoln motors may be electrically connected to earth ground using a terminal box mounting screw or a separate grounding screw when provided. Both are accessible inside the mounted terminal box. When a bronze mounting screw is supplied, always use it as the grounding point. In making the ground connection, the installer should make certain that there is a good electrical connection between the grounding lead and the motor.

6. OPERATION

Three phase squirrel cage induction motors will operate successfully, but not necessarily in accordance with nameplate ratings, at voltages 10 percent above or below nameplated value at the design frequency.

WARNING

MOVING PARTS can injure.

- **Before starting the motor, remove all unused shaft keys and loose rotating parts to prevent them from flying off and causing bodily injury.**
- **Keep away from moving parts.**

ELECTRIC SHOCK can kill.

- **Do not operate with covers removed.**
- **Do not touch electrically live parts.**

After checking that the shaft key is secure, operate the motor free of load and check the direction of rotation. If the motor rotates in the wrong direction, interchange any two supply leads.

Couple the motor to its load and operate it for a minimum of one hour. During this period, check for any unusual noise or thermal conditions. Check the actual operating current to be sure that the nameplate current times service factor is not exceeded for steady continuous loads.

7. MAINTENANCE

WARNING

ELECTRIC SHOCK can kill.

- **Internal parts of the motor may be at line potential even when it is not rotating.**
- **Disconnect all input power to the drive and motor before performing any maintenance.**

Lincoln motors have been designed and manufactured with long motor life expectancy and trouble-free operation in mind.

Periodically inspect the motor for excessive dirt, friction or vibration. Dust may be blown from an inaccessible location using compressed air. Keep the ventilation openings clear to allow free passage of air. Make sure the drain holes in the motors are kept open and the shaft slinger is positioned against the end bracket. Grease or oil can be wiped by using a petroleum solvent.

Overheating of the bearings caused by excessive friction is usually caused by one of the following factors:

1. Bent shaft.
2. Excessive belt tension.
3. Excessive end or side thrust from the gearing, flexible coupling, etc.
4. Poor alignment.

Damaging vibrations can be caused by loose motor mountings, motor misalignment resulting from the settling or distortion of the foundation, or it may be transmitted from the driven machine. Vibration may also be caused by excessive belt or chain tension.

BEARING SYSTEM

Lincoln motors have a high quality, premium design bearing system. Bearing sizes and enclosures are identified on most motor nameplates. The majority are double-shielded, deep-groove ball bearings. Double-sealed ball bearings are used on some motors in frames 56 and 143T thru 145T. A drive-end cylindrical roller bearing is standard on Crusher Duty motors, frames 405T and larger.

Lubrication instructions and/or grease specifications provided on the motor supersede the following information.

In general, the motor's bearing system has sufficient grease to last indefinitely under normal service conditions. For severe or extreme service conditions, it is advisable to add one-quarter ounce of grease to each bearing per the schedule listed in Table 2. Use a good quality, moisture-resistant, polyurea-based grease such as Chevron SRI #2. Lithium based greases are not compatible with polyurea-based greases; mixing the two types may result in the loss of lubrication.

Motors designed for low ambient applications have bearings with special low temperature grease. Use Beacon 325 lithium based grease or equivalent per the appropriate interval in Table 2.

Motors designed for high ambient applications have bearings with special high temperature grease. Use Dow Corning DC44 silicone grease or equivalent per the interval in Table 2 under "Extreme".

Severe Service: Operating horizontally, 24 hours per day, vibration, dirty, dusty, high humidity, weather exposure, or ambient temperatures from 104-130°F (40-55°C).

Extreme Service: Operating vertically, heavy vibration or shock, heavy duty cycle, very dirty or ambient temperatures from 130-150°F (55-65°C).

Table 2 : Bearing Lubrication Intervals

Motor Syn Speed	Motor Horsepower	Service Conditions	
		Severe	Extreme
BALL BEARINGS			
1800 RPM and slower	1/4 to 7-1/2 HP	2 years	6 months
	10 to 40 HP	1 year	3 months
	50 HP and up	6 months	3 months
above 1800 RPM	all sizes	3 months	3 months
ROLLER BEARINGS			
all speeds	all sizes	3 months	3 months

When adding lubricant, keep all dirt out of the area. Wipe the fitting completely clean and use clean grease dispensing equipment. More bearing failures are caused by dirt introduced during greasing than from insufficient grease.

If the motor is equipped with a relief port or tube, make certain it is open and free of caked or hardened grease. Before replacing relief plugs, allow excess grease or pressure to vent by running the motor for several minutes after lubrication.

⚠ CAUTION

- LUBRICANT SHOULD BE ADDED AT A STEADY MODERATE PRESSURE. IF ADDED UNDER HEAVY PRESSURE BEARING SHIELD(S) MAY COLLAPSE.
- DO NOT OVER GREASE.

PARTS

All parts should be ordered from Authorized Motor Warranty Stations. Call your Lincoln Motors Sales Office for location and phone number. A "Service Directory" listing all Authorized Motor Warranty Stations by geographic location is available; request Bulletin SD-6. These shops stock GENUINE Lincoln replacement parts and have factory trained personnel to service your motor.

8. WHO TO CALL

For the location and phone number of the Lincoln Motors District Sales Office nearest you, check your local Yellow Pages or call 1-800-MOTOR-4-U (1-800-668-6748) or visit our web site at # www.lincolnmotors.com.



LINCOLN MOTORS
Cleveland OH 44117-2525 USA
Tel: 1-800-MOTOR-4-U (668-6748)
Fax: 1-888-536-6867
Web: www.lincolnmotors.com
E-Mail: mailbox@lincolnmotors.com

IM566-A December 1999

9. WARRANTY

Lincoln Motors, the Seller, warrants all new *standard* motors and accessories thereof against defects in workmanship and material provided the equipment has been properly cared for and operated under normal conditions. All warranty periods begin on the date of shipment to the original purchaser. Warranty periods for **low voltage (< 600 V)** motors are defined in the following chart. The warranty period for **medium voltage (> 600 V)** motors is one year on sine-wave power. Contact Lincoln for warranty period on PWM power.

Model Number Prefix	Efficiency Code(s)	Frame Sizes	Warranty Period	
			Sine-Wave Power	PWM Power
AA, AF, AN	S, P, B	143T-286T	5 Yrs	2 Yrs*
CF, SD	M	143T-215T	2 Yrs	1 Yr
CF, CN, CS, CP	E, H, P, B	143T-449T	5 Yrs	2 Yrs*
		182U-449U	5 Yrs	2 Yrs*
C5, C6	H, P	M504-689	3 Yrs	Contact Lincoln #
MD, SE	S	284T-445T	5 Yrs	1 Yr
RC, RJ, SC	H	56-145T	5 Yrs	2 Yrs*
RD, RF	S	56-56H	5 Yrs	2 Yrs*
REW, SEW	S	56-256T	1 Yr	1 Yr
SD, SF	S, H, P, B	143T-449T	5 Yrs	2 Yrs*
Field Kits and Accessories			5 Yrs	

* Applies to motors with a service factor of 1.15 or higher. Motors with a 1.0 service factor have a 1 year warranty on PWM power.

If the Buyer gives the Seller written notice of any defects in equipment within any period of the warranty and the Seller's inspection confirms the existence of such defects, then the Seller shall correct the defect or defects at its option, either by repair or replacement F.O.B. its own factory or other place as designated by the Seller. The remedy provided the Buyer herein for breach of Seller's warranty shall be exclusive.

No expense, liability or responsibility will be assumed by the Seller for repairs made outside of the Seller's factory without written authority from the Seller.

The Seller shall not be liable for any consequential damages in case of any failure to meet the conditions of any warranty. The liability of the Seller arising out of the supplying of said equipment or its use by the Buyer, whether on warranties or otherwise, shall not in any case exceed the cost of correcting defects in the equipment in accordance with the above guarantee. Upon the expiration of any period of warranty, all such liability shall terminate.

The foregoing guarantees and remedies are exclusive and except as above set forth there are no guarantees or warranties with respect to accessories or equipment, either expressed or arising by option of law or trade usage or otherwise implied, including with limitation the warranty of merchantability, all such warranties being waived by the Buyer.

- indicates change since last printing.



APPENDIX V

Oilgear Pump Manual

SERVICE INSTRUCTIONS

OILGEAR TYPE "PVG" PUMPS

PURPOSE OF INSTRUCTIONS

These instructions have been prepared to simplify your work of installing, operating and maintaining Oilgear type "PVG" pumps. Your acquaintance with the construction, principle of operation and characteristics of these units will help you attain satisfactory performance, reduce shut-down and increase the units life. Some units have been modified from those described in this bulletin and other changes may be made without notice.

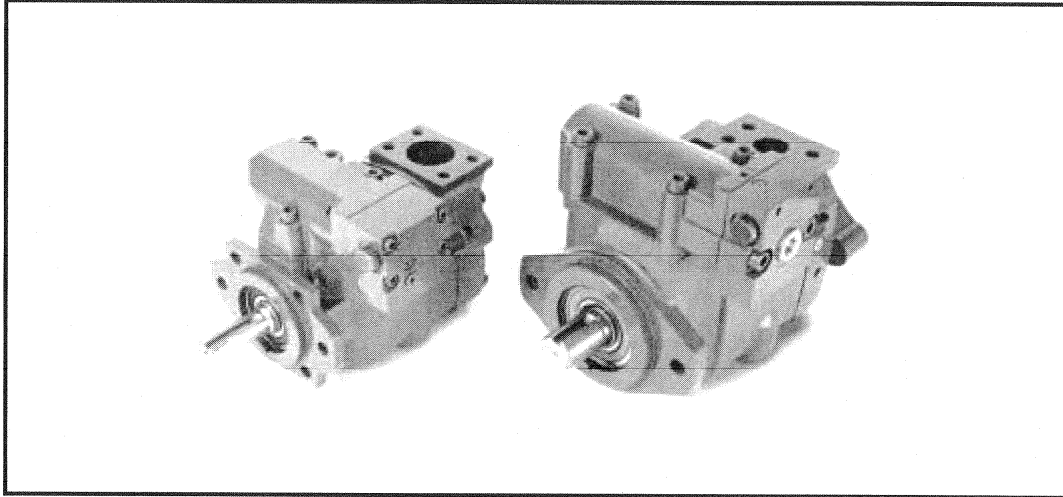


Figure 1. Typical Oilgear "PVG" 065/075 (left) and 100/130 (right) Open Loop Pumps. (95069)

REFERENCE MATERIAL

Fluid Recommendations	Bulletin	90000	"P-1NN/G" Horsepower Limit	
Contamination Evaluation Guide	Bulletin	90004	w/Load Sense	Data Sheet 947544
Filtration Recommendations	Bulletin	90007	"P-2--" Dual Pressure Compen.	Data Sheet 947545
Piping Information	Bulletin	90011	"P-A" and "P-B" Elect. Proportional	
			Pres. Compen.	Data Sheet 947546
PUMP CONTROL INSTRUCTIONS			"P-C--" Soft Starting	Data Sheet 947547
"P-1NN" Pressure Compensator	Data sheet	947541	"V-S" Electrohydraulic Servo Valve	
"P-1NN/F" Pres. Compen. W/Load Sense	Data Sheet	947542	w/o Amplifier	Data Sheet 947719
"P-1NN/H" Pres. Compen.			"V-A" Electrohydraulic Servo Valve	
W/H.P. Limited	Data Sheet	947543	w/Amplifier	Data Sheet 947720

I PREPARATION AND INSTALLATION

A. MOUNTING

PUMP WITHOUT RESERVOIR. The pump may be mounted in any position. But, for convenience the recommended mounting position is with the driveshaft on a horizontal plane and with case drain port 1 on the top side. Secure the unit to a rigid mounting surface. See section "B" on "Piping Information".

PUMP WITH RESERVOIR. These units are usually fully piped and equipped although it may be necessary to connect to super-

charge circuit when used. Mount reservoir on level foundation with reservoir bottom at least six (6) inches above floor level to facilitate fluid changes.

B. PIPING AND FITTINGS

See referenced "Piping Information" bulletin and individual circuit diagram before connecting pump to system. Inlet velocity must not exceed 5 fps (1,5 mps). Inlet should be unrestricted and have a minimum of fittings. An inlet strainer is not recommended.

THE OILGEAR COMPANY

2300 So. 51st. Street
Milwaukee, Wisconsin 53219

Re-Issued Sept., 1995

Bulletin 947019A

Arrange line from "case drain" so case remains full of fluid (non-siphoning). Case pressure be less than 25 psi (1,7 bar). For higher case pressures and special shaft seals required, contact our factory. The PVG-100 case to inlet differential pressure must be less than 60 psi (4,1 bar) for speeds of 1200 and 1800 rpm. The PVG-130 case to inlet differential pressure must be less than 60 psi (4,1 bar) for 1200 rpm and less than 50 psi (3,4 bar) for 1800 rpm. Case to inlet differential pressure can be described as (case pressure minus inlet pressure). For speeds above 1800 rpm, contact our factory. Each drain line must be a separate line, unrestricted, full sized and connected directly to the reservoir below lowest fluid level. Provisions for opening this line without draining (siphoning) reservoir should be made.

WARNING

Running pump in "Neutral" position (servo delivery) for long periods of time without supercharge can damage the pump.

System and pump must be protected against overloads by separate high pressure relief valves. Install bleed valve(s) at highest point(s) in system.

C. POWER

Power is required in proportion to volume and pressure used. Motor size recommendations for specific applications can be obtained from The Oilgear Company. Standard low starting torque motors are suitable for most applications.

CAUTION

Never start or stop unit under load unless system is approved by Oilgear. It may be necessary to provide delivery bypass in some circuits.

D. DRIVE

See rotation direction plate on unit's housing. Clockwise units should not be driven counter-clockwise nor counter-clockwise units driven clockwise. Use direct drive coupling. Size and install coupling per manufactures instructions.

CAUTION

Do not drive coupling onto pump driveshaft. If it is too tight, it may be necessary to heat coupling (see manufacture's instructions).

Misalignment of pump shaft to driver's shaft should not exceed 0.005" (0,13 mm) Total Indicator Readout (TIR) in any plane.

E. FILTRATION

To assure long life from your hydraulic system keep fluid clean at all times. See reference bulletin on "Filtration Recommendations" and on "Contamination Evaluation". Oilgear recommends use of a filter in the pressure or return line. Replace filter element(s) when filter condition indicator reaches change area at normal fluid temperature. Drain and thoroughly clean filter case. Use replacement element(s) of same beta 10 ratio (normally a ratio of 4 with hydraulic oils).

F. FLUID COOLING

When pump is operated continuously at rated pressure or frequently at peak load, auxiliary cooling of fluid may be necessary. Fluid temperature should not exceed limits specified in referenced Oilgear bulletin on "Fluid recommendations.

G. AIR BREATHER

On most installations, an air breather is mounted on top of fluid reservoir. It is important for the breather to be of adequate size to allow air flow in and out of reservoir as fluid level changes. Keep breather case filled to the "fluid level" mark. About once every six months, remove cover, wash screen in solvent, clean and refill case to level mark and install screen. See manufacturer's recommendations

H. FLUID, FILLING AND STARTING RECOMMENDATIONS

Refer to instruction plate on the unit, reservoir, machine and/or reference "Fluid Recommendations" bulletin. Fire resistant fluids and phosphate ester fluids can be used in accordance with fluid manufactures recommendations.

Pump all fluid into reservoir through a clean (beta 10 ratio of 4 or more) filter. Fill reservoir to, but not above, "high level" mark on sight gage. **Remove case drain line and fill pump case with hydraulic fluid.**

Turn driveshaft a few times by hand with a spanner wrench to be sure parts are free.

Table 1. TORQUE TO TURN SHAFT

Size Unit	075	100
Approx. Torque to turn driveshaft - foot pounds	9	24
-Nm.	12	32

With pump under "no load", or with pump control at "neutral", turn drive unit on and off several times before allowing pump to attain full speed. The system can usually be filled by running the pump and operating the control. Watch the fluid level in the reservoir and stop pump. If the level reaches "low level" mark. Add fluid and start again. With differential (cylinder) systems, fluid must not be above "high level" when ram is retracted or below "low level" when extended. Bleed air from the system by loosening connections or opening petcocks at the highest point in the system. Close connections or petcocks tightly when solid stream of fluid appears.

II. CONSTRUCTION

Refer to Figures 2, 9 and 10. A driveshaft (301) runs through the center line of pump housing (001) and valve plate (401) with pump cylinder barrel (101) splined to it. A bearing (306) supports the outboard end of the driveshaft and a bushing (402) is part of valve plate assembly) supports the inboard end. The pump cylinder barrel is carried in a polymerous (journal type) cylinder bearing (202). The valve plate (401) has two crescent shaped ports. Pumping piston/shoe assemblies (102) in the cylinder barrel are held against a swashblock (201) by a shoe retainer (104). The shoe retainer is held in position by the fulcrum ball (103) which is forced outward by shoe retainer spring (105). The spring acts against the pump cylinder barrel forcing it against the valve plate while also forcing the piston shoes against the swashblock. The semi-cylindrical shaped swashblock limits the piston stroke and can be swivelled in arc shaped saddle bearings (204). The swashblock is swivelled by a control (covered in referenced material).

(See Pages 4 and 5 for "III. PRINCIPLE OF OPERATION").

IV. SPECIFICATIONS

See reference material, pump control material and individual application circuit for exceptions.

Table 2. NOMINAL PERFORMANCE DATA with 150-300 SSU viscosity fluids.

UNIT	THEORETICAL MAXIMUM DISPLACEMENT		RATED CONTINUOUS PRESSURE		MAXIMUM PRESSURE		FLOW RATE at 1800 rpm, rated continuous pressure & 14.7 psia (bar _{abs}) inlet condition		MINIMUM INLET PRESSURE psia (bar _{abs})			MAXIMUM SPEED		POWER INPUT	
	in ³ /rev	ml/rev	psi	bar	psi	bar	gpm	l/mi	1200 rpm	1500 rpm	1800 rpm	rpm	hp	kw	
PVG 075	4.60	75.4	3750	258.6	4250	293.1	33.3	126.0	6.2 (.43)	6.9 (.48)	7.3 (.50)	2700	89	66.4	
PVG 100	6.00	98.3	5000	344.8	5800	400.0	42.4	160.5	9.5 (.66)	10.3 (.71)	11.2 (.77)	2400	150	111.9	
PVG 130	7.94	130.2	3750	258.6	4250	293.1	57.6	218.0	8.6 (.59)	9.2 (.63)	10.8 (.74)	2400	150	111.9	

Table 3. NOMINAL DIMENSIONS and WEIGHTS without controls.

UNIT	LENGTH		WIDTH		HEIGHT		WEIGHT		FACE MTG.
	in.	mm.	in.	mm.	in.	mm.	lbs.	kg.	
075	12.0	303,9	6.9	174,5	6.3	160,4	55	25	SAE "B" 2 & 4 bolt
100 & 130	13.0	330,5	8.4	212,9	7.3	185,7	110	50	SAE "C" 2 bolt

See installation drawings for more detailed dimensions and port configurations.

V. MALFUNCTIONS AND CAUSES

A. UNRESPONSIVE OR SLUGGISH CONTROL

1. See referenced control instruction material.
2. Low control input (pilot) pressure – for "R" and "V" volume type controls only.
3. Swashblock saddle bearings (204) worn or damaged.

B. INSUFFICIENT PUMP VOLUME

1. Delivery limited by faulty control (see appropriate control instruction material).
2. Obstructed suction circuit or insufficient supercharge volume.
3. Insufficient drive motor speed.
4. Worn or grooved cylinder barrel (101) and/or valve plate (401) matching surfaces.
5. Worn piston/shoe assemblies (102) or piston bores in cylinder (101).
6. Worn or damaged piston shoe or swashblock (201).

C. IRREGULAR OR UNSTEADY OPERATION

1. Faulty control.
2. Fluid level in reservoir is low or supercharge is insufficient.
3. Air entering hydraulic system.
4. Worn axial piston pump.
5. Faulty output circuit components (cylinder, motors, valves, etc.).

D. LOSS OF PRESSURE

1. Worn piston pump.
2. Worn or grooved cylinder barrel (101) and/or valve plate (401) matching surfaces.
3. Worn piston/shoe assemblies (102) or piston bores in cylinder.
4. Faulty output circuit components.

E. EXCESSIVE or HIGH PEAK PRESSURE

1. Faulty output circuit components (pay particular attention to relief valves).

F. EXCESSIVE NOISE

1. Pump incorrectly being stopped or started under load.
2. Low fluid level in reservoir or insufficient supercharge resulting in cavitation.
3. Air entering hydraulic system.
4. Fluid too cold or viscosity too high.
5. Suction line problem i.e.; obstructions in line, line too long, line diameter too small or too many bends and/or loops in line.
6. Broken or worn piston/shoe assembly (102).
7. Pump rotating in wrong direction.

(Continued on Page 6)

III. PRINCIPLE OF OPERATION

DRIVEN CLOCKWISE (RIGHT HAND), IS DESCRIBED. DIAGRAMS ARE SHOWN FROM TOP (PLAN) VIEW.

SEE FIGURE 3. POSITION B. Rotating the driveshaft clockwise turns the splined cylinder, which contains the pumping pistons. When the cylinder is rotated, the pistons move in and out of their bores as the shoes "ride" against the angled swashblock.

As the cylinder rotates, the individual piston bores are connected, alternately, to upper (port A) and lower (port B) crescent shaped ports in the valve plate. While connected to the upper side (suction) port A, each piston moves outward, drawing fluid from port A into the piston bore until it's outermost stroke is reached. At that point, the piston bore passes from upper crescent port to the lower crescent port.

While rotating across the lower crescent, each piston moves across the angled swashblock face. Thus each piston is forced

inward. Each piston displaces fluid thru the lower crescent to port B until it's innermost stroke is reached. At that point, the piston bore passes from the lower to the upper crescent again and the operating cycle is repeated.

SEE FIGURE 4. POSITION B/2. A study of the diagram will show that the degree of swashblock angle determines the length of piston stroke (difference between outermost and innermost position) thereby determining the amount of delivery from the pump. In this case, the stroke angle is one-half of the former stroke angle. Therefore, the piston stroke is one half the former and pump delivery is one half the former delivery.

SEE FIGURE 5. POSITION N. Neutral position results when the control centers the swashblock. The swashblock angle is now zero and swashblock face is now parallel to cylinder face. Therefore, no inward or outward motion of the pump pistons exist as piston shoes rotate around the swashblock face. The lack of inward and outward motion results in no fluid being displaced from the piston bores to the crescents in the valve plate and consequently no delivery from pump ports.

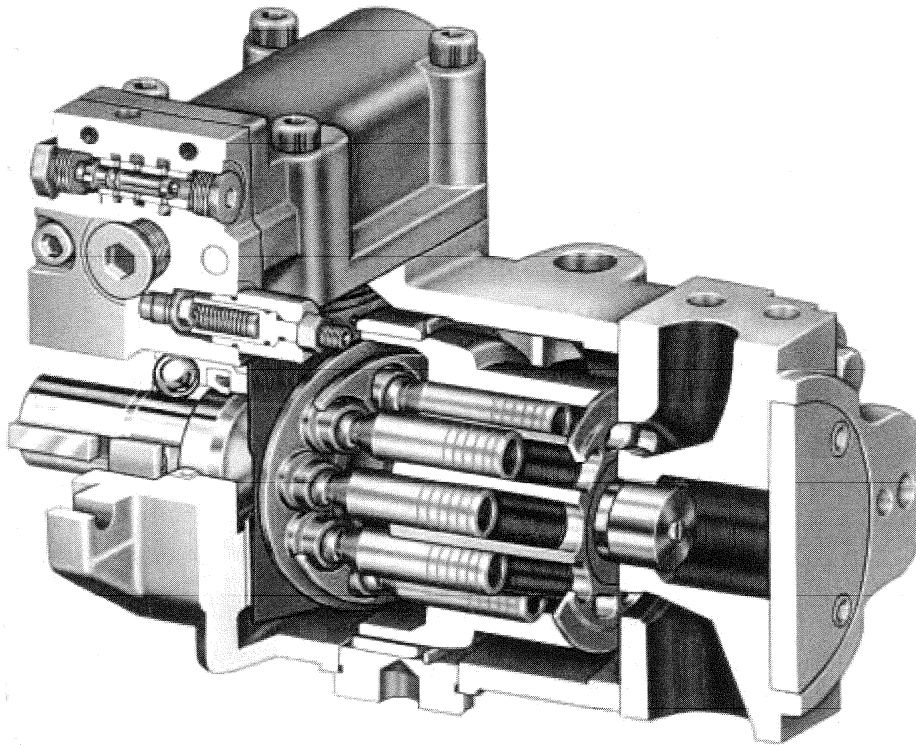


Figure 2. Cut-a-way (cross-section) of typical "PVG" Pump (92011R).

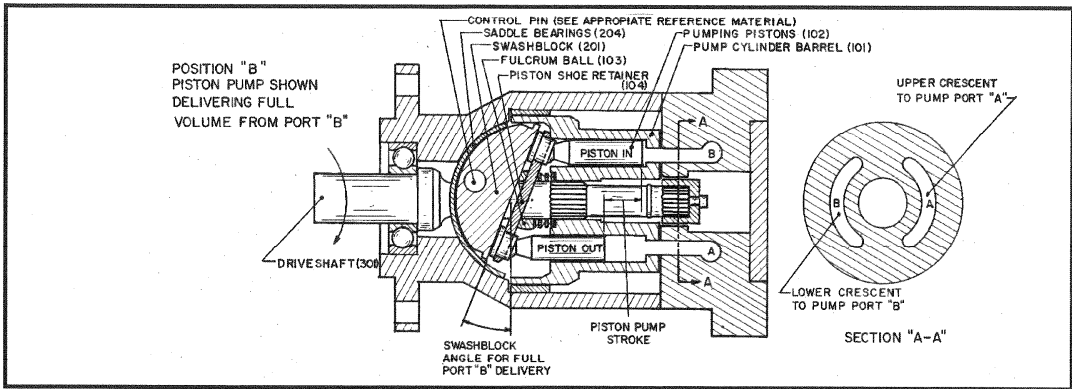


Figure 3. POSITION B plan view (5V-12015-L)

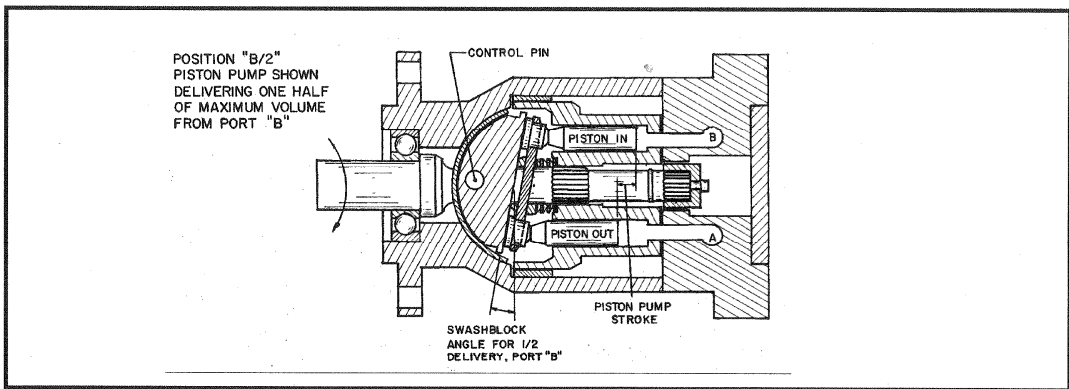


Figure 4. POSITION B/2 plan view (5V-12015-L)

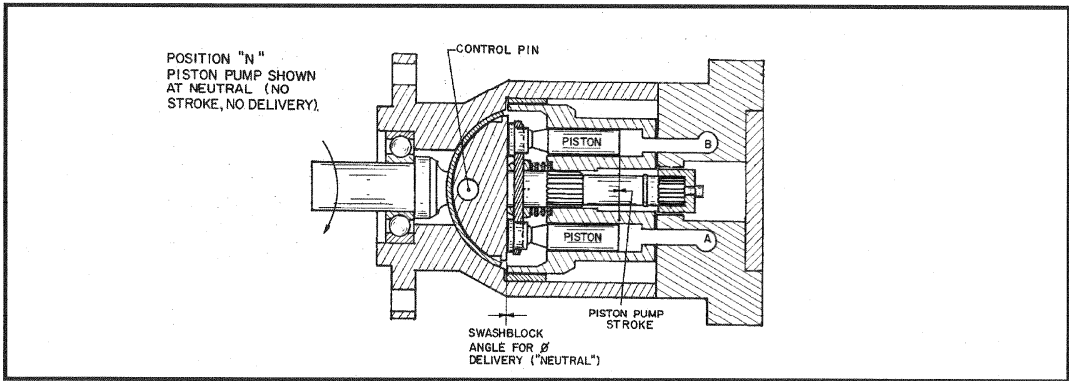


Figure 5. POSITION N plan view (5V-12015-L)

(See Page 3 for "IV SPECIFICATIONS")

G. EXCESSIVE HEATING

1. Operating pump above rated or peak pressure.
2. Low fluid level in reservoir or insufficient supercharge.
3. Air entering hydraulic system.
4. Worn piston pump.
5. Worn or grooved cylinder barrel (101) and/or valve plate (401) matching surfaces.
6. Faulty output circuit components (continuous blowing relief valves or "slip" through valves, cylinder, etc.)
7. Insufficient cooling provision or clogged coolers.

VI. TESTING AND ADJUSTING

WARNING – Shut pump off and release pressure from the system before disassembling components. Failure to comply with these instructions could result in personal injury or death. **Blocking pressure line between pump and system (or pump) high pressure relief valve will result in damage and could result in serious personal injury.**

A. PISTON PUMP

To check for worn piston pump, measurement of the leak can be made from the case drain while pump is under pressure. After the unit is warm, either install a flow meter in the drain line or have the flow from the drain line directed into a large container or reservoir. The pump case must remain full of fluid during this test.

CAUTION:

Do not run a pump on stroke against a blocked output unless it is protected by a high pressure relief valve and then run no longer than necessary to check slip. Limit discharge to prevent dropping reservoir fluid below low level.

With an accurate high pressure gage in the pressure line, start the pump and stall (or block) output device to raise system pressure to maximum (as set by system relief valve). Read the flow meter or time the case drain flow used to fill a known size container and calculate the flow rate in terms of cubic inches per minute (cipm). The leakage should conform with Table 4. Additional leakage indicates wear, but does not become critical until it impairs performance.

VII. DISASSEMBLY

A. PREPARATION

When disassembling or assembling unit, we recommend choosing an area where no traces of dust, sand or other abrasive particles, which could damage the unit, are in the air. We also recommend not working near welding, sand-blasting, grinding benches and the like. Place all parts on a CLEAN surface. To clean parts which have been disassembled, it is important to use CLEAN solvents. All tools and gages should be clean prior to working with these units and new, CLEAN threadless rags used to handle and dry parts.

WARNING: NEVER attempt to remove or install any components or assembly while unit and system is running. Always stop the pump, shut-off power and release pressure from the system before servicing or testing. Be sure provisions have been made so case drain line can be disconnected from the unit without causing the line to drain (siphon) the reservoir.

Disconnect case drain line from port "1" or "1A" and drain pump case through the remaining (port "1" or 1A") on bottom of case. If plugs are inaccessible, it may be necessary to remove pump from mounting (and drive motor) before draining it.

After removing pump from mounting, but before disassembly, cap or plug all ports and clean the outside of unit thoroughly to prevent entry of dust into the system.

Refer to figures 9 and 10. Depending upon what part or parts are to be inspected, it may not be necessary to completely take apart all assemblies.

B. CONTROL GROUP

See reference material for applicable information on the control your unit is equipped with. Some force is required to remove the control housing. Remove socket head cap screws and lift the control group assembly, with control pin, straight up from the top of the pump assembly. Control pin may or may not remain in the swashblock (201). Remove control gasket and o-rings from pump housing.

C. VALVE PLATE GROUP

If another unit is coupled to thru shaft units, it will be necessary to remove coupling (half) before removing valve plate. Block unit on bench with driveshaft facing down. Remove valve plate (401) by removing four hex head cap screws (403) and lifting straight up. Remove valve plate gasket (411) and o-ring (404).

Table 4. NOMINAL CASE SLIP vs High Pressure at 1800 rpm (viscosities of 90-110 SSU)

Pump Size	Case Slip at Full Stroke and Indicated Pressure						
	500 psi	1000 psi	2000 psi	3000psi	3750 psi	4000 psi	5000 psi
075 cipm	130	195	455	760	1070	NA	NA
lpm	2,1	3,2	7,5	12,5	17,5	NA	NA
100 cipm	190	250	400	600		900	1200
lpm	3,1	4,1	6,5	9,8		14,7	19,7
130 cipm	300	400	600	1000	140	NA	NA
lpm	4,9	6,6	9,8	16,4	22,9	NA	NA

D. ROTATING GROUP

WARNING: Size 100 and 130 rotating group weigh approximately 15 lbs. (7 kg). Extreme care must be taken not to damage cylinder wear surface (that matches against the valve plate), bearing diameters or piston shoes. Assistance from others and use of proper lifting techniques are strongly recommended to prevent personal injury.

On thru shaft units, the tailshaft bushing assembly (307, 308, 309) or a coupling will have to be removed (a "jacking" screw can be used) before rotating group can be disassembled. Place the pump in a horizontal position and remove the rotating group by turning shaft (301) slowly while pulling the cylinder barrel (101) from the housing.

Mark (number) each pump piston shoe assembly (102) and its respective bore in cylinder barrel (101) and shoe retainer (104). See Figure 7. Lift out shoe retainer (104) with pistons (102) and remove fulcrum ball (103) and shoe retainer spring (105).

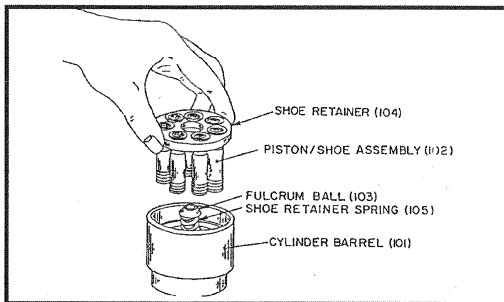


Figure 7 ROTATING GROUP DISASSEMBLY (5V-12015-L).

Remove retaining ring (208) and pull the hydrodynamic bearing (202) and roll pins, if necessary, (205) from the housing. Note position of roll pin (205) inside of case.

E. DRIVESHAFT GROUP

Remove drive key (303) if used and driveshaft bearing retainer ring (305). Grasp outboard end of driveshaft (301) and pull out from pump housing. Remove shaft seal retainer (302) and shaft seal (007) from housing only if necessary.

F. SWASHBLOCK GROUP

For size 100 and 130 only, remove flat head screws (206) and guide plate (203). Reach inside the case and remove the swashblock (201) and saddle bearings (204).

VIII. INSPECTION

Clean all parts thoroughly. Inspect all seals and o-rings for hardening, cracking or deterioration and replace if necessary. Check all locating pins for damage and springs for cracking or signs of cracking or signs of fatigue.

WARNING—Always wear safety goggles when using solvents or compressed air. Failure to wear safety goggles could result in serious personal injury.

A. CONTROL GROUP

See applicable reference material on pump controls. Be sure to carefully check control pin for cracks and/or signs of fatigue. Check fit of pin in swashblock. It should be a slip fit without "slide-play".

B. VALVE PLATE GROUP

Inspect the valveplate (401) surface that mates with the cylinder barrel (101) for excessive wear or scoring. Remove minor defects by lightly stoning the surface with a hard stone that is flat to within 0.001" (0,03mm). Be sure to stone lightly. Any excessive stoning will remove the hardened surface. If wear or damage is extensive, replace the valve plate.

C. ROTATING GROUP

Inspect cylinder barrel (101) piston bores and the face that mates with valve plate for wear and scoring. Remove minor defects on the face by lightly stoning or lapping the surface. If defects can not be removed by this method, replace the cylinder barrel.

Inspect cylinder bearing (202) for damage and replace if necessary. Check all piston and shoe assemblies (102) to be sure they ride properly on the swashblock.

See Figure 8. Check each shoe face for nicks and scratches. Check the shoe for smooth pivot action on piston. If one or more piston/shoe assembly needs to be replaced, replacement of all piston/shoe assemblies is necessary. When installing new piston/shoe assemblies or rotating group, make sure pistons are free in their respective bores.

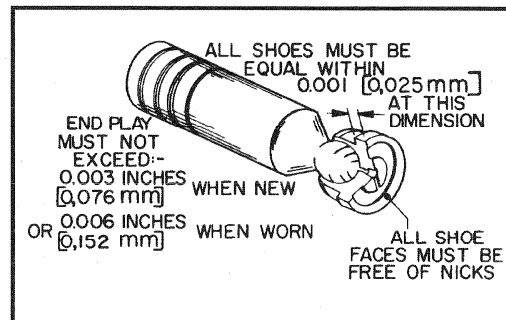


Figure 8 PISTON and SHOE INSPECTION (5V-12015-L).

D. SWASHBLOCK GROUP

Inspect the swashblock (201) for wear and scoring. If defects are minor, stone the swashblock lightly. If damage is extensive, replace the swashblock. Check the very small hole in the face of the swashblock. These holes provide "porting" for the hydrostatic balance fluid (of the piston/shoe assembly) to be channeled through the swashblock to the face of the saddle bearing (providing pressure lubrication).

Compare saddle bearing (204) thickness in worn area to thickness in an unworn area. Replace saddle bearings if difference is greater than 0.015 in. (0,4 mm). Check mating surface of swashblock for cracks or excessive wear. Swashblock movement in saddle bearings must be smooth. Replace if necessary.

E. DRIVESHAFT GROUP

Check shaft seal (007) for deterioration or cracks. Replace (press out) if necessary. Check shaft bearing (306) for galling, pitting, binding or roughness. Check rear shaft bushing in valve plate. Check shaft and it's splines for wear. Replace any part necessary.

IX. ASSEMBLY

Refer to figures 9 and 10. The procedure for assembling the pump are basically the reverse order of disassembly procedures. During assembly, install new gaskets, seals and o' rings. Apply a thin film of CLEAN grease or hydraulic fluid to sealing components to ease assembly. If a new rotating group is used, lubricate thoroughly with CLEAN hydraulic fluid. Apply fluid generously to all wear surfaces.

A. SWASHBLOCK GROUP

If removed, press shaft seal (007) into front of pump housing and then place housing on bench with mounting flange side down. If replaced or removed, press two roll pins (207) into the pump housing so pins extend 0.050 to 0.065 inches (1,3 to 1,6 mm) from case. Grease back side of saddle bearing (204) and place on the pin to locate the bearing in pump case. Be sure the pin does not protrude.

For size 100 and 130 only, partially insert swashblock (201) into pump housing then insert guide plate (203) into the case, so flat head cap screws (206) can be used to fasten the guide plate (203) to the housing, and place the swashblock (201) on the guide plate (203) making sure the guide plate (203) is in the groove of the swashblock (201). For other sizes, insert swashblock (201) into pump housing. Once in place, be sure swashblock swivels in the saddle bearings. With new bearings, swivelling may be stiff (not always smooth).

Be sure the roll pin (205) [two are used on size 130] is inserted into the cylinder bearing (202). Position the cylinder bearing so the pins are located nearest the control facing the outboard end of driveshaft (301). The bearing should be positioned with "scarf" cuts positioned top and bottom and with pin (205) located on top of internal cast boss. The bearing should fit into place with a little difficulty and be square to the axis of the pump. Tap bearing into place if necessary using extreme care not to damage the bearing. Insert retaining ring (208) to hold bearing in place.

B. DRIVESHAFT GROUP

Place housing on its side with the axis horizontal and then install seal retainer (302). Place front driveshaft bearing (306) onto driveshaft (301) and lock in place with shaft retaining ring (304). Lubricate shaft seal (007) and shaft, then insert driveshaft (301) and bearing assembly into housing and lock in place with driveshaft bearing retainer ring (305).

C. ROTATING GROUP

See Figure 7. Place the cylinder barrel (101), wear surface down, on a clean cloth. Place the shoe retainer spring (105) in the center of the barrel with the fulcrum ball (103) on top of it. Insert the (numbered on disassembly) pistons (102) into their corresponding (numbered) holes of the shoe retainer (104). As a unit, fit

the pistons into their corresponding (numbered) bores in the cylinder barrel. **DO NOT FORCE.** If aligned properly, the pistons will fit smoothly.

WARNING – The assembled rotating group for sizes 100 and 130 weighs approximately 15 lbs. (7kg). Assistance from others and proper lifting techniques is strongly recommended to prevent personal injury. The rotating group can now be carefully installed over the tail of the driveshaft (301) and into the pump housing (001). When installing the rotating group, support the weight of the cylinder barrel (101), as cylinder spline is passed over the tailshaft, to avoid scratching or damage. Push cylinder forward until the cylinder spline reaches the driveshaft spline and rotate slightly to engage shaft splines. Continue to slide cylinder forward until it encounters the cylinder bearing (202). Lifting the tailshaft slightly helps cylinder (101) and cylinder bearing (202) engagement. Continue pushing cylinder forward until the piston shoes contact the swashblock. At this point, the back of the cylinder should be located approximately 0.4 in. (10,2 mm) outside the back of the pump housing. On thru shaft units without another pump or device connected to them, install roll pin (309) into spline cover (307), slide assembly onto shaft (301) and secure in place with socket head shoulder screw (308).

D. VALVE PLATE GROUP

Place pump housing on bench with open end facing up. Install new o' ring (411) and gasket (407) on housing. Make sure the tail end of shaft engages bushing (in rear ported valve plates) while positioning valve plate (401) on pins (005) and housing. Finger tighten hex head cap screw (403) closest to o'ring (404) first then alternately tighten the other cap screws. On thru shaft units connected to another pump or device, install coupling (half).

SEE SECTION "I. PREPARATION and INSTALLATION"

X. PARTS LIST

Parts used in this assembly are per Oilgear specifications. Use Oilgear parts to insure compatibility with assembly requirements. When ordering replacement parts, be sure to include pump type and serial number, bulletin number and item number. To assure seal and packing compatibility, specify type of hydraulic fluid.

ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
000	HOUSING ASSEMBLY GROUP	300	DRIVESHAFT ASSEMBLY GROUP
001	Housing, Pump	301A**	Driveshaft, thru w/keyway (side port)
003	Nameplate, Identification	301B**	Driveshaft, thru w/SAE Spline (side port)
004	Plug, SAE	301D	Driveshaft, w/Keyway (rear port)
005	Pin, Roll	301E	Driveshaft, w/SAE Spline (rear port)
006	Pin, Roll	302	Retainer, Seal
007	Seal, Shaft	303	Key, Driveshaft
008	Screw	304	Ring, Shaft Retainer
010	Seal, O'ring	305	Ring, Driveshaft Bearing Retainer
100	ROTARY ASSEMBLY GROUP	306	Bearing, Front Driveshaft
101	Barrel, Cylinder	307	Cover, Spline
102	Assembly, Piston/Shoe	308	Screw, Sock. Hd. Cap Shoulder
103	Ball, Fulcrum	309	Pin, Roll
104	Retainer, Shoe		
105	Spring, Shoe Retainer	400	VALVE PLATE ASSEMBLY GROUP
200	SWASHBLOCK ASSEMBLY GROUP	401A	Valve Plate, side port/rear shaft
201	Swashblock	401E	Valve Plate, side port/no rear shaft
202	Bearing, Cylinder	401I	Valve Plate, rear port
203**	Plate, Guide	402	Bushing, (part of valve plate)
204	Bearing, Saddle	403	Screw, Hex. Hd.
205	Pin, Roll	404	Seal, O'ring
206**	Screw, Flt. Hd. Cap	405	Seal, O'ring
207	Pin, Roll	406	Seal, O'ring
208	Ring, Retainer	407	Seal, O'ring
		408	Plug, SAE
		409	Plug, SAE
		410	Plug, SAE
		411	Gasket, Valve Plate
		412	Cover, Rear Shaft
		413	Seal, O'ring
		414	Screw, Sock. Hd. Cap

** Size 100 & 130 only

O'RING SIZES

ARP 568 Uniform Size Number with Durometer

ITEM NO.	PUMP SIZE	
	075	100 & 130
010	912 - 70	912 - 70
404	012 - 90	013 - 90
405	902 - 90	902 - 90
406	903 - 90	903 - 90
407	904 - 90	904 - 90
413	138 - 70	138 - 70

PARTS DRAWINGS ON PAGES 10 AND 11

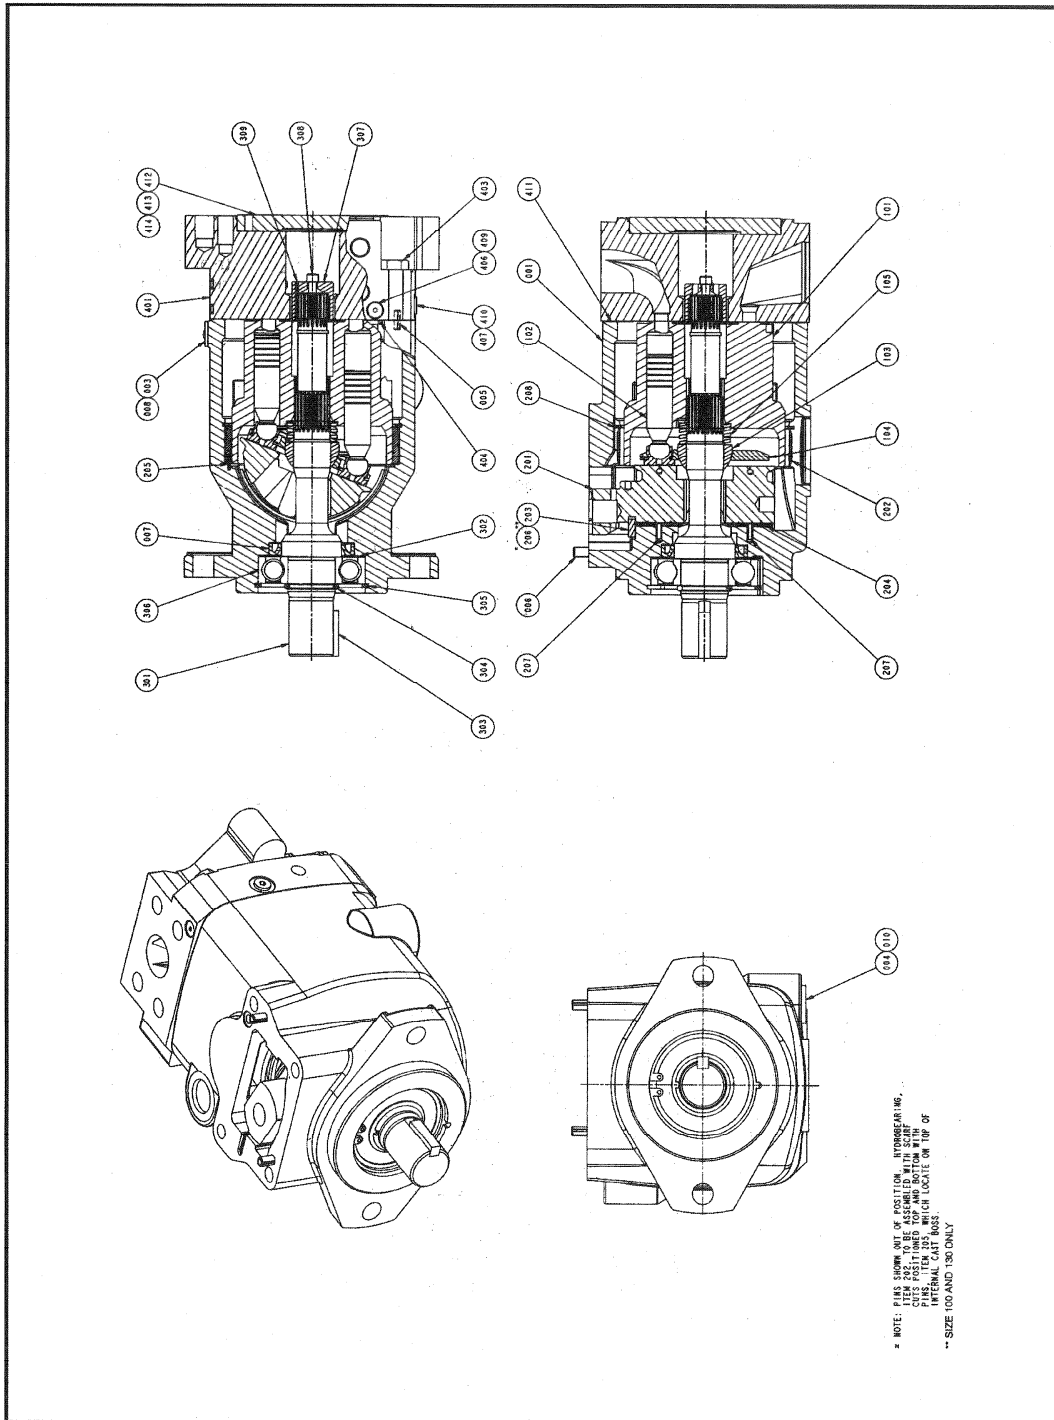


Figure 9. Cross Section and Plan View Parts Drawing (516246 sh. 1 of 3).

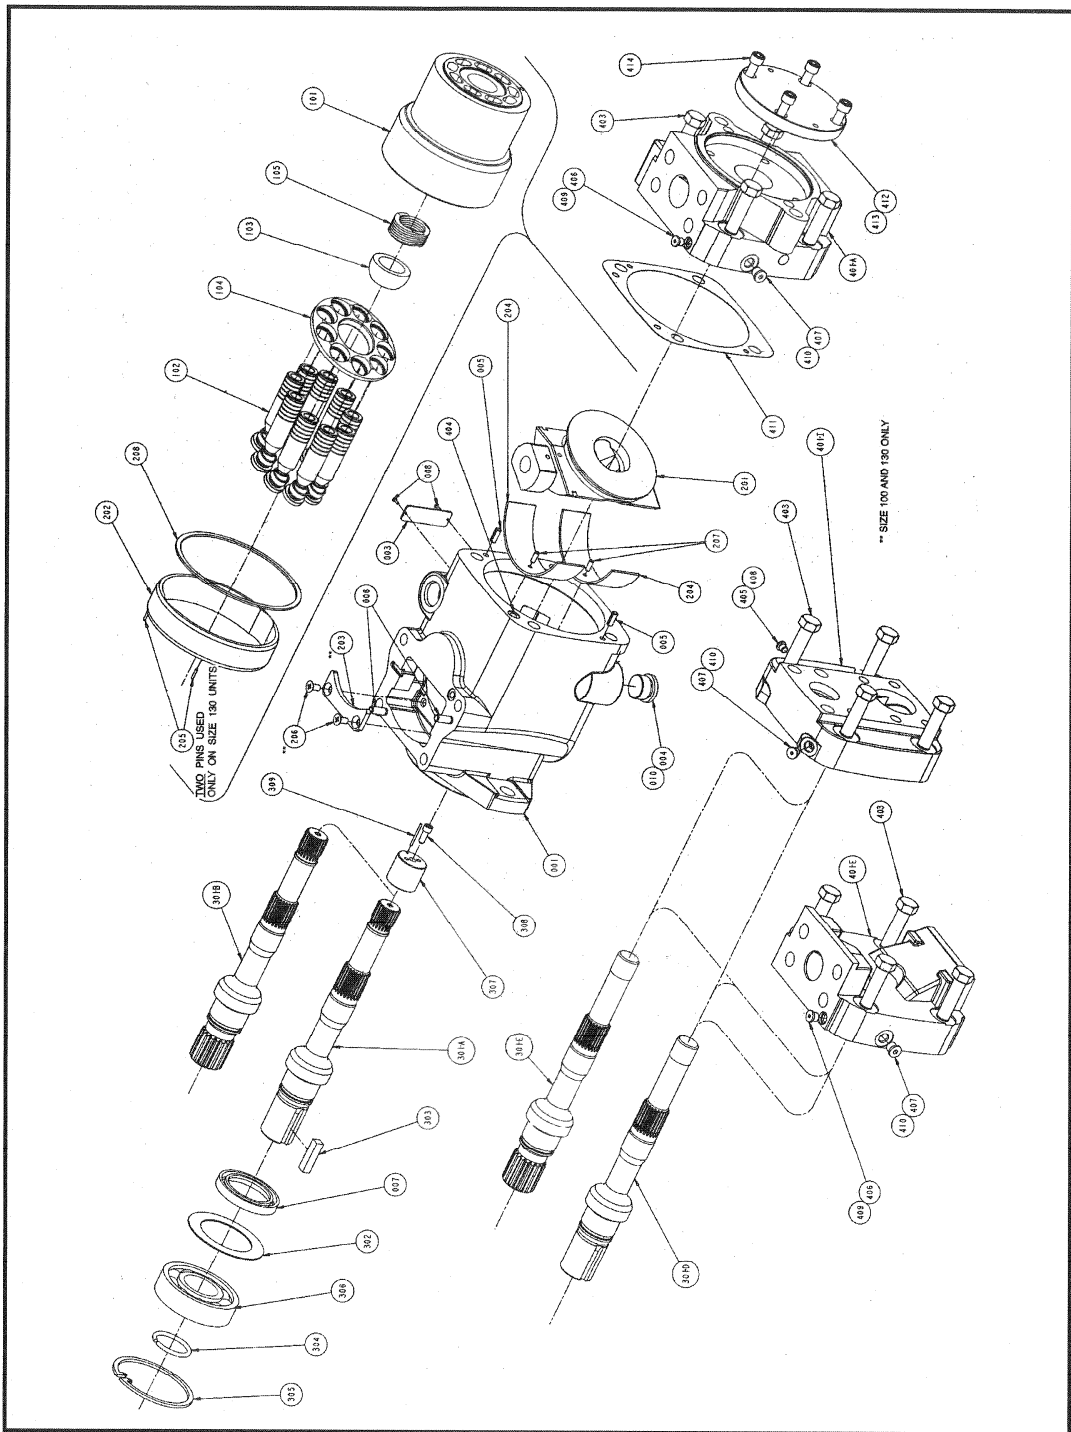


Figure 10 Exploded Parts Drawing (516246 sh. 2 of 3).

XI. AFTER SALES SERVICES

Oilgear builds products that last. However, it is the nature of this type of machinery to require proper maintenance regardless of the care that goes into its manufacture. Oilgear has several service programs to help you.

“STAY-ON-STREAM” SERVICE

By signing up for Oilgear's “Stay-On-Stream” program you can prepare for problems before they happen. Certain field tests such as fluid testing, slip testing and electronic profile recording comparisons can be performed by our field service people or your own trained personnel. These tests can indicate problems before they become “down-time” difficulties.

SERVICE SCHOOLS

Oilgear holds schools to train your maintenance personnel. A “general” hydraulic or electronic school is conducted in our Milwaukee plant on a regular basis. “Custom” schools, specifically addressing your particular hydraulic and electrohydraulic equipment can be conducted in your plant.

SPARE PARTS AVAILABILITY:

Prepare for future needs by stocking Oilgear original factory parts. Having the correct parts and necessary skills “in-plant” enables you to minimize down-time. Oilgear has developed parts kits to cover likely future needs. Oilgear field service technicians also stand ready to assist your maintenance people in trouble-shooting and repairing equipment.

OILGEAR EXCHANGE SERVICE

Standard replacement pumps and motors are available to users of Oilgear equipment where comparable units will be returned in exchange. When standard replacements must be modified to replace units which are special, shipment will depend on availability of parts, assembly and test time necessary.

To obtain this service, place an order for an exchange unit and provide the serial number and type designation. The replacement unit will be shipped F.O.B. our factory, Milwaukee, Wisconsin. User retains the replacement and returns the worn unit prepaid to The Oilgear Company for reconditioning and test. When the unit is reconditioned or stocked, the user is billed the cost of reconditioning or a flat rate exchange price if one has been applied to that particular type of unit.



THE OILGEAR COMPANY
2300 So. 51st. Street
Milwaukee, Wisconsin 53219

 
Oilgear

PUMP, VARIABLE DELIVERY
PVG 075

MAINTENANCE


1

"P-1NN" CONTROL




Parts Drawing

Single Pressure Compensator Control

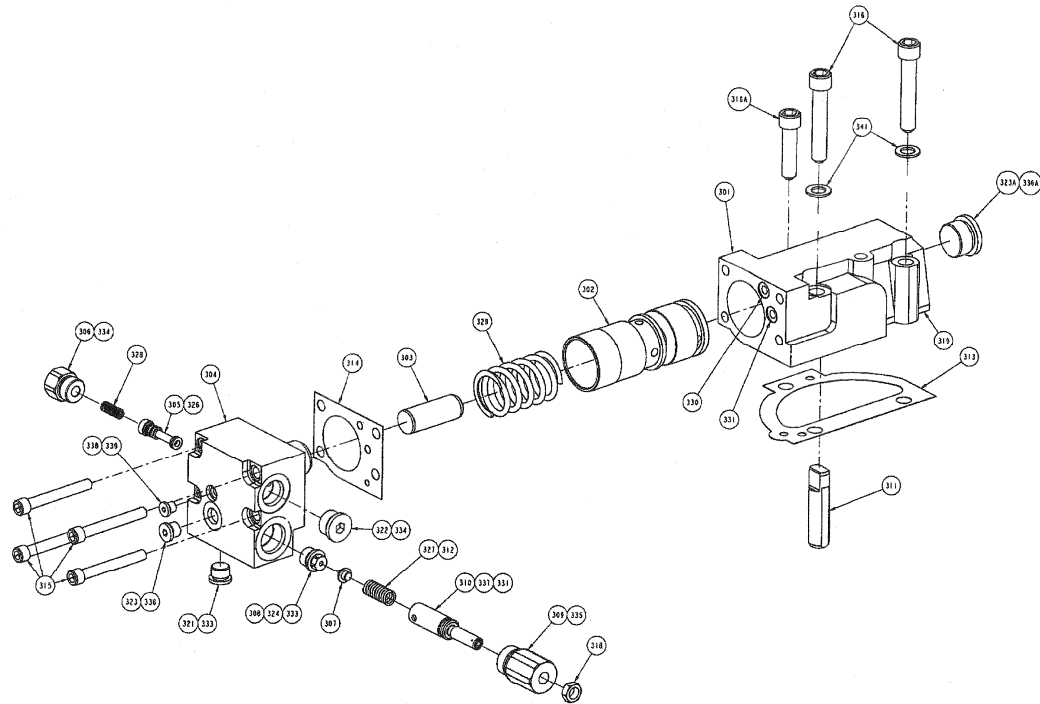

517107-001

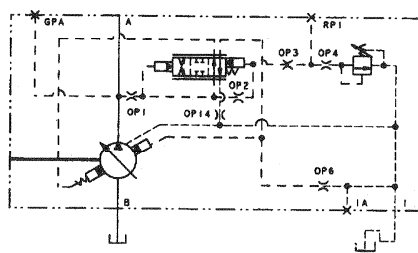

HYDRAULIC CIRCUIT

Telephone: (414) 327-1700
Fax: (414) 327-0532

OILGEAR
2300 So. 51st. Street
Milwaukee, WI USA 53219

Issued March, 1996
DS-947551

 
Oilgear

**PUMP, VARIABLE DELIVERY
PVG 075**

MAINTENANCE

2

"P-1NN" CONTROL



Parts List

Single Pressure Compensator Control

Parts used in this assembly are per Oilgear specifications. Use Oilgear parts to ensure compatibility with assembly requirements. When ordering replacement parts, be sure to include pump type designation and serial number stamped on nameplate, bulletin and item number. To assure seal and packing compatibility, specify type of hydraulic fluid used.

ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
301	Housing, Control	322	Plug, SAE
302	Piston, Main Control	323	Plug, SAE
303	Piston, Bias Control	324	Orifice, (OP-4)
304	Cap, End	325	Orifice, (OP-3)
305	Spool, 4-Way Valve	326	Orifice, (OP-2)
306	End Plug, 4-Way Valve	327	Spring, Relief Valve
307	Poppet, Relief Valve	328	Spring, 4-Way Valve
308	Seat, Relief Valve	329	Spring, Bias Piston
309	Bonnet, Relief Valve	330	Seal, O'ring
310	Screw, Relief Valve Adjusting	331	Seal, O'ring
311	Pin, Control Piston	333	Seal, O'ring
312	Shim, Relief Valve	334	Seal, O'ring
313	Gasket, Control Housing	335	Seal, O'ring
314	Gasket, Control Head	336	Seal, O'ring
315	Screw, S.H.C.	337	Ring, Back-up
316	Screw, S.H.C.	338	Seal, O'ring
316A	Screw, S.H.C.	339	Plug, SAE
318	Nut, Jam	341	Washer
319	Orifice, (OP-6)	343	Orifice, (OP-14)
321	Plug, SAE	344	Orifice, (OP-01)

**APR 568 UNIFORM SIZE NUMBERS
for O'ring (w/Durometer) and Back-up Rings**

ITEM NO.	PUMP SIZE
330	065 & 075
331	012 - 90
333	014 - 90
333	906 - 90
334	908 - 90
335	910 - 90
336	904 - 90
337	014
338	902 - 90

Issued March, 1996
DS-947551

OILGEAR
2300 So. 51st. Street
Milwaukee, WI USA 53219

Telephone: (414) 327-1700
Fax: (414) 327-0532

 
Oilgear

**PUMP, VARIABLE DELIVERY
PVG 075**

MAINTENANCE


3

"P-1NN" CONTROL



Parts Drawing

Single Pressure Compensator Control

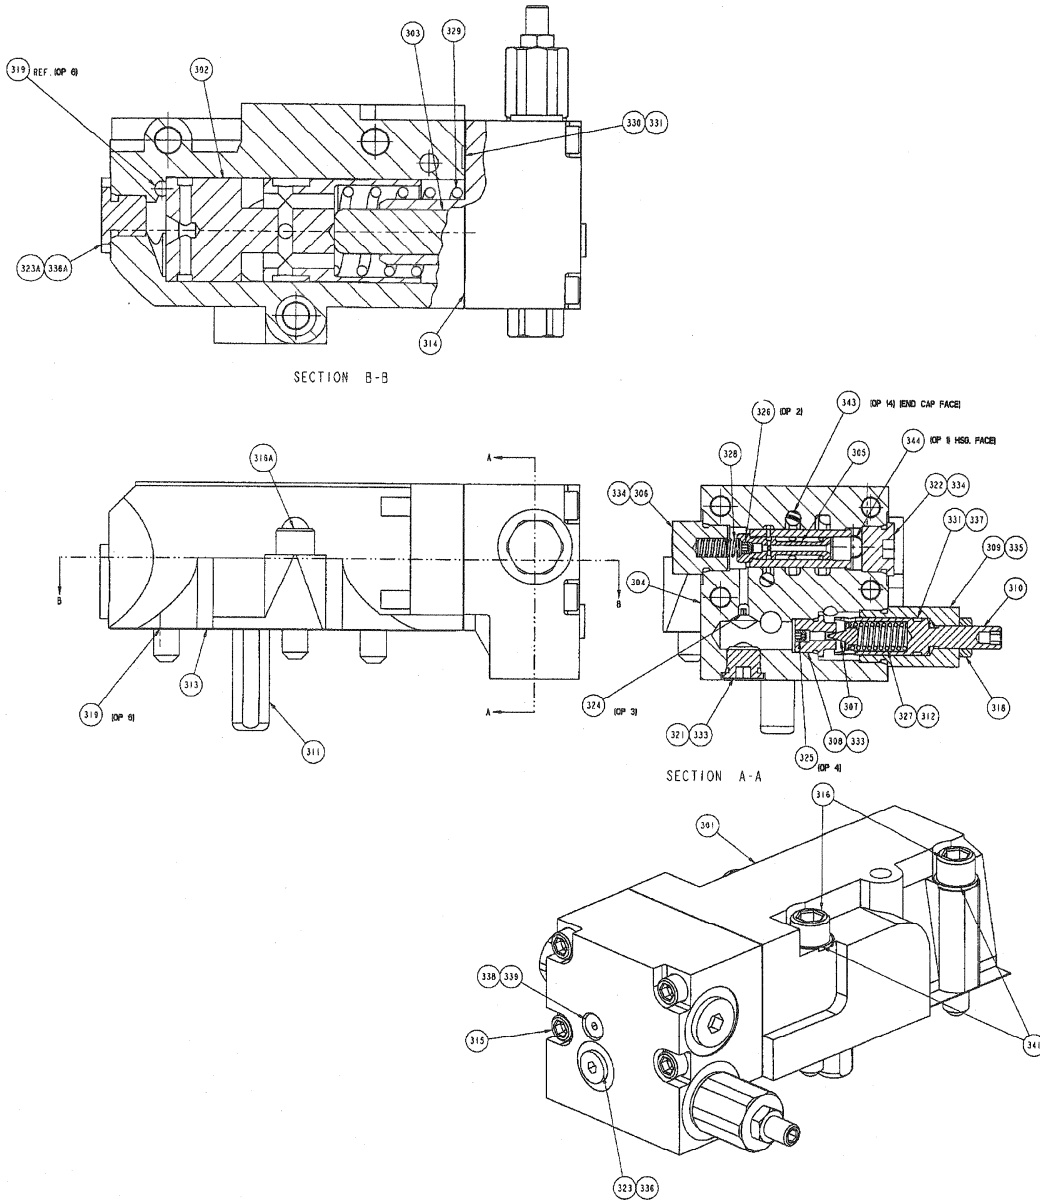

Telephone: (414) 327-1700
Fax: (414) 327-0632

OILGEAR
2300 So. 51st. Street
Milwaukee, WI USA 53219

Issued March, 1996
DS-947551



APPENDIX VI

**Material Safety
Data Sheet
(MSDS)
Hydraulic Fluid**

TRONAIR MSDS-1029



490110-00 MOBIL AERO HFA
MATERIAL SAFETY DATA BULLETIN

1. PRODUCT AND COMPANY IDENTIFICATION

PRODUCT NAME: MOBIL AERO HFA
SUPPLIER: EXXONMOBIL OIL CORPORATION
3225 GALLOWS RD.
FAIRFAX, VA 22037

24 - Hour Health and Safety Emergency (call collect): 609-737-4411

24 - Hour Transportation Emergency:
CHEMTREC: 800-424-9300 202-483-7616
LUBES AND FUELS: 281-834-3296

Product and Technical Information:
Lubricants and Specialties: 800-662-4525 800-443-9966
Fuels Products: 800-947-9147
MSDS Fax on Demand: 613-228-1467
MSDS Internet Website: <http://emmsds.ihssolutions.com/>

2. COMPOSITION/INFORMATION ON INGREDIENTS

CHEMICAL NAMES AND SYNONYMS: PET. HYDROCARBONS AND ADDITIVES

GLOBALLY REPORTABLE MSDS INGREDIENTS:

None.

OTHER INGREDIENTS:

Substance Name	Approx. Wt%
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM) (64742-53-6)	85-95

See Section 8 for exposure limits (if applicable).

3. HAZARDS IDENTIFICATION

This product is considered hazardous according to regulatory guidelines
(See Section 15).

EMERGENCY OVERVIEW: Red Liquid. DOT ERG No. : NA
POTENTIAL HEALTH EFFECTS: Low viscosity material-if swallowed may

enter the lungs and cause lung damage. Prolonged repeated skin contact with low viscosity materials may defat the skin resulting in possible irritation and dermatitis.

For further health effects/toxicological data, see Section 11.

4. FIRST AID MEASURES

EYE CONTACT: Flush thoroughly with water. If irritation occurs, call a physician.

SKIN CONTACT: Wash contact areas with soap and water. Remove contaminated clothing. Launder contaminated clothing before reuse. Discard shoes if material has penetrated to inside surfaces. High pressure accidental injection through the skin requires immediate medical attention for possible incision, irrigation and/or debridement.

INHALATION: Remove from further exposure. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance and call a physician. If breathing has stopped, use mouth to mouth resuscitation.

INGESTION: Get medical assistance and call a physician immediately. Do not induce vomiting or give anything by mouth to an unconscious person.

NOTE TO PHYSICIANS: Material if ingested may be aspirated into the lungs and can cause chemical pneumonitis. Treat appropriately.

5. FIRE-FIGHTING MEASURES

EXTINGUISHING MEDIA: Carbon dioxide, foam, dry chemical and water fog.

SPECIAL FIRE FIGHTING PROCEDURES: Water or foam may cause frothing. Use water to keep fire exposed containers cool. Water spray may be used to flush spills away from exposure. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply.

SPECIAL PROTECTIVE EQUIPMENT: For fires in enclosed areas, fire fighters must use self-contained breathing apparatus.

UNUSUAL FIRE AND EXPLOSION HAZARDS: None.

COMBUSTION PRODUCTS: Fumes, smoke, carbon monoxide, sulfur oxides, aldehydes and other decomposition products, in the case of incomplete combustion.

Flash Point C(F): > 105(221) (ASTM D-93).

Flammable Limits (approx.% vol.in air) - LEL: NE, UEL: NE

NFPA HAZARD ID: Health: 1, Flammability: 1, Reactivity: 0

6. ACCIDENTAL RELEASE MEASURES

NOTIFICATION PROCEDURES: Report spills as required to appropriate authorities. U. S. Coast Guard regulations require immediate reporting of spills that could reach any waterway including intermittent dry creeks. Report spill to Coast Guard toll free number (800) 424-8802. In case of accident or road spill notify CHEMTREC (800) 424-9300.

PROCEDURES IF MATERIAL IS RELEASED OR SPILLED: Eliminate all ignition sources. Ventilate area. Adsorb on fire retardant treated sawdust, diatomaceous earth, etc. Shovel up with spark-resistant

shovel and remove to appropriate waste disposal facility in accordance with current applicable laws and regulations.
ENVIRONMENTAL PRECAUTIONS: Prevent spills from entering storm sewers or drains and contact with soil.
PERSONAL PRECAUTIONS: See Section 8

7. HANDLING AND STORAGE

HANDLING: Avoid prolonged repeated skin contact. Avoid inhalation of vapors or mists. Wash thoroughly after handling. High pressure injection under the skin may occur due to the rupture of pressurized lines. Always seek medical attention.
STORAGE: Do not store in open or unlabelled containers. Store away from strong oxidizing agents and combustible materials. Store in a cool, dry, well ventilated area away from heat.
SPECIAL PRECAUTIONS: Prevent small spills and leakages to avoid slip hazard.
EMPTY CONTAINER WARNING: Empty containers retain residue (liquid and/or vapor) and can be dangerous. DO NOT PRESSURIZE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION; THEY MAY EXPLODE AND CAUSE INJURY OR DEATH. Do not attempt to refill or clean container since residue is difficult to remove. Empty drums should be completely drained, properly bunged and promptly returned to a drum reconditioner. All containers should be disposed of in an environmentally safe manner and in accordance with governmental regulations.

8. EXPOSURE CONTROLS/PERSONAL PROTECTION

OCCUPATIONAL EXPOSURE LIMITS: When mists/aerosols can occur, the following are recommended: 5 mg/m³(as oil mist)- ACGIH Threshold Limit Value (TLV), 10 mg/m³ (as oil mist)
- ACGIH Short Term Exposure Limit (STEL), 5 mg/m³ (as oil mist) - OSHA Permissible Exposure Limit (PEL)

VENTILATION: Use in well ventilated area. If mechanical ventilation is necessary, equipment should be explosion proof.
RESPIRATORY PROTECTION: Approved respiratory protective equipment must be used when vapor or mists concentrations exceed applicable standards. No special requirements under ordinary conditions of use and with adequate ventilation.
EYE PROTECTION: Normal industrial eye protection practices should be employed.
SKIN PROTECTION: If prolonged or repeated skin contact is likely, impervious gloves should be worn. Good personal hygiene practices should always be followed.

9. PHYSICAL AND CHEMICAL PROPERTIES

Typical physical properties are given below. Consult Product Data Sheet for specific details.

APPEARANCE: Liquid
COLOR: Red

ODOR: Mild
ODOR THRESHOLD-ppm: NE
pH: NA
BOILING POINT C(F): NE
MELTING POINT C(F): NA
FLASH POINT C(F): > 105(221) (ASTM D-93)
FLAMMABILITY (solids): NE
AUTO FLAMMABILITY C(F): NE
EXPLOSIVE PROPERTIES: NA
OXIDIZING PROPERTIES: NA
VAPOR PRESSURE-mmHg 20 C: NE
VAPOR DENSITY: NE
EVAPORATION RATE: NE
RELATIVE DENSITY, 15/4 C: 0.85
SOLUBILITY IN WATER: Negligible
PARTITION COEFFICIENT: NE
VISCOSITY AT 40 C, cSt: 13.8
VISCOSITY AT 100 C, cSt: 5.3
POUR POINT C(F): -70(-94)
FREEZING POINT C(F): NE
VOC: < 80.00 (Wt. %); 5.669 lbs/gal
NA=NOT APPLICABLE NE=NOT ESTABLISHED D=DECOMPOSES

FOR FURTHER TECHNICAL INFORMATION, CONTACT YOUR MARKETING REPRESENTATIVE

10. STABILITY AND REACTIVITY

STABILITY (THERMAL, LIGHT, ETC.): Stable.
CONDITIONS TO AVOID: Heat, sparks, flame and build up of static
electricity. Protect from direct sunlight.
INCOMPATIBILITY (MATERIALS TO AVOID): Strong oxidizers.
HAZARDOUS DECOMPOSITION PRODUCTS: Product does not decompose at
ambient temperatures.
HAZARDOUS POLYMERIZATION: Will not occur.

11. TOXICOLOGICAL DATA

---ACUTE TOXICOLOGY---

ORAL TOXICITY (RATS): Practically non-toxic (LD50: greater than 2000
mg/kg). ---Based on testing of similar products and/or the
components.
DERMAL TOXICITY (RABBITS): Practically non-toxic (LD50: greater than
2000 mg/kg). ---Based on testing of similar products and/or the
components.
INHALATION TOXICITY (RATS): Not established
EYE IRRITATION (RABBITS): Practically non-irritating. (Draize score:
greater than 6 but 15 or less). ---Based on testing of similar
products and/or the components.
SKIN IRRITATION (RABBITS): Practically non-irritating. (Primary
Irritation Index: greater than 0.5 but less than 3). ---Based
on testing of similar products and/or the components.

---SUBCHRONIC TOXICOLOGY (SUMMARY)---

Severely solvent refined and severely hydrotreated mineral base oils
have been tested at Mobil Environmental and Health Sciences
Laboratory by dermal application to rats 5 days/week for 90 days

at doses significantly higher than those expected during normal industrial exposure. Extensive evaluations including microscopic examination of internal organs and clinical chemistry of body fluids, showed no adverse effects.

---CHRONIC TOXICOLOGY (SUMMARY)---

The base oils in this product are severely solvent refined and/or severely hydrotreated. Chronic mouse skin painting studies of severely treated oils showed no evidence of carcinogenic effects. These results are confirmed on a continuing basis using various screening methods such as the Mobil Modified Ames Test and IP-346.

12. ECOLOGICAL INFORMATION

ENVIRONMENTAL FATE AND EFFECTS: This environmental assessment was conducted using information on the individual components as no test data was available for this specific formulation.

ECOTOXICITY: This material is not expected to be harmful to aquatic organisms.

MOBILITY: Dissolution of the higher molecular weight hydrocarbon components in water will be limited, but losses through sediment adsorption may be significant.

PERSISTENCE AND DEGRADABILITY: The majority of the components in this product are expected to be inherently biodegradable.

BIOACCUMULATIVE POTENTIAL: This product contains components with the potential to bio-accumulate.

13. DISPOSAL CONSIDERATIONS

WASTE DISPOSAL: Product is suitable for burning in an enclosed, controlled burner for fuel value or disposal by supervised incineration. Such burning may be limited pursuant to the Resource Conservation and Recovery Act. In addition, the product is suitable for processing by an approved recycling facility or can be disposed of at an appropriate government waste disposal facility. Use of these methods is subject to user compliance with applicable laws and regulations and consideration of product characteristics at time of disposal.

RCRA INFORMATION: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrosivity, or reactivity. The unused product is not formulated with substances covered by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

14. TRANSPORT INFORMATION

USA DOT: NOT REGULATED BY USA DOT.

RID/ADR: NOT REGULATED BY RID/ADR.

IMO: NOT REGULATED BY IMO.

IATA: NOT REGULATED BY IATA.

15. REGULATORY INFORMATION

US OSHA HAZARD COMMUNICATION STANDARD: Product assessed in accordance with OSHA 29 CFR 1910.1200 and determined to be hazardous.

EU Labeling: Product is not dangerous as defined by the European Union Dangerous Substances/Preparations Directives.

Symbol: Not applicable.

Risk Phrase(s): Not applicable.

Safety Phrase(s): S24-62.

Avoid contact with skin. If swallowed, do not induce vomiting: seek medical advice immediately and show this container or label.

Contains: Low Viscosity Oil.

Governmental Inventory Status: All components comply with TSCA, EINECS/ELINCS, ATCS, METI, and DSL.

U.S. Superfund Amendments and Reauthorization Act (SARA) Title III: This product contains no "EXTREMELY HAZARDOUS SUBSTANCES".

SARA (311/312) REPORTABLE HAZARD CATEGORIES:
CHRONIC ACUTE

This product contains no chemicals subject to the supplier notification requirements of SARA (313) toxic release program.

The following product ingredients are cited on the lists below:

CHEMICAL NAME	CAS NUMBER	LIST CITATIONS
TRIPHENYL PHOSPHATE (0.15%)	115-86-6	22

--- REGULATORY LISTS SEARCHED ---

1=ACGIH ALL	6=IARC 1	11=TSCA 4	16=CA P65 CARC	21=LA RTK
2=ACGIH A1	7=IARC 2A	12=TSCA 5a2	17=CA P65 REPRO	22=MI 293
3=ACGIH A2	8=IARC 2B	13=TSCA 5e	18=CA RTK	23=MN RTK
4=NTP CARC	9=OSHA CARC	14=TSCA 6	19=FL RTK	24=NJ RTK
5=NTP SUS	10=OSHA Z	15=TSCA 12b	20=IL RTK	25=PA RTK
				26=RI RTK

Code key: CARC=Carcinogen; SUS=Suspected Carcinogen; REPRO=Reproductive

16. OTHER INFORMATION

USE: AVIATION HYDRAULIC FLUID

NOTE: PRODUCTS OF EXXON MOBIL CORPORATION AND ITS AFFILIATED COMPANIES ARE NOT FORMULATED TO CONTAIN PCBS.

Health studies have shown that many hydrocarbons pose potential human health risks which may vary from person to person. Information provided on this MSDS reflects intended use. This product should not be used for other applications. In any case, the following advice should be considered:

INJECTION INJURY WARNING: If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

Precautionary Label Text:

CONTAINS LOW VISCOSITY OIL

CAUTION!

LOW VISCOSITY MATERIAL-IF SWALLOWED, MAY BE ASPIRATED AND CAN CAUSE SERIOUS OR FATAL LUNG DAMAGE. MAY CAUSE NOSE, THROAT AND LUNG IRRITATION, DIZZINESS, NAUSEA, LOSS OF CONSCIOUSNESS.

PROLONGED, REPEATED SKIN CONTACT MAY CAUSE IRRITATION.

Keep away from heat, sparks, and flame. Avoid breathing vapor. Avoid contact with skin or clothing. Keep container closed. Use with adequate ventilation.

FIRST AID: If inhaled, remove to fresh air. If not breathing, give artificial respiration, preferably mouth-to-mouth. If breathing is difficult, give oxygen. Call a physician immediately. In case of contact, wash skin with soap and water. Remove contaminated clothing. Call a physician if irritation persists. Wash or dispose of contaminated clothing. If swallowed, seek immediate medical attention. Do not induce vomiting. Only induce vomiting at the instruction of a physician.

For industrial use only. Not intended or suitable for use in or around a household or dwelling.

Empty container may contain product residue, including flammable or explosive vapors. Do not cut, puncture, or weld on or near container. All label warnings and precautions must be observed until container has been thoroughly cleaned or destroyed.

Refer to product Material Safety Data Bulletin for further safety and health information.

For Internal Use Only: MHC: 1* 1* NE 1* 1*, MPPEC: C, TRN: 490110-00,
ELIS: 400275, CMCS97: 970584, REQ: MIAMI, SAFE USE: C
EHS Approval Date: 12AUG2003

Information given herein is offered in good faith as accurate, but without guarantee. Conditions of use and suitability of the product for particular uses are beyond our control; all risks of use of the product are therefore assumed by the user and WE EXPRESSLY DISCLAIM ALL WARRANTIES OF EVERY KIND AND NATURE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN RESPECT TO THE USE OR SUITABILITY OF THE PRODUCT. Nothing is intended as a recommendation for uses which infringe valid patents or as extending license under valid patents. Appropriate warnings and safe handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law, republication or retransmission of this document, in whole or in part, is not permitted. Exxon Mobil Corporation and its affiliated companies assume no responsibility for accuracy of information unless the document is the most current available from an official ExxonMobil distribution system. Exxon Mobil Corporation and its affiliated companies neither represent nor warrant that the format, content or product formulas contained in this document comply with the laws of any other country except the United States of America.

Prepared by: ExxonMobil Oil Corporation
Environmental Health and Safety Department, Clinton, USA



APPENDIX VII

**ANSI/B93.19M-1972
(R1993-Excerpt)**



ANSI/B93.19M-
1972 (R1993)

First edition
6 December 1972

AMERICAN NATIONAL STANDARDS INSTITUTE • A NATIONAL STANDARD FOR FLUID POWER

Hydraulic fluid power — Particulate contamination analysis — Extraction of fluid samples from lines of an operating system

(Technically identical to ISO 4021:1977)

(NFPA/T2.9.1-1972)

(Metric only)

SPONSOR



National
FLUID POWER
Association

Descriptors: hydraulic fluid power, liquids, chemical analysis, sampling, contamination.

Hydraulic fluid power — Particulate contamination analysis — Extraction of fluid samples from lines of an operating system

0 Introduction

In hydraulic fluid power systems, power is transmitted and controlled through a fluid under pressure within an enclosed circuit. The fluid is both a lubricant and a power-transmitting medium.

Reliable system performance requires control of the fluid medium. Qualitative and quantitative determination of particulate contamination in the fluid medium requires precision in obtaining the sample and determining the nature and extent of contamination.

The most representative sample is obtained from a system while the fluid is following in a turbulent manner. This standard gives the procedure for obtaining that sample, known as a dynamic sample.

1 Scope

This standard specifies a method of extracting dynamic fluid samples from a line of an operating hydraulic fluid power system.

The hydraulic fluid samples must be representative of the particulate contaminant in the fluid flowing at the point of sampling. (The samples are used for particulate contamination analysis.)

2 References

ISO 1219, *Fluid power systems and components — Graphic symbols.*

ISO 5598, *Fluid power — Vocabulary.*

3 Definitions

3.1 fluid sampling, dynamic: The extraction of a sample of fluid from a turbulent section of a flow stream.

3.2 fluid sampling, static: The extraction of a sample of fluid from a fluid at rest.

3.3 sampler, turbulent: A device for creating turbulence in the main stream while extracting a fluid sample.

3.4 For definitions of other terms used, see ISO 5598.

4 Graphic symbols

Graphic symbols used are in accordance with ISO 1219.

5 Rules

5.1 Use a dynamic fluid sampling method (see clause 7).

5.2 Control the rate of sample extraction only by means of a capillary restriction.

5.3 Attach the sampling device permanently, or by a quick disconnect coupling.

6 Sampling device

Note — Take normal precautions to safeguard personnel and equipment.

6.1 Use a typical sampling device as shown in the figure if turbulent flow conditions exist in the main stream.

ANSI/B93.19M-1972

6.1.1 Permanently attach the ball valve or the valved portion of the quick disconnect coupling to the port through which the sample is to be taken.

6.1.2 Provide a dust cap for the item in 6.1.1.

6.1.3 Use the remaining equipment only for sampling.

6.1.4 Select capillary tubing having an inside diameter and length consistent with the sampling rate desired.

6.1.4.1 Do not use capillary tubing having an inside diameter smaller than 1,25 mm. Other cross-sections (such as rectangular) may be used provided that the smallest inside dimension is not less than 1 mm.

6.1.4.2 Sharpen and deburr the ends of the capillary tube to facilitate subsequent piercing of the film covering the sampling bottle mouth.

6.2 If turbulence in the flow stream cannot be ensured, use a means of creating turbulence such as a turbulent flow sampler.

7 Sampling procedure

7.1 Where a sampling device incorporating a quick disconnect coupling is used, attach the separable portions of the sampling device to the permanently attached portion.

7.2 Open the ball valve.

7.3 Pass a minimum of 200 cm³ of fluid through the sampling device before collecting the fluid.

7.4 Without disturbing the ball valve, place the sampling bottle in position to collect the fluid.

7.4.1 Use the sharp end of the capillary tubing to pierce the plastic film covering the bottle mouth.

7.4.2 Take a sample of not more than 75 % and not less than 50 % of the sampling bottle volume.

7.5 When a sufficient sample has been collected, remove the sampling bottle before turning off the flow with the ball valve.

7.6 Recap the sample bottle immediately after withdrawing the capillary tubing.

7.7 Where a sampling device incorporating a quick disconnect coupling is used, disconnect the separable portions of the sampling device and remove any residual fluid films by flushing with a suitable solvent.

7.8 Immediately upon disconnection, replace the dust cap on the permanently mounted section of the quick disconnect coupling.

8 Identification statement

Use the following statement in test reports, catalogs and sales literature when electing to comply with this standard:

"Method of extracting fluid samples conforms to ANSI/B93.19M-1972, *Hydraulic fluid power — Particulate contamination analysis — Extraction of fluid samples from lines of an operating system.*"

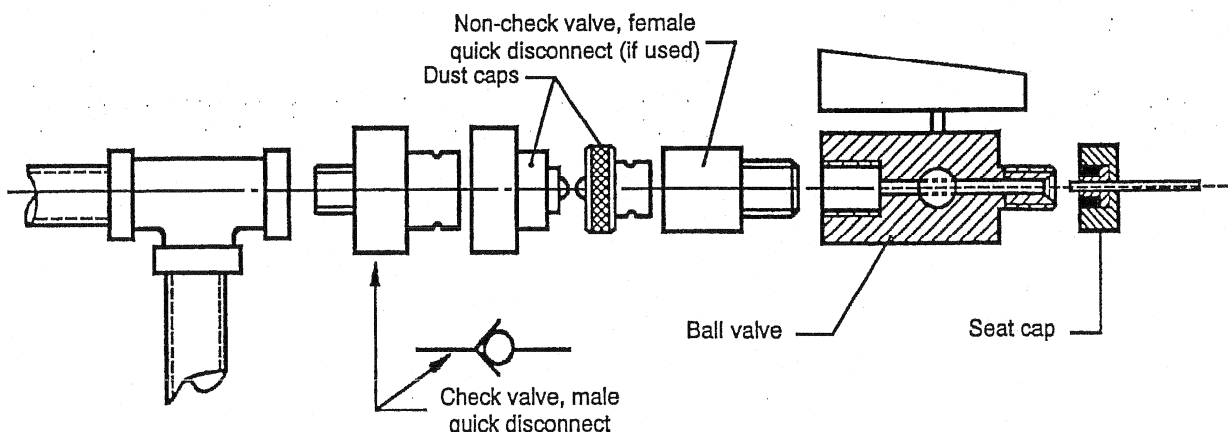


Figure 1 — Typical field type sampling device



APPENDIX VIII

**Instrument
Certification
Notice**



INSTRUMENT CERTIFICATION NOTICE

The gauge Certificates of Calibration supplied for the gauge(s) on this unit contain the calibration data for the actual instrument calibrated, along with the calibration date of the **STANDARD** used to perform the calibration check.

The due date for re-calibration of the instrument should be based upon the date the instrument was placed in service in your facility. Re-calibration should be done on a periodic basis as dictated by the end user's quality system or other overriding requirements.

Note that Tronair, Inc. does not supply certificates of calibration on flow meters or pyrometers unless requested at the time of placed order. These instruments are considered reference indicators only and are not critical to the test(s) being performed on the aircraft.