


## **OPERATION & SERVICE MANUAL**



# Models: 02-0524C0110 02A0524C0110 02B0524C0110 02C0524C0110 5 Ton (4.5 Metric Ton) Single Stage Jack

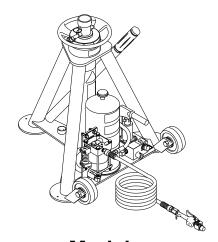

04/2014 - Rev. 01

REVISION DATE OR 10/2010 01 04/2014

TEXT AFFECTED Original Release Modified Parts Lists



#### **TABLE OF CONTENTS**

		<u>PAGI</u>
PROD	DUCT INFORMATION	<i>'</i>
1.1	DESCRIPTION	
1.2	MODEL & SERIAL NUMBER	
1.3	MANUFACTURER	
1.4	USAGE	
	TY INFORMATION	
	ALARM AND WARNING SYSTEMS	
2.1		
2.2	WARNING and DANGER SIGNS	
2.3	COMPONENT SAFETY FEATURES	
2.4	FUNCTIONAL SAFETY FEATURES	
2.5	FEATURES FOR OPERATOR SAFETY	
2.6	ENVIRONMENTAL SAFETY FEATURES	
2.7	PROTECTION SYSTEMS	
2.8	CLOSED CIRCUITS	
.9	INTERLOCKING	
.10	NECESSARY PERSONAL PROTECTIVE EQUIPMENT	
2.11	SAFETY GUIDELINES	
	CONDITIONS FOR SAFE USE	
2.12		
2.13	OPERATOR QUALIFICATIONS	
2.14	ADDITIONAL SAFETY MEASURES	
2.15	IN CASE OF HYDRAULIC FAILURE	
PACK	AGING AND STORAGE	
3.1	PACKAGING REQUIREMENTS	
3.2	HANDLING	
3.3	STRAPPING	
3.4	PACKAGING PROTECTION	
3.5	LABELING OF PACKAGING	
3.6	STORAGE COMPATIBILITY	
3.7	STORAGE ENVIRONMENT	
.8	STORAGE SPACE AND HANDLING FACILITIES	
ran:	SPORTATION	3
ISSE	MBLY	
.1	GENERAL INSTRUCTIONS	
5.2	PRE-USE CHECKS	
.3	PERSONNEL REQUIREMENTS	
.4	INSPECTION AND TEST PROCEDURES	
	ALLATION	
3.1	AIR SUPPLY REQUIREMENTS	
OPER	ATION	
7.1	OPERATING PARAMETERS	
7.2	NUMERICAL VALUES	
7.3	OPERATOR CONTROLS	
7.4	OPERATING INSTRUCTIONS	
7.4.1	Rules For Operating:	
7.4.2	Jack Instructions	
	VING	
	TENANCE	
9.1	GENERAL	
9.2	MAINTENANCE SCHEDULE	
9.2.1	Storage/Low Usage:	
9.3	SERVICING JACK	
9.4	REMOVING AND SERVICING PUMP	
9.5	JACK FUNCTION LOAD TEST	
9.6	PNEUMATIC PUMP	
	BLE SHOOTING.	
	ISION OF SPARES	
	S LIST	
N-SE	RVICE SUPPORT	10
	RANTEES/LIMITATION OF LIABILITY	
APPFI	NDICES	



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., it suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

#### 1.0 PRODUCT INFORMATION

#### 1.1 DESCRIPTION

Name of Equipment: 5 TON SINGLE STAGE JACK

Model Numbers: 02-0524C0100 (Standard) 02A0524C0100 (with Air Pump Option)

02B0524C0100 (with Air Pump Option & Spring Loaded Casters

02C0524C0100 (with Spring Loaded Casters)

#### 1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit

#### 1.3 MANUFACTURER

TRONAIR, Inc. Telephone: (419) 866-6301 or 800-426-6301

1 Air Cargo Pkwy East Fax: (419) 867-0634
Swanton, Ohio 43558 USA E-mail: sales@tronair.com
Website: www.tronair.com

#### 1.4 USAGE

The device is intended to lift an aircraft by its fuselage and/or main wing with other hydraulic jacks arranged by position and quantity to provide proper balance, and in conjunction with the correct jack pad, whose maximum load on any one jack does not exceed the rated capacity of the jack.

The jacks are not intended for metal forming, metal working, or any purpose other than that stated above.

#### 2.0 SAFETY INFORMATION

#### 2.1 ALARM AND WARNING SYSTEMS

None

#### 2.2 WARNING and DANGER SIGNS

See labels on unit.

#### **WARNING!**



The ram locknuts are user operated safety devices. Failure to utilize these locknuts may result in personal injury or death.

#### 2.3 COMPONENT SAFETY FEATURES

- Ram Locknut prevents lowering of the ram. The Ram Locknut must be lowered as the aircraft is being lifted. You MUST
  keep locknut within 2 inches of stop while raising aircraft.
- Hold To Run Air Valve requires the operator to hold the air lever to raise the ram using the air pump. Releasing the air valve stops upward movement of the ram.

#### 2.4 FUNCTIONAL SAFETY FEATURES

• Pressure Relief Valve prevents overload during raising operations.

#### 2.5 FEATURES FOR OPERATOR SAFETY

- Hold To Run Air Valve
- · Cautions and Instruction Labels located on jack
- Ram Locknut

#### 2.6 ENVIRONMENTAL SAFETY FEATURES

The jack is non-polluting. See Appendix for Material Safety Data concerning the recommended hydraulic fluid (MIL-PRF-5606).

#### 2.7 PROTECTION SYSTEMS

None



2.0 SAFETY INFORMATION (continued)

2.8 CLOSED CIRCUITS

None

2.9 INTERLOCKING

None

2.10 NECESSARY PERSONAL PROTECTIVE EQUIPMENT



CAUTION!

Always wear safety glasses.

2.11 SAFETY GUIDELINES

#### **CAUTION!**



Do not place hands on top of jack near ram locknuts while lowering jack. Pinch points exist between top of jack and threads on ram.

- 1. NEVER put hands between the aircraft and the jack pad; as after aircraft has been lowered, struts may have hung up.
- 2. NEVER align jack under aircraft by pounding on jack legs. Dented legs may lead to jack collapse.
- 3. ALWAYS lower ram locking nut(s) after jack is under load. Be sure ram nut(s) is seated fully after jacking.
- 4. ALWAYS raise and lower jacks simultaneously so that aircraft remains level.
- 5. ALWAYS use a tail or nose stand, as applicable, for additional stability.

# $\triangle$

#### WARNING!

The ram locknuts are user operated safety devices. Failure to utilize these locknuts may result in personal injury or death.

#### 2.12 CONDITIONS FOR SAFE USE

- Use in a clean dry environment on a level surface.
- Operate between -20° C and 50°C (-4° F and 122° F).

#### 2.13 OPERATOR QUALIFICATIONS

This jack is intended to be used by the skilled and trained aircraft technician. The operator must be familiar with the jacking procedures for the aircraft to be raised, and the operation of the jack.

**Installation/Maintenance/Dismantling Qualifications:** This jack is to be installed, maintained, and dismantled by qualified technicians familiar with hydraulic systems.

#### 2.14 ADDITIONAL SAFETY MEASURES

This jack must be used in accordance with this technical manual, and in accordance with the aircraft manufacturer's jacking procedures.

#### 2.15 IN CASE OF HYDRAULIC FAILURE

Proper use of the ram locknuts will prevent lowering of the ram. To prevent unintentional descent ram locking nuts must be kept within 2 inches of the stop while raising the jack.



#### 3.0 PACKAGING AND STORAGE

#### 3.1 PACKAGING REQUIREMENTS

Jacks are to be packaged as required to prevent damage to legs or hydraulic equipment during shipment.

#### 3.2 HANDLING

Jacks can be rolled by hand on its casters.

#### 3.3 STRAPPING

Jacks can be strapped down by suitable means to prevent unwanted movement during shipment.

#### 3.4 PACKAGING PROTECTION

No special packaging material for cushioning or suspension is required.

#### 3.5 LABELING OF PACKAGING

Packaging should be labeled DO NOT DROP.

#### 3.6 STORAGE COMPATIBILITY

No special considerations.

#### 3.7 STORAGE ENVIRONMENT

- Store jacks between -20°C and +50°C/-4° F and 122° F.
- Always store jack with ram all the way down.
- Suitable for outdoor storage by using a full coverage waterproof tarp or canvas.

#### 3.8 STORAGE SPACE AND HANDLING FACILITIES

Minimum Closed Height: 24 in (60.96 cm)
Mechanical Extension: 8 in (20.32 cm)
Hydraulic Extension: 16 in (40.64 cm)
Maximum Height Obtainable: 48 in (121.92 cm)
Weight: 98 lbs (44.5 kg)

#### 4.0 TRANSPORTATION

Lifting can be accomplished by crane and strap thru top of tripod, or by fork truck under lower tripod support. Approximate weight is 98 lbs (44.5 kg).



#### 5.0 ASSEMBLY

This product is shipped completely assembled and tested and requires no further assembly before operation. The following sections apply when servicing the unit.

#### 5.1 GENERAL INSTRUCTIONS

- 1. This product should be assembled and/or repaired using good workmanship practices and proper tools. Bolts and elastic stopnuts should be tightened to a torque not to exceed industry standards for Grade '5' bolts.
- 2. All replacement parts must be the same as or better than the original parts supplied.
- 3. Dispose of waste per federal and local laws and regulations.
- 4. No modifications are allowed that will adversely affect the jacks safety performance.
- 5. The pressure relief valve is not serviceable. It must be replaced as a unit.

#### 5.2 PRE-USE CHECKS

- 1. Refer to the Illustrated Parts List to identify and ensure that all parts are present.
- 2. Generally check over unit to assure the tightness of all nuts, bolts and fittings.
- 3. With rams completely collapsed, check hydraulic fluid level.
  - Replenish with MIL-PRF-5606 fluid as required.
  - Fluid Level: 1.5 in (3.8 cm) below vent.

# NOTE: Refer to fluid manufacturer's (Appendix) Material Safety Data Sheet, and advisory for handling and disposal of fluid.

#### 5.3 PERSONNEL REQUIREMENTS

This jack is to be assembled by qualified technicians familiar with hydraulic systems.

#### 5.4 INSPECTION AND TEST PROCEDURES

- 1. Ensure fluid level is within 1.5 inches (3.8 cm) from reservoir vent cap.
- 2. Raise ram to full stroke, and check for leaks.

#### 6.0 INSTALLATION

Installation and commissioning requires connection of the air valve to an adequate air supply (Air Pump equipped Models only).

#### 6.1 AIR SUPPLY REQUIREMENTS

- 25 psi (1.72 bar) Minimum
- 40 psi (2.75 bar) Recommended
- 125 psi (8.60 bar) Maximum



#### 7.0 OPERATION

#### 7.1 OPERATING PARAMETERS


- 1. The user shall work in accordance with the Operator Manual.
- 2. At no time shall personnel work under the raised load until it is secured by suitable means, i.e. ram locknut.
- 3. The employer of the operator shall provide for all necessary training and give information about pumping and translating forces.
- 4. Operate between -20° C and 50°C (-4° F and 122° F).

#### 7.2 NUMERICAL VALUES

Rated Capacity: 10,000 lbs (4,536 kg)
Minimum Closed Height: 24 in (60.96 cm)
Mechanical Extension: 8 in (20.32 cm)
Hydraulic Extension: 16 in (40.64 cm)
Maximum Height Obtainable: 48 in (121.92 cm)
Weight: 98 lbs (44.5 kg)

Pressure Relief Setting: 1,950 + 195/-0 psig (1.34+13/-0 bar)
Noise level is 64 dB(A) at a distance of 120 in (304.8 cm) at an inlet

pressure of 100 psi (6.9 bar).



See illustration

#### 7.4 OPERATING INSTRUCTIONS

The user should be familiar with the following statements prior to using the jack(s):




#### **CAUTION!**

- NEVER put hands between the aircraft and the jack pad; as after aircraft has been lowered, struts may have hung up.
- NEVER align jack under aircraft by pounding on jack legs. Dented legs may lead to jack collapse.
- ALWAYS lower ram locking nut(s) after jack is under load. Be sure ram nut(s) is seated fully after jacking.
- 4. ALWAYS raise and lower jacks simultaneously so that aircraft remains level.
- 5. ALWAYS use a tail or nose stand, as applicable, for additional stability.

#### 7.4.1 Rules For Operating:

- 1. The user shall work in accordance with the Operator and/or Technical Manuals.
- 2. At no time shall personnel work under the raised load until it is secured by suitable means, i.e. ram locknut.
- 3. The employer of the operator shall provide for all necessary training and give information about pumping and translating forces.
- 4. Operate between -20° C and 50°C/-4° F and 122° F.

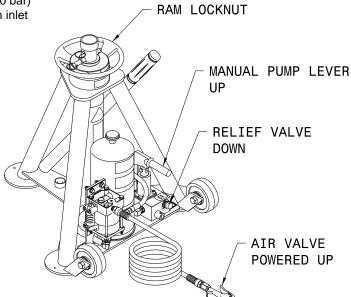



- 7.4 OPERATING INSTRUCTIONS (continued)
- 7.4.2 Jack Instructions

#### To Raise Aircraft:

- 1. Place jack on a hard, level surface.
- 2. Raise mechanical extension as close to aircraft jack pad as possible.

#### WARNING!



The locking pin MUST be placed in the ram protection ring groove and fully through the mechanical extension.

The locking pin washer and ball lock MUST be placed outside the ram protection ring.

- Visually inspect the jack prior to every use.
- Do not place extra locking pins in any other hole on the mechanical extension.
- Insure mating surfaces to jack point are free of debris and damage.
- Under no conditions should the locking pin washer or washer groove be inside the ram protection ring groove.
- Under no conditions should the locking pin's ball lock be inside the ram protection ring groove.
- Never use the jack if the ram protection ring is not installed.
- Never use the locking pin without a locking pin washer.
- Never use a locking pin that has been damaged.
- Never use a ram protection ring that has been damaged or deformed.
- Replace ram protection ring if it does not have a radius groove for the locking pin.
- Load test jacks annually.
- Only order replacement parts from Tronair.
- Failure to comply could result in premature failure below certified weight and could cause serious injury including death.

# Jacking Point Surface Jack Pad Mechanical Extension Ball Lock Ram Protection Ring Groove Ram

### **Correct Pin Placement**



7.4 Operating instructions continued on following page.



#### 7.4.2 Jack Instructions (continued)

#### **Incorrect Pin Placements**



Washer In Ram Protection Ring



Ball Lock In Ram Protection Ring



Washer On Top Of Ram Protection Ring



Locking Pin Not In Ram Protection Ring and top Locking Pin in Mechanical Extension (use only one pin)


#### **Results Of Locking Pin In Incorrect Location**



#### **Ram Protection Ring**



Acceptable Condition

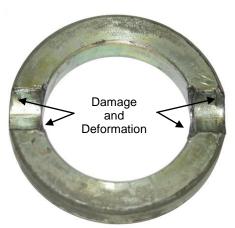

**Unacceptable Condition** 



#### 7.4.2 Jack Instructions (continued)

3. Close pump release valve by turning clockwise.

NOTE: Turning the pump release valve counter-clockwise lowers the jack. Turning the pump release valve clockwise stops the jack's descent, and allows it to be raised.

- 4. Operate the pump using the handle, or by holding the lever on the air valve (if equipped with an air pump).
- 5. Lower ram locknuts as aircraft is raised.



#### WARNING!

- The ram locknuts are user operated safety devices. Failure to utilize these locknuts may result in personal injury or death.
- Do not place hands on top of jack near ram locknuts while lowering jack. Pinch points exist between top of jack and threads on ram.
- Always wear safety glasses.

#### To Lower Aircraft:

- Lower all jacks simultaneously.
- 2. If ram locking nut(s) is tight, raise jack slightly to release nut(s).
- Loosen pump release valve slightly to slowly lower aircraft. Raise locking nut(s) as jack ram(s) lower.

NOTE: When using jack during washing operations, completely cover top of jack near ram seal.

#### 8.0 TRAINING

Training of operating personnel is the responsibility of the employer. This jack must be used in accordance with aircraft manufacturer's instructions.

#### 9.0 MAINTENANCE

#### 9.1 GENERAL

- All maintenance and/or repair work should be done using good workmanship practices and proper tools.
- The work area should be clean and free of dirt.
- When O-rings and backup rings are removed, every effort should be made to avoid the contact of tools with the critical surfaces of parts. Surface deformities could cause degradation of seals and failure.
- It is good practice to replace both O-rings and backup rings once removed. Cut and damaged O-rings normally result in fluid leakage.
- If cylinder bore is found to be rusty, it may be honed to a maximum diameter of 2.629 inches (66.78 mm) and a surface finish of 16 micro inches. If pitting in the bore cannot be removed by this process, the jack cylinder must be replaced before the jack can be returned to service.
- At this time, flush old hydraulic fluid and dirt from overall system and replenish with new, clean hydraulic fluid.
- When refilling the hydraulic system the characteristics of the hydraulic fluid used in the jack and the level of the hydraulic fluid as it is noted on the jack shall be observed.
- Jacks shall be maintained and repaired in accordance with the manufacturer's instructions. Such maintenance and repair shall be carried out by qualified persons.
- No modifications shall be carried out which adversely affect the compliance of the jack with draft standard 2006/42/EC.

#### 9.2 MAINTENANCE SCHEDULE

Check Fluid Level	Each Use
Lubricate Casters	3 Months
Cleaning	Annually Or As Needed
Capacity Test (105%-110% of jack's rated capacity)	

NOTE: Wipe with soft cloth only, do no pressure wash or spray water directly at ram seal.

#### 9.2.1 Storage/Low Usage:

If jack is unused for 90 days, raise ram to full hydraulic extension, spray ram with DoALL RPM, LPS or equivalent water repellant, BUNA N compatible lubricant.



#### 9.0 MAINTENANCE (continued)

9.3 SERVICING JACK

#### To Disassemble Jack:

- 1. Remove mounting plate (Item 37) by unscrewing three socket head cap screws (Item 36).
- 2. Raise ram assembly (Item 39) to the point where it can be lifted from the jack cylinder.

#### To Re-assemble Jack:

Re-assemble in reverse order of above.

#### NOTES:

- Dispose of hydraulic fluid per local and federal regulations.
- To minimize air entrapment under the ram, raise the oil level in the cylinder to chamfer of the cylinder prior to ram insertion.
- Torque socket head cap screws (Item 36) to 25 ft-lbs (34 Nm)

#### 9.4 REMOVING AND SERVICING PUMP

#### NOTE: If pump is found faulty, call the factory for replacement or replace seals as follows:

- 1. Review Appendix III HC-1948 Hand Pump Parts List.
- 2. Clamp suction (push on) hose and remove hose from pump.
- 3. Uncouple fitting of hydraulic hoses from pump.
- 4. Remove pump from jack.
- 5. Remove cotter pin from clevis pin.
- 6. Remove four (4) socket head cap screws.
- 7. Remove flanges.
- 8. Remove tube assembly.
- 9. Replace O-rings and backup ring. (See Appendix III for kits available.)
- 10. Re-assemble in reverse order.

#### 9.5 JACK FUNCTION LOAD TEST

#### NOTE: If function load testing is required:

- 1. Take all necessary precautions to prevent injury.
- 2. Always jack against a load and never against the jack itself.
- 3. Do not exceed a test load equal to the jack rated capacity plus 10%.

#### 9.6 PNEUMATIC PUMP

See Appendix II Haskel Air Pump Manufacturer Data for complete parts list and repair information.



#### 10.0 TROUBLE SHOOTING

TROUBLE	PROBABLE CAUSE	ACTION	
Fluid leakage at pump piston or pump body  Damaged backup ring, o-ring, piston or pump body		Remove piston and pump body. Inspect for damage. Replace defective part(s). Replace removed o-ring and backup ring	
External fluid leakage at rams	Damaged o-ring, backup ring or inner cylinder wall.	Remove rams as a unit from cylinder. Inspect parts. Replace o-ring and defective part(s)	
	Release valve not closed properly	Fully tighten release valve	
	Low fluid level	Fill to correct fluid level	
Jack fails to lift rated load	Pressure relief valve improperly adjusted	Adjust or replace release valve	
Jack fails to lift fateu load	Leakage at inlet or outlet check ball	Inspect valve body for wear or replace valve body and check balls	
	Vent screw closed	Open vent screw	
Dama will not augment land	Leaking ram o-ring seals	Check for external leakage, if present replace defective seal and back up ring	
Rams will not support load after manual or pneumatic	Leaking pressure check valve	Inspect valve body for wear or replace valve body and check balls	
pump up	Leaking pressure relief valve	Remove release valve, inspect ball and ball seat in pump block. Replace effective part(s)	
Rams raise and fall with	Release valve open	Fully tighten release valve	
	Inlet check valve not seated or sticking	Pump rapidly to dislodge or replace valve body	
each manual pump stroke	Pressure check valve not seated or sticking	Pump rapidly to dislodge or replace valve body	
	Ram locknut not loosened	Raise jack ¼ inch and release locknut	
Jack fails to lower	Vent screw closed	Open vent screw	
Jack falls to lower	O-Ring (pinched or rolled)	Replace o-ring and back-up ring, clean up cylinder wall of debris	

#### 11.0 PROVISION OF SPARES

Recommended Spares to be kept on hand:

K-1049 Kit, Ram Seal Replacement

K-1685
Kit, Repair Fluid Seal (Air Option only)
K-1686
Kit, Repair Air Seal (Air Option only)
K-3441
Kit, Pump Seal Replacement

Spare parts may be obtained from the manufacturer:

**TRONAIR**, Inc. Telephone: (419) 866-6301 or 800-426-6301

1 Air Cargo Pkwy East Fax: (419) 867-0634 Swanton, Ohio 43558 USA E-mail: sales@tronair.com Website: www.tronair.com

#### 12.0 PARTS LIST

Reference following pages for Parts Lists and Illustrations.

When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

#### 13.0 IN-SERVICE SUPPORT

Contact Tronair for technical services and information.



#### 14.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.

#### 15.0 APPENDICES

APPENDIX I Hydraulic Schematic


APPENDIX II Haskel Air Pump Manufacturer Data
APPENDIX III HC-1948 Hand Pump Parts List
APPENDIX IV Declaration of Conformity

APPENDIX V Safety Data Sheet - MIL-PRF-5606 Hydraulic Fluid

APPENDIX VI Maintenance Schedule




Parts List
When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

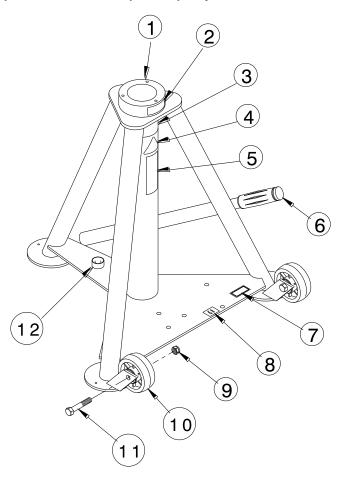

Item	Part Number	Description	Qty
1	Z-4820-01	Weldment, Jack	1
2	V-1001	Label, Made in USA	1
3	V-1779	Label, Serial Number	1
4	V-1805	Label, ISO General Danger	1
5	V-1198	Label, Tronair	1
6	H-1009-01	Assembly, Pump Handle	1
7	V-1775	Label, Pump Force	1
8	V-1776	Label, Down	1
9	G-1203-1095	Jamnut, ½-20, Elastic	2
10	U-1002	Wheel	2
11	G-1100-109526	Bolt, Hex Head, ½-20 x 2 ¾" long	2
12	HJ-532-02	Pad, Jack	1


Parts List
When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

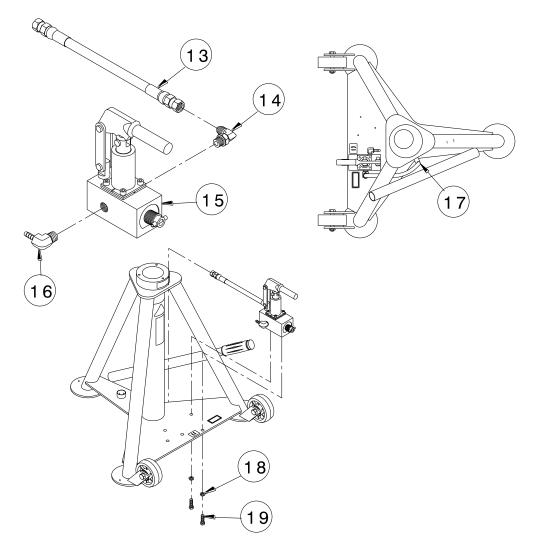

Item	Part Number	Description	Qty
13	TF-1043-03*15.0	Assembly, Hose, 15" long	1
14	N-2001-08-S-B	Elbow, Straight Thread	2
15	HC-1948	Pump, Hydraulic Hand	1
16	N-2788-02-S-B	Elbow, 90°	1
17	N-2003-06-S	Elbow, 3/8 JIC x 1/4 NPT	1
18	G-1251-1070R	Lockwasher, 3/8 Regular	2
19	G-1100-107010	Bolt, Hex Head, Grade 5, 3/8-16 x 1" long	2
21	TF-1047-01*09.0	Hose, 1/4 Gray x 9" long	1
Not Shown	H-1516-08	Clamp, 2 Ear Hose	2
Not Shown	N-2066-06-S-B	Plug, O-Ring Hex, SAE #6	1




Parts List
When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

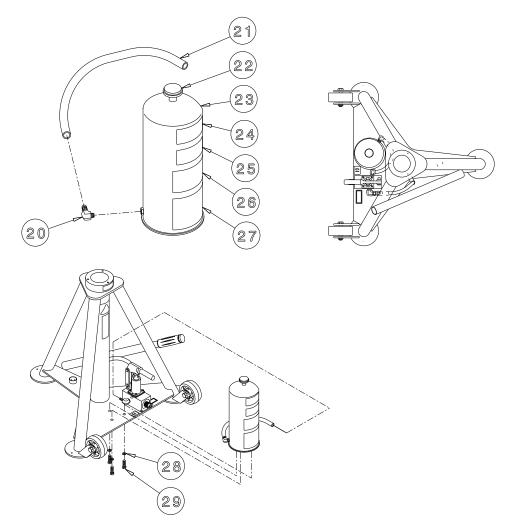

Item	Part Number	Description	
	K-1061-04	Kit, Reservoir Replacement; consists of:	
20	N-2653-01-S-B	Elbow, 90° Male, ¼ Hose x SAE #4	1
21	TF-1047-01*09.0	Hose, ¼ Gray x 9" long	1
22	H-1045	Breather	1
23	HC-2328	Reservoir, Translucent	1
24	V-1102	Label, Use MIL-PRF-5606	1
25	V-1016	Label, Capacity 10,000 lbs	1
26	V-1819	Label, Hydraulic Jack Caution	1
27	V-1820	Label, Hydraulic Jack Instruction	1
28	G-1250-1050N	Flatwasher, 1/4 Narrow	3
29	G-1100-105006	Bolt, Hex Head, Grade 5, ¼ - 20 x ¾ long	3
Not Shown	H-1516-08	Clamp, 2 Ear Hose	1


Parts List
When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

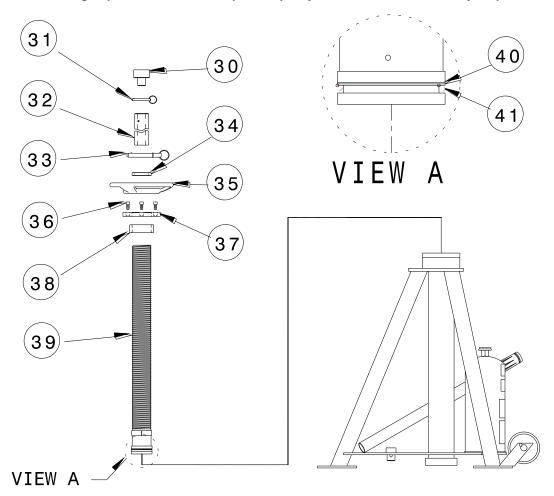

Item	Part Number	Description	Qty
30	HJ-532-01	Pad, Jack	1
31	G-1307-0418	Pin, ¼" diameter x 1.8" long	1
32	HJ-526-02	Extension	1
33	G-1318-0825	Pin, 1/2" diameter x 2.5" long "D"	1
34	HJ-536	Ring, Protection	1
35	H-2334	Locknut	1
36	G-1151-106205	Screw, Socket Head Cap, 5/16 -18 x 5/8" long	3
37	HJ-513	Plate, Mounting	1
39	HJ-522-02	Assembly, Ram (includes Seals)	1
	K-1049	Kit, Ram Seal Replacement; consists of:	
38	HJ-512	Ring, Guide	1
40	HC-2021-01	Ring, Backup	1
41	HC-2000-331	O-ring	1




Parts List - Air Pump Option
When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product.

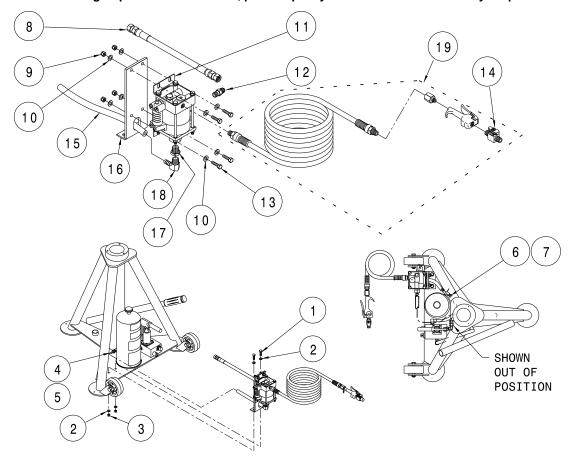

Item	Part Number	Description	Qty
4	N-2789-01-S-B	Connector, Straight Male, ¼ Hose x SAE #4	1
5	N-2740-04-S-B	Tee, Male Branch, SAE #4	1
6	N-2791-01-S-B	Elbow, 45° Male, ¼ Hose x SAE #4	1
7	TF-1047-01*06.0	Hose, ¼ Gray x 6" long	1
19	K-3333	Assembly, Blowgun	1
Not Shown	H-1516-08	Clamp, 2 Ear Hose	2
	Z-4621	Assembly, Air Pump; consists of:	
1	G-1100-106512	Bolt, Hex Head, Grade 5, 5/16 -24 x 11/4" long	2
2	G-1250-1060N	Flatwasher, 5/16 Narrow	4
3	G-1202-1065	Stopnut, 5/16 -24 Elastic	2
8	TF-1043-03*18.0	Assembly, Hose	1
9	G-1202-1055	Stopnut, 1/4-28 Elastic	4
10	G-1250-1050N	Flatwasher, ¼ Narrow	8
11	H-1174	Pump, Air	1
12	N-2009-08-S	Connector, Male, 3/8 -37° JIC x 1/4 NPT	1
13	G-1100-106512	Bolt, Hex Head, Grade 5, 1/4-28 x 1" long	4
14	H-1173	Plug, Valve	1
15	TF-1047-01*06.5	Hose, ¼ Gray x 6 ½" long	1
16	J-3415-01	Bracket, Air Pump	1
17	N-2210-04-S	Reducer, 3/8 NPT x 1/8 NPT	1
18	N-2410-01	Elbow, 90° Male, ¼ Hose x 1/8 NPT	1



## **Parts List - Spring Loaded Caster Option**

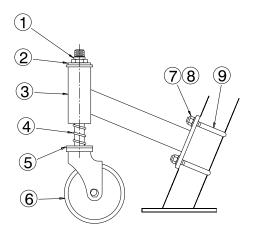


Item	Part Number	Description	Qty
1	G-1203-1105	Jamnut, <sup>5</sup> / <sub>8</sub> -18 Elastic	1
2	G-1250-1100N	Flatwasher, <sup>5</sup> / <sub>8</sub> Narrow	1
3	Z-3057-02-01	Weldment, Tube	1
4	H-1128-02	Spring, Compression	1
5	G-1250-1100W	Flatwasher, <sup>5</sup> / <sub>8</sub> Wide	1
6	U-1053	Caster	1
7	G-1202-1060	Stopnut, 5/16 -18 Elastic	4
8	G-1250-1060N	Flatwasher, <sup>5</sup> / <sub>16</sub> Narrow	4
9	G-1009-18	U-bolt	2



# **APPENDIX I**

**Hydraulic Schematic** 


## **Hydraulic Schematic**

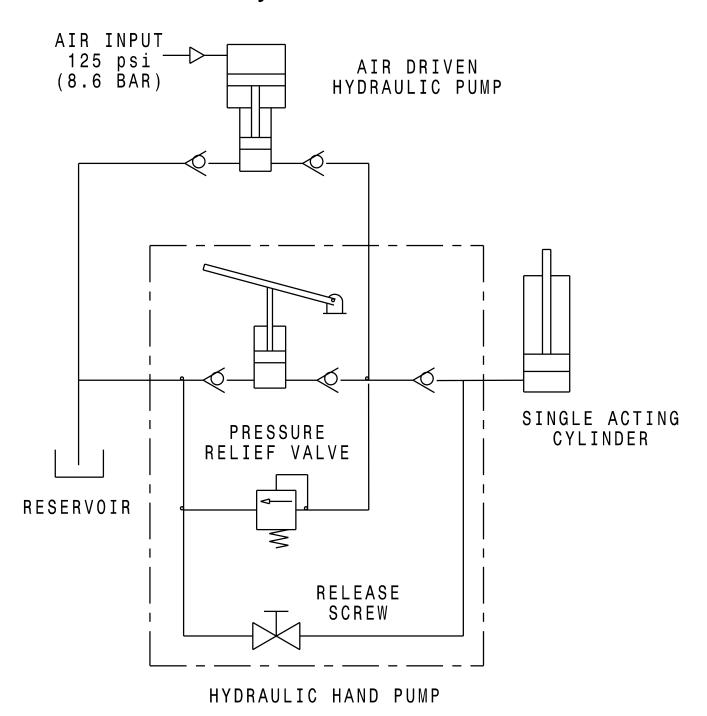



# **APPENDIX II**

**Air Pump Manufacturer Data** 

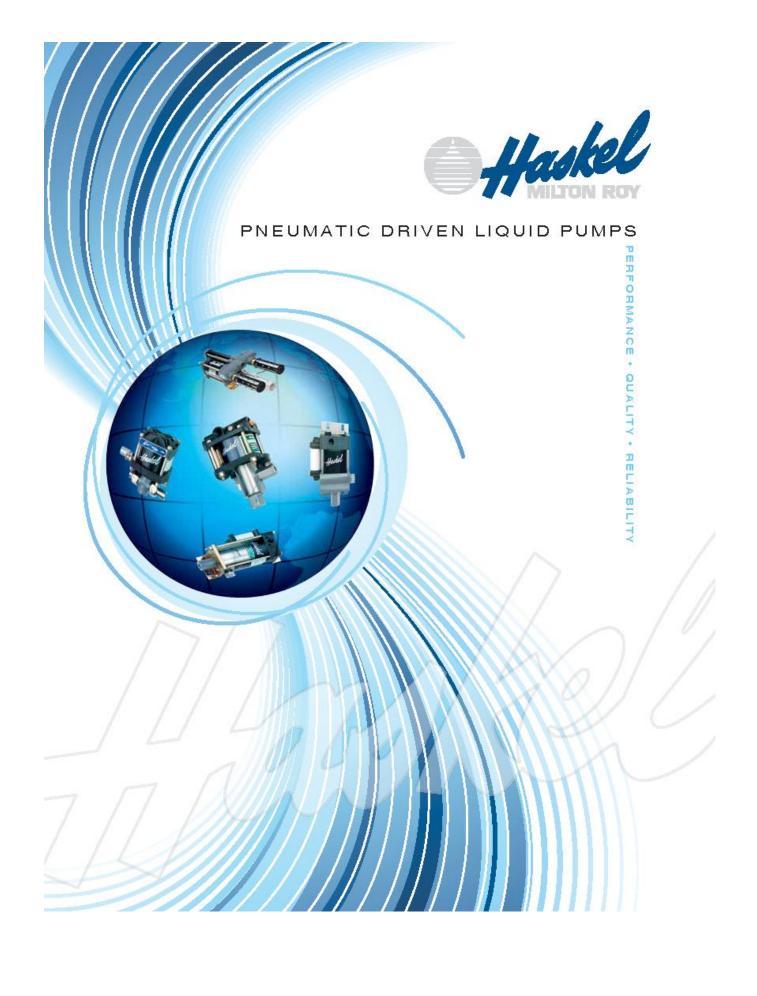



#### Welcome to Haskel

Haskel is an international organization offering a worldwide service through the Haskel group of companies and factory trained distributors. The Haskel group is headquartered in Burbank, California, with facilities throughout the world. We have built an enviable reputation for quality based on high pressure fluid and gas handling equipment.

In addition to offering a comprehensive range of pneumatic driven liquid pumps, air amplifiers, pneumatic and hydraulic driven gas boosters, high pressure valves, fittings and accessories, we custom design and build power pacs and test rigs. Our continued investment in technology ensures that Haskel will stay at the leading edge of high pressure technology.

This brochure introduces our pneumatic driven liquid pump range. Technical details and advice on any of the products shown is available on request.

We are here to solve your problems. Just give us a call at 818-843-4000 or visit our website at www.haskel.com for more information or to locate a distributor.

#### Why Use Haskel Pneumatic Driven Pumps?

#### Our pumps offer many advantages over electrically driven pumps:

- · Safe pneumatic operation no heat, flame or spark risk
- Up to 100000 psi (7000 bar) capability
- · Infinitely variable cycling speed
- Stall feature at pre-determined pressure to hold that pressure without consuming power
- · Problem-free stop/start applications
- Easily automated many modification and control options
- · Suitable for most liquids and liquefied gases
- Alternative gas drive options sour gas, natural gas, boil off gases, nitrogen

- No need for air line lubrication saves costs and prevents contamination
- Robust, reliable, compact and easy to maintain proven design.
- Unbalanced cycling spool provides immediate response to pressure changes
- Also available in standard, or custom built power pac configurations
- · Excellent worldwide service for spares and repairs
- . Can be manufactured to meet API 675, ATEX, CE and NACE

# Applications include:

- · Pressure testing
- · Work holding/power clamping
- · Jacking/lifting
- · Valve actuator control
- · Hydraulic cylinder actuation
- · Press safety overload devices
- · Roller tensioning
- Metering
- Precision lubrication and spraying
- · Liquified gas transfer



#### Pressure and Flow on Demand

This guide will help you to pre-select the pump ideally suited for your application. If you have specific questions, however, we urge you to provide us with details of the duties you require from the pump, available air/gas drive pressure, and pressure/flow requirements, and we will recommend a model and any corresponding accessories.

#### **Output Horsepower Ratings**

The pumps are categorized on their horsepower ratings (see pages 6-7). These are approximate and peak at 100 psi (7 bar), assuming adequate drive air, pressure and volume. Peak horsepower is at about 75% nominal ratio x air drive pressure, i.e. 100:1 pump @ 100 psi air drive peaks at  $100 \times 100 = 10000 \times 0.75$  psi = 7500 psi (517 bar) hydraulic pressure.

#### Operation

The pumps automatically reciprocate on a differential piston principle. A large piston driven by relatively low pressure drive acts directly upon a smaller hydraulic piston.

The <u>nominal ratio</u> between piston sizes is indicated in the model coding and approximates to the maximum working pressure. The <u>actual ratio</u> is about 15% above nominal so that the pump continues to cycle when drive pressure equals nominal ratio. Initially, the pump will cycle at maximum speed acting as a transfer pump to pressurize downstream.


It will cycle at a slower rate as the fluid meets resistance until it stalls at maximum output pressure. When a pressure drop downstream occurs, it will recycle as necessary in an effort to maintain maximum pressure. Stall pressure is achieved when the outlet pressure rises and offers more resistance to the reciprocating differential piston assembly. The piston assembly then stalls when the forces balance, e.g. when drive pressure x drive piston area equals outlet (stall) pressure x driven hydraulic plunger area. The pump design is sensitive to very small pressure drops due to the low frictional resistance of the large diameter drive piston and hydraulic piston seals.

# Double and Triple Air Head Pumps

Performance can be extended by stacking air pistons without changing the hydraulic piston. Haskel multi-head pumps consume less air than competitive single head pumps of the same area, as only one head is pressurized on the return stroke; e.g., on a 1.5 hp pump additional heads can raise performance to 2 hp.

Double air head pumps are identified by the last digit 2 in the pump model number. Thus, a nominal 50:1 ratio pump with two air heads is described as a 52. Similarly, a triple air head pump is identified with a last digit 3. Thus, a 900 ratio pump with three air heads is described as a 903.

# Single Drive Head Pump 25.9 sq in (167 sq cm) 0.65 sq in (4 sq cm) Therefore, actual ratio = 40:1 Nominal Ratio = 35:1 **Double Air Head Pump** <u>Ar</u>ea 25.9 sq in (167 sq cm) <u>Ar</u>ea 25.2 sq in (163 sq cm) Area .65 sq in (4 sq cm) Therefore, actual ratio = 79:1 Nominal Ratio = 72:1\* Triple Air Head Pump <u>Ar</u>ea 25.9 sq in (167 sq cm) Area 25.2 sq in (163 sq cm) Area 25.2 sq in (163 sq cm) Area .65 sq in (4 sq cm) Therefore, actual ratio = 118:1 Nominal Ratio = 103:1\*\* Nominal Ratio \* (2) Indicates Double Drive Piston \*\* (3) Indicates Triple Drive Piston

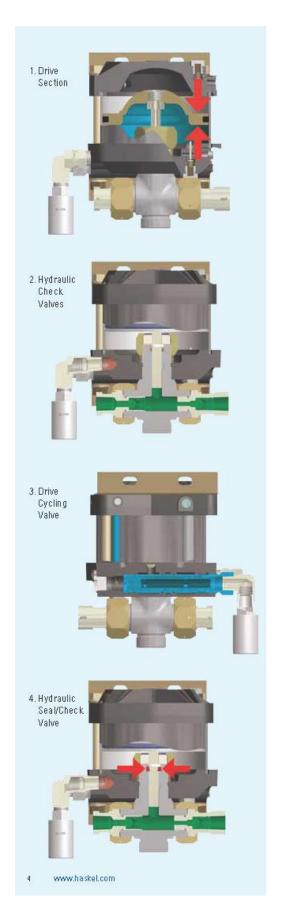

#### Anatomy of a Pneumatic Driven Pump

#### 1. Drive Section

The piston, complete with "O" ring seal, operates in an epoxy filled, fiberglass wound barrel, the diameter of which is constant throughout a given series of pumps. Drive media forces the piston down on the compression stroke and raises it on the suction stroke (M series have a spring return). The piston is pre-lubricated during assembly and therefore no air line lubricator is necessary.

#### 2. Hydraulic Section/Check Valves

This is directly linked to the drive piston by the hydraulic piston, the bottom portion of which is in the hydraulic body. Outlet flow and pressure are determined by the area of the hydraulic piston head, its nominal ratio with the drive piston head, and drive pressure. On the down stroke, liquid in the hydraulic section is forced under compression through the outlet check valve. Fresh liquid is induced via the inlet check valve on the return stroke. These check valves control the flow of liquid through the hydraulic section. They are spring-loaded and have a very low cracking pressure, allowing maximum opening on the induction stroke. The pressure of hydraulic fluid on the down stroke closes the inlet check valve and acts against the spring to open the outlet check valve.

#### 3. Drive Cycling Valve

This is a pilot-operated, unbalanced, lightweight spool, which directs drive pressure, first to the top of the drive piston, and then to the underside to reciprocate the piston (cycle). It actuates via pilot valves at the top and the bottom of the stroke, which causes the unbalanced spool to shift and reciprocate the piston.

#### 4. Hydraulic Seal/Check Valves

This is one of the few wear parts. Its function is to allow the hydraulic piston to reciprocate without passing fluid into the drive section. The liquid, its pressure and its temperature determine seal specification. A distance piece can be incorporated between drive and hydraulic sections for complete contamination-free operation on most Haskel pumps.



#### **Pump Selection Information**

All Haskel pumps are identified by letters coding the type of pump, followed by a number indicating the practical working ratio

of the drive area to the hydraulic plunger area. These letters are explained in the chart below.

#### **Pump Model Letter Coding**

M	.875" stroke .33 hp miniature pump series	XH	2" stroke 1.5 + 2 hp Extreme High Pressure pump series
S	Stainless steel hydraulic piston and body	G	4.5" stroke 6 hp pump series
29723	.33 hp Chemical Pump	8	4.5" stroke 8 hp pump or booster series
D (Prefix)	Pump incorporates a Distance Piece	14	4" stroke 10 hp pump series
D (Suffix)	Double Acting pump	W	Polyurethane U-cup dynamic seal
4B	1" stroke .75 hp pump series (bottom inlet only)	F	UHMWPE (Ultra-high Molecular Weight Polyethylene Dynamic Seal
A	2" stroke 1.5 + 2 hp pump series	Т	Reinforced teflon dynamic seal
Н	2" stroke 1.5 + 2 hp High Pressure pump series	V	Viton o-ring static seal
-C	Filter, regulator with gauge and shut-off/speed control valve	-B	Bottom inlet
		-CP	Chemical Pump

#### Quick Model Comparison Chart

The chart to the right shows the pressure/flow capability of each pump in the range. The diagonal lines show constant output horsepower for each series. The model ratios are circled.

#### **Example**


The pressure required is 2175 psi (150 bar). The flow required is 215 cubic inches (3.52 liters) per minute. The black dot plots position. Only models on diagonals to the right of the dot will meet the demand; e.g., the -35 ratio 1.5 hp pump, assuming a supply at 100 psi (7 bar) and 70 scfm (119m³/hr) can be met; if not, a -32 or -52 2 hp pump would be needed.

Note: For specific performance curves, refer to Liquid Pump Rapid Reference Guide. The diagonal horsepower lines in the chart below are based on 100 psi (7 bar) drive pressure. Drive flow requirement is different for each series as follows:

.33 hp	15 scfm (25 m³/hr)
.75 hp	45 scfm (76 m³/hr)
.75 hp 1.5 hp	70 scfm (119 m³/hr)
2 hp	85 scfm (144 m³/hr)

3 hp	85 scfm (144 m³/hr)
6 hp	175 scfm (297 m³/hr)
8 hp	225 scfm (382 m³/hr)
10 hp	270 scfm (459 m³/hr)

Reduced air drive flow or pressure will result in a corresponding reduction in output horsepower. This chart can be used to select pump series and model ratio.

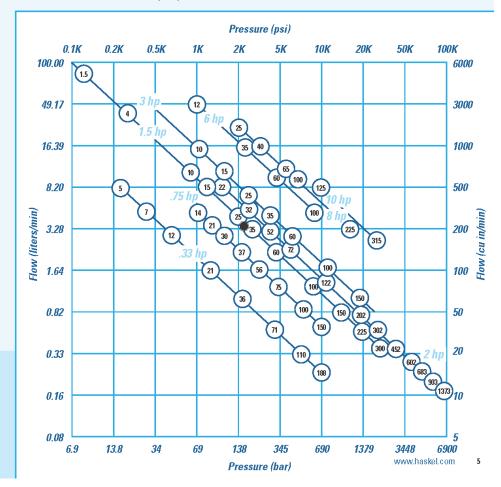

## Performance and Specification Overview

2	ad					Maimimum Rated Outp		Output Press	Output Pressure		Displacement/Cycle		Maximum Flow	
Max Drive	Drive Head	윺	Pump Model Code	Nominal Ratio	Actual Ratio	Conti	nuous	Interr	nittent	Displacer	nem/cycle	Iviaximi	IM FIOW	
ž	ä					psi	bar	psi	bar	cu in	ml	cu in/min	l/min	
			M, MDSTV	-5 -7	5.6 7.8	625 900	43 62	625 900	43 62	0.83 0.60	13.6 9.8	506 366	8.30 6.00	
<b>=</b>			M, MS	-12	14	1500	103	1500	103	0.36	5.9	234	3.83	
125 psi/8.6 bar	0	요		-21	25	2600	179	2600	179	0.20	3.3	130	2.13	
si/8	Single	0.33 hp	M, MS, 29723	-36	41	4500	310	4500	310	0.12	2.0	78	1.28	
25 p	S	0		-71 -110	82 126	8800 13500	607 931	8800 13500	607 931	0.060 0.039	1.0 0.6	39 25	0.64 0.42	
			M, MS	-188	217	15000	1034	15000	1034	0.023	0.4	18	0.29	
			MS	-220	237	20000	1380	25000	1723	0.021	0.344	14	0.22	
				-14	16	1500	103	1500	103	0.90	14.7	428	7.01	
1				-21	24	2300	159	2300	159	0.60	9.8	285	4.67	
늍				-25	29	2700	186	2700	186	0.50	8.2	238	3.89	
100 psi/7 bar	Single	0.75 hp	4B	-30 -37	34 42	3200 3800	221 262	3200 3800	221 262	0.43 0.35	7.0 5.7	204 166	3.35 2.72	
sd (	Sin	0.75	45	-55	63	6000	414	6000	414	0.22	3.6	105	1.71	
=				-75	86	7800	538	7800	538	0.17	2.8	81	1.32	
1				-100	114	10600	731	10600	731	0.13	2.0	62	1.01	
				-150	171	15000	1034	15000	1034	0.088	1.44	42	0.68	
			DSTV ATV, DTV	-1.5 -4	1.6 80	120 690	8 48	160 1200	11 83	31.90 20.00	513 328	5104 3200	83.6 52.4	
			AIV, DIV	-4 -B10	11.5	1600	110	1600	110	4.05	66.4	1215	19.9	
				-B15	17	2400	165	2400	165	2.70	44.3	810	13.3	
				-25	29	4000	276	4000	276	1.62	26.6	486	8.0	
1	<u>e</u>	윤	AW, ASF, DF, DSF, DSTV	-35	40	5700	393	5700	393	1.16	19.0	348	5.7	
ı	Single	1.5 hp		-60 -100	69 115	9800 15000	676 1034	9800 16500	676 1138	0.67 0.41	11.0 6.7	201 123	3.3 2.0	
ı				-150	173	15000	1034	20000	1380	0.41	4.5	81	1.3	
par				-151	173	25000	1724	25000	1724	0.27	4.5	81	1.3	
0.5			HF, HSF, DHF, DSHF	-225	260	30000	2069	37000	2551	0.18	3.0	41	0.7	
150 psi/10.5 bar			HF	-300 -450	345 533	30000 25000	2069 1724	50000 45000	3448 3403	0.14 0.091	2.3 1.5	32 20	0.5 0.3	
150														
				-B22 -B32	23 34	3200 4800	221 331	3200 4800	221 331	4.05 2.70	66.4 44.3	1215 810	19.9 13.3	
ı			AW, ASF, DF, DSF, DSTV	-52	57	5000	345	8000	552	1.62	26.6	486	8.0	
	<u>e</u>			-72	80	11000	758	11000	758	1.16	19.0	348	5.7	
ı	Double	2 hp		-122 -202	138 230	15000 30000	1034 2069	19000 33000	1310 2275	0.67 0.41	11.0 6.7	201 92	3.3 1.5	
			HF, HSF, DHF, DSHF	-302	346	30000	2069	50000	3448	0.41	4.5	61	1.0	
			DXHF, DSXHF	-452	520	30000	2069	70000	4827	0.18	3.0	41	0.7	
			DANI; DSANI	-602	690	30000	2069	75000	5171	0.14	2.3	32	0.5	
ā	9		DXHF. DSXHF	-683	780	30000	2069	70000	4827	0.18	3.0	25	0.41	
1./j	Triple	2 hp	DSXHW	-903 -1373	1038 1575	30000 30000	2069 2069	75000 100000	5171 6895	0.14 0.086	2.3 1.4	20 12	0.33 0.197	
100 psi/7 bar		2	AFD, DFD, ASFD, DSFD	-B60	69	6500	448	6500	448	1.34	2.2	369	6.0	
_		2.2	AFD, DFD, ASFD, DSFD										•	
				-10 -15	11.5 17	1600 2400	110 165	1600 2400	110 165	8.10 5.40	133 89	1823 1215	29.9 19.9	
bar				-25	29	4000	276	4000	276	3.24	53.2	729	11.9	
10.5		3 hp	ASFD	-35	40	5700	393	5700	393	2.32	38.0	522	8.6	
150 psi/10.5		<u></u>	10.5	-60 -100	69	9800 15000	676 1034	9800 16500	676	1.34 0.82	22.0 13.4	302 185	4.9 3.0	
9				-150	115 173	15000	1034	20000	1138 1380	0.52	9.0	122	2.0	
= 1				-202	230	30000	2069	33000	2275	0.82	13.4	144	2.4	
<b>€</b>						4050	128	4000	276	15.9	260	5009	82.1	
52	je je		GWD, GSFD, DGFD, DGSFD, DGSTVD	-12	14.8	1850								
15	Single	ot <sub>t</sub>		-35	40.3	4375	302	4375	302	6.0	98	1890	31.0	
15	Single	6 hp	GWD, GSFD, DGFD, DGSFD, DGSTVD GW, DGF, GSF, DGSF, DGSTV	-35 -60	40.3 69	4375 7500	302 517	4375 7500	302 517	3.5	57	1103	18.1	
	Single	е нр	GW, DGF, GSF, DGSF, DGSTV	-35 -60 -100	40.3 69 115	4375 7500 8000	302 517 552	4375	302 517 690		57 34		18.1 10.8	
	Single	6 hp		-35 -60 -100 -25	40.3 69 115 27.5	4375 7500 8000 3575	302 517 552 246	4375 7500 10000 4000	302 517 690 276	3.5 2.1 14.0	57 34 229	1103 662 2660	18.1 10.8 44	
	Single		GW, DGF, GSF, DGSF, DGSTV	-35 -60 -100 -25 -40	40.3 69 115 27.5 43.5	4375 7500 8000 3575 6000	302 517 552 246 414	4375 7500 10000 4000 6000	302 517 690 276 414	3.5 2.1 14.0 8.90	57 34 229 145	1103 662 2660 1691	18.1 10.8 44 28	
	Single	8 hp 6 hp	GW, DGF, GSF, DGSF, DGSTV 8SFD, 8DSFD, 8DSTVD	-35 -60 -100 -25	40.3 69 115 27.5 43.5 73	4375 7500 8000 3575	302 517 552 246	4375 7500 10000 4000	302 517 690 276	3.5 2.1 14.0 8.90 5.40	57 34 229	1103 662 2660	18.1 10.8 44	
125 psi/8.6 bar 15	Single		GW, DGF, GSF, DGSF, DGSTV 8SFD, 8DSFD, 8DSTVD 8SFD	-35 -60 -100 -25 -40 -65	40.3 69 115 27.5 43.5	4375 7500 8000 3575 6000 10000	302 517 552 246 414 690	4375 7500 10000 4000 6000 10000	302 517 690 276 414 680	3.5 2.1 14.0 8.90	57 34 229 145 88	1103 662 2660 1691 1026	18.1 10.8 44 28 17	
	Single		GW, DGF, GSF, DGSF, DGSTV 8SFD, 8DSFD, 8DSTVD 8SFD 8DSFD	-35 -60 -100 -25 -40 -65 -100	40.3 69 115 27.5 43.5 73 112	4375 7500 8000 3575 6000 10000	302 517 552 246 414 690 690	4375 7500 10000 4000 6000 10000	302 517 690 276 414 680 680	3.5 2.1 14.0 8.90 5.40 3.52	57 34 229 145 88 57.5	1103 662 2660 1691 1026 669	18.1 10.8 44 28 17	

DESCRIPTION OF THE PERSON OF T	ressure	Mance Based of Outlet	100	Outlet P		Data on Page 5 Outlet	Flow
psi	bar	cu in/min	Vmin	psi	bar	cu in/min	Vmin
1000	45.5	mo		12000		010	4.00
225 300	15.5 21	500 350	8.20 5.70	415 600	29 41	249 160	4.09 2.60
3000	48	200	3.10	1125	78	100	1.64
700	103	90		2000	138	48.9	0.80
1500		35.57	1.48	1000000	2000	1000000	
1700	117 207	70	1.15	3100 6000	214 414	39.6	0.65
3000	7,5080	39	0.64	10000000	51175	19	0.31
7500	517 245	20	0.33	8500	586	17	0.28
5000 7500	345	18 14	0.30	10000	690	14 12	0.23
7/80	517	S arrest 1	0.23	15000	1034	in the second	0.20
700	48	400	6.55	14.50	100	61	1
1000	69	270	4.42	2000	138	120	2
1250	- 86	230	3.77	2500	172	61	1
1500	1034	200	3.28	3000	207	62	1
1750	121	170	2.78	3500	241	82	1.33
2000	138	110	1.8	5000	345	66	1.08
2500	172	87	1.42	7500	517	37	0.6
5000	345	57	0.93	10000	690	26	0.43
7500	517	37	0.6	15000	1034	7	0.11
50	3	5000	81.9	150	10.3	1000	16.4
100	7	1953	32	400	28	750	12.3
400	28	1000	16.4	990	68	500	8.19
750	52	598	9.8	1600	110	200	3.28
1000	69	403	6.6	2500	172	195	32
2000	138	350	4.1	3600	248	98	1.5
3000	207	152	2.5	6200	427	50	0.82
4000	276	100	1.64	10000	690	24.4	0.4
7000	483	59.7	0.98	15000	1034	29.9	0.49
7000	483	59.7	0.98	15000	1034	29.9	0.49
7500	517	39.6	0.65	24000	1655	9.8	0.16
15000	1034	29.9	0.49	27000	1862	20.1	0.33
36000	2483	14.5	0.24	45000	3103	92	0.15
400	28	799	13.1	2100	145	200	3.28
700	48	500	82	3000	207	152	2.5
1900	131	299	4.9	5000	345	97.6	1.6
2000	138	226	3.7	7500	517	50	0.82
4000	276	122	2	12000	828	40.2	0.66
7000	483	91.5	1.5	20000	1379	20.1	0.33
10000	690	45.2	0.74	30000	2069	15.2	0.25
10000 15000	690 1034	34.8 24.4	0.57 0.4	40000 50000	2759 3448	15.2 12.2	0.25
15000	1034	19.5	0.32	60000	4138	4.9	0.08
15000	1034	15.9	0.26	70000	4828	5.5	0.09
16000	1103	92	0.15	90000	6207	3.1	0.05
1000	69	348	5.7	5500	379	152	2.5
500	34	1520	24.9	1000	69	380	6.22
750	52	1030	16.88	1500	103	260	4.26
1000	69	662	10.85	2500	172	162	2.66
1500	1034	465	7.62	3500	248	100	1.64
3000	138	248	4.07	6000	414	56	0.92
5000	345	151	2.48	10000	690	41	0.67
7500	517	103	2	15000	1034	27	0.44
10000	690	63	1.03	20000	1379	47	0.77
200	14	5004	82	1200	83	14.54	24
1000	69	1770	29	3500	241	600	9.8
2000	138	976	16	5500	379	397	6.5
2000	138	573	9.4	10000	690	195	32
1000	69	2400	39.3	2500	172	280	4.6
2000	138	1420	23.2	4000	276	200	327
3000	207	880	14.4	6000	414	310	5.08
5000	345	555	9.1	10000	690	163	2.67
	600	270	4.4	20000	1379	144	2.36
10000	690	21.0					
10000 8000	552	488	8.0	12000	828	195	32



## Guidelines for Continuous Duty Applications for Maximizing Seal Life Performance

Pump Series	Maximum Cycles per Minute
0.3 hp	325 cpm
0.75 hp	225 cpm
1.5, 2.0 and 2.2 hp (Single and Double Drive Piston)	80 cpm
2.0 hp (Triple Drive Piston)	60 cpm
3.0 hp	80 cpm
6.0 hp	60 cpm
8.0 hp	50 cpm
10.0 hp	40 cpm

## .33 hp (.25 kW) M Series Pump Models



#### **Key Features**

- Choice of 5 models, 9 ratios, 27 possible combinations
- Flows to 2 gpm (7.51/min)
- · Choice of wetted materials
- · Single air head
- Drive pressure 25 to 125 psi (1.8 to 9 bar)
- Pressures to 25000 psi (1724 bar)
- All Hydraulic fluids, water (plain or DI), solvents, mild chemicals, liquefied gases

Model	Nominal Ratio	M azzimum Working Pressure	Displacement per Cycle
M, MDSTV	-5	625 psi(43 b a n)	.83 cu in (13.5 ml)
M, MS <sup>21</sup>	-7 -12	900 psi(62 bar) 1800 psi(103 bar)	.б. cu in (9.8 m.) .36 cu in (5.9 m.)
M, M9 <sup>21</sup> , 29729 <sup>9 (*</sup>	-21 -36 -71 -110 -188	2600 psi (179 bar) 4500 psi (310 bar) 8800 psi (607 bar) 13900 psi (603 bar) 18000 psi (1034 bar)	2 ou in(33 m) .12 ou in (20 m) .06 ou in (1.0 m) .039 ou in (0.5 m) .023 ou in (4 m)
MS	-220	25000 psi (1723 bar)	.021 ou in (.34 ml)

- \*\* Notavailable in 188 ratio
- (3) Maximum intermittent pressure for stainless steel in the M5 and 29723 is 10000 psig (690 bar.)

For service codes, see page 17.
For weights and dimensions, see page 18.

#### **Optional Modifications**

Number	Description	Number	Description
-HP 26082	Hand pump attachment(with handle). Provides manual operation of pump for precision pressure control or use without air power. Handle only.	51809	Normally open air operated release with relief valve. Provides highest release flow eapsoity. Will hold full pump psi piloted from drive air. Vents are not threaded. Ref. drawing 58643 for tank top mounting parts.
26220-2 26220-3	With handle. Without handle. Kits for converting existing units.	51809-1	Normally closed air operated release with relief valve. Used to hold hydraulic jacks. Will release up to 11000 psi (using 100 psi air). Vents are not threaded. Ref. drawing 56643 for tank top mounting parts. Not available in 188:1 ratb.
-V	Manual release with relief valve. For M and MS pumps only. Provides high pressure needle valve with internal adjustable safety relief downstream of pump outlet checks. Tank return is X; NPT in pump body.	51810	Safety relief valve. Relief is upstream of outlet check. Venthole 1/16 NPT M or MS series -21 through 188.
26063-3	Dead Man valve, X1 NPT port.	51811	External air pilot Provides K: NPT port for external air to pilot for remote start/stop.
26064-3	Combination air regulator/litterwith gauge, ¼` NPT port.	52340	Solid aireap.
26065-3	Speed control valve. 16° NPT port	52950	Electric stroke counter provision. Micro switch (BZE5-2RQ) mounted on upper captrips with each cycle.
26065-3 plus	-C air controls installed on pump. ¼` NPT port.	53175	Level II cleaning.
26064-3		53304	High pressure outlet port. Fits W1 0.D. high pressure threaded and coned tube.
28320	Manifold mount inlet port. Provides O-ring boss in aluminum bbokto enable mounting on side of tank be bwoil level. Modification applies to M-21 through M-188 only.	53 784	Piped exhaust(drive only). For field conversion of any 33 HP pump. Provides 1/4 NPT exhaust port.
28590	Palm or foot start/stop button drive. Spring loaded shut.	53935	Low temperature drive. Enables operation down to 5°F. Somes acrifice of seal life at
28700-1	Air OP release valve.		normal temperature. M or MS series.
28926	Remotestart/stop control. Provides ½` NPT bleed signal port for single line remote control.	54 179	Stroke adjuster (includes 29697 above). Useful for metering applications. Knurled knob with vertical scale on pump cap.
29002	Viton airdrive.	57905	No return spring. Provides improved till on suction stroke pumping liquelied gases
29697	Singlestroke from remote air pulse. Useful for metering applications. On estroke per		by utilizing the inlet pressure. Only available on M and MS series.
	air pulse signal; eliminates automatic cycling. ½` NPT signal port.	59888	Cycle timer installed.
51331	EPR seals for liquid section for 29723-XX ratio pumps.	80 103	Noise reduction kitfitted.
51788	Piped exhaust – standard. Provides connection ports for drive and pilot exhausts.	80348	SAE outletfor M-pumps, 34° SAE, 6500 psi (448 bar) max.
	Enables undertanktop mounting and/ornatural gas drive.	81499	EPR Seals for M and MS series for Liquid Section.
51794	Piped exhaust —sour gas. With hand pump (HP).	82367	SS trim for ¼ hp drive
51794-2	Piped exhaust—sour gas. Without hand pump (HP).	82500	ATEX Modification (Available on MS & 29 723 but not M series).
51804	Muffler (for use with piped exhaust modifications below). X`NPT male port	85630	Conversion kit, new style exhaust muffler.
		86337	Extended life airdrive.

## .75 hp (.56 kW) Pump Models



Model	Nominal Ratio	M aximum Working Pressure	Displacement per Cycle
4 B	-14	1500 psi(103 bar)	9 cu in(14.8 m))
	-21	2300 psi (159 bar)	Б cu in (9,8 m)
	-25	2 700 psi (186 bar)	5 cu in(82 ml)
	-30	3200 psi(221 bar)	43 cu in (7,1 ml)
	-37	3800 psi (262 bar)	35 cu in (5.7 ml)
	-55	6000 psi(414 bar)	22 cu in (3.5 m il)
	-75	7800 psi (538 bar)	.17 cu in (2.8 ml)
	-100	10600 psi (731 bar)	.13 cu in (2.1 ml)
	-150	15000 psi(1034 bar)	088 cu in (1.4 m)

For service codes, see page 17.
For weights and dimensions, see page 19.

#### Key Features

- One model available in 9 ratios
- Output pressures to 15000 psi (1034 bar)
- Flows to 1.5 gpm (5.7 l/min)
- · Choice of wetted materials
- · Single air head
- Drive pressure 3 psi to 100 psi (.2 to 7 bar)

## **Optional Modifications**

Description	Number	Description
Airdrive controls.	59888	Cycle timerinstalled.
Extreme cycling service. Not recommended for long stall periods.	80637	SAE outlet litting for ratio 37 to 100, X° SAE, 6500 psi (448 bar) max.
External air pilot port # `NPT. Allows remote start/stop of pump.	82 104	Viton aindrive.
Low drive air pressure. Allows user to regulate drive air to as low as 3 psi (2 bar).	82,500	ATEX modification.
Single acting drive. Used to roumping liquelied gases under pressure.	96337	Extended life aindrive.
K`NPT porton drive for recycle valve connection.		
Noise reduction kit litted.		
	Airdrive controls.  Extreme cycling service. Not recommended for long stall periods.  External air pilot port % `NPT. Allows remote start/stop of pump.  Low drive air pressure. Allows user to regulate drive air to as low as 3 psi (2 bar).  Single acting drive. Used for pumping liquelied gas es under pressure.  % `NPT port on drive for recycle valve connection.	Airdrive controls.  59888 Extreme cycling service. Not recommended for long stall periods.  80637 External air pilot port K* NPT. Allows remote start/stop of pump.  82104 Low drive air pressure. Allows user to regulated rive air to as low as 3 psi (2 bar).  82500 Single acting drive. Used for pumping liquetied gases under pressure.  86337 K* NPT port on drive for recycle valve connection.



## 1.5 hp (1.12 kW) Pump Models



- Choice of 11 models, 13 ratios, 48 possible combinations
- Output pressures to 50000 psi (3448 bar)
- Flows to 22 gpm (83.01/min)
- Choice of wetted materials
- · Single air head
- Drive pressure 3 to 150 psi (.2 to 10 bar)

Model	Nominal Ratio	M aximum Working Pressure	Displacement per Cycle
DSTVPI	-1.5	160 psi(11 bari)	319 cu in (513.0 m)
ATV, DTVIII	4	1200 psi (83 bar)	200 cu in (328.0 m)
AW, ASF, DF, DSF, DSTV	-B10 -B15 -25 -35 -60	1600 psi(110 bar) 2400 psi(165 bar) 4000 psi(276 bar) 5700 psi(333 bar) 3800 psi(576 bar)	4 cu in (66.4 m.) 2.7 cu in (44.3 m.) 1.6 cu in (26.6 m.) 1.2 cu in (19 m.) .7 cu in (11 m.)
AW, ASF, DF, DSF, DSTV	-100 -150	16500 psi(1138 bar) 20000 psi(1375 bar)	.4 cu in(6.7 m) 28 cu in(4.5 m)
HF, HSF, DSHF	-151 -225 -300	25000 psi (1724 bar) 37000 psi (2551 bar) 50000 psi (3448 bar)	28 cu in (4.5 m) .18 cu in (3.0 m) .14 cu in (2.3 m)
HF	450	4.8000 psi (3403 bar)	.09 cu in (1.5 ml)

(1) These series are "Lift" pumps and maximum outlet pressure is (air drive x pump ratio) + inlet pressure

For service codes, see page 17.
For weights and dimensions, see page 20.

#### **Optional Modifications**

Number	Description
-C	Air controls (filter, regulator, gauge, shut-off). W'NPT.
-CP	Air controls with precision regulator, ½` NPT.
-C0	Air controls with recycle button, ¼`NPT.
-CPO	Air controls with precision regulator and recycle button, W. NPT.
-В	Bottom Inlet (designate `B` before ratio dash number `BR` on -B10, -B15, -B22 and -B32) 1.5 hp and 2 hp pumps (not applicable to high output, chemical, 2.2 hp, or AWO series pumps).
-00/	Additional upper foot bracket.
16821	Low air pressure control feature. For operating at air pressures as low as 3 to 4 psi (.2 to .3 bar). Includes 28881 modification.
16831	Low temperature modification. For special sealing in air drive for operating temperatures from as low as -20°F up to normal +120°F.
16834	Exhaust adapter. With back pressure balance piston.
17860	Electrical stroke counter provision. Includes BZE5-2RQ microswitch.
25 721	Mechanical stroke counter, installed (6 digit).
27964	Interconnecting inlet-outlet tubing. ½° female for 4:1 ratio series pumps (ATV 4 or DTV 4).
28000	Threaded vent (or purge) ports on standard distance piece. Except 1.5:1 ratio.
28003	Test port. Provides access port in pump's body between inlet and outlet check valves for 1.5 hp and 2 hp pumps 10 ratio or higher, single acting.
28881	Air pilot modification. K`NPT. Allows remote start/stop of pump.
29376	Three-way cycling spool. For 1.5 hp and 2 hp single acting pumps, for use with CO <sub>2</sub>
29 702	Single stroke modification.

Number	Description
TAU III D CI	beson priori
29806	Double distance piece. For 1.5 hp and 2 hp pumps only, except 1.5:1 ratio.
51050	Extrem e service cycling modification. Not recommended for long stall periods.
51056	Echaust/pilot vent combination.
51331	EPR(Ethylene propylene) static seals in wetted section. Applies to distance piece pumps only.
51345	Sourgas drive provision to N.A.C.E. specifications. 1.5 hp to 2.2 hp distance piece pumps only, single air head and double air head.
52788	Viton seals air drive.
53925	Severe Arctic low temperature service25, -35, -60, -100, -150, -151, -225, -300, -450 ratios.
54885	Rotate pump body 90° from standard.
54935	SS trim for 5/3 air drive.
55305	Tube ports. %` SAE inlet and outlet. For 1.5 hp to 2 hp pumps. 15 pump minimum.
55516	Polyurethane (`W`) seal. For For TV series pumps, except high output models.
55630	Stainless steel (AISI-316) distance piece. For 1.5 hp to 2 hp pumps.
59353	Noise reduction kit litted. Not available on AFD, DFD, ASFD or DSFD.
82460	HNBRseals in air drive section.
82500	ATEX modification (not available on AW or DSXHW pumps).
82958	ሃቡ High pressure outlet converts medium ratio 10-122 outlet /ሩ port to high pressure port.
86337	Extended life airdrive.

# 1.5 hp (1.12 kW) High Output Flow Pumps

Available in a choice of 3 models, these high output, low ratio pumps are capable of pressures to 1200 psi (82 bar) and flow rates of up to 22 gpm (83 l/min). These are "lift" pumps whereby the outlet pressure equals the air drive x the pump ratio plus the inlet pressure.

Model DSTV-1.5 has a maximum air drive of 150 psi (10 bar) and is capable of pressures up to 160 psi (11 bar). The model ATV and DTV-4 work on a maximum air drive of 150 psi (10 bar) and have a maximum pressure rating of 1200 psi (83 bar). A noise reduction modification is available for applications where noise level is an issue.

#### Distance Piece (Separation)


Pumps with prefix "D" in the model number have aluminum distance piece between the air drive and pump section (except DSTV-1.5). Vent holes can be threaded ½" NPT female at extra cost. Specify modification number 28000. Horizontal mounting is recommended for non-exchange of contaminants.


#### Mounting Brackets

All series mounting brackets have 7/16" holes (slots) for 3/8" bolts. Upper mounting brackets are not furnished as standard on single air head non-distance piece units.

#### Dimensional Data

# Mounting Brackets



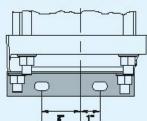

#### Optional Pump Inlets for Tank Mounting

To specify ratios
-10, -15, -22 or -32, add 'BR' between the model number and the ratio, e.g. AW-BR10. Inletexternally threaded 1 ½' NPT male Internally threaded 1 1 NPT female

To specify ratios
-25 through -903,
add 'B' between
the model number
and the ratio, e.g.
AW-B25.
Inleton the bottom
and externally
threaded
1' NPT male
Internally threaded
3' NPT female

Drive inlet and exhaust are 1% NPT female. Drive inlet also includes a 1% NPT male x1% NP5 M female (straightpipe thread) swivel adapter (connecting male nipple should include 30° inside bevel for proper 11%.



#### 2 & 2.2 hp (1.49 & 1.64 kW) Pump Models



#### Key Features

- Choice of 16 models, 13 ratios, 46 possible combinations
- Output pressures to 100000 psi (7000 bar)
- . Flows to 5 gpm (151/min)
- · Choice of wetted materials
- · Double and triple air heads
- Drive pressure 3 to 100 psi (.2 to 7 bar)

Model	Nominal Ratio	M aximum Working Pressure	Displacement per Cycle
AW, ASF,	-822	3200 psi(221 bar)	4 cu in (66.4 ml)
DF, DSF, DSTV	-B32	4800 psi (331 bar)	2.7 cu in (44.3 ml)
D314	-52	8000 psi(552 bar)	1.5 cu in (26.5 m.)
	-72	1 1000 psi (758 bar)	1.2 cu in (19 ml)
	-122	19000 psi (1310 bar)	.7 cu in(11 ml)
HF, HSF,	-202	33000 psi (2275 bar)	.4 cu in (6.7 ml)
DHF,DSHF	-302	50000 psi (3448 bar)	28 cu in (4.5 ml)
DXHF,	452	70000 psi (482 7 bar)	.18 cu in (3.0 ml)
DSXHF	-602	75000 psi(5171 bar)	.14 cu in (2.3 ml)
DXHF,	-683	70000 psi (482 7 bar)	.18 cu in (3.0 ml)
DSXHF	-903	75000 psi (5171 bar)	.14 cu in (2.3 ml)
DSXHW	-1373	100000 psi (6895 bar)	.09 cu in (1.4 ml)
AFD, DSFD, DFD, ASFD	-B60	6500 psi (448 bar)	1.3 cu in (22 ml)

For service codes, see page 17.
For weights and dimensions, see page 20.

#### 3 hp (2.24 kW) Pump Models



#### Key Features

- One model available in 8 ratios
- Output pressures to 33000 psi (2275 bar)
- Flow rates to 8 gpm (301/min)


- Displacement per Cycle Nominal Ratio Maximum Working Pressure\* Model 1600 psi (110 bar) 8.1 cu in (132.8 ml) ASFD 10 2400 psi (165 bar) 5.4 cu in (88.6 ml) 15 4000 psi(276 bar) 5700 psi(393 bar) 3.3 cu in (53.2 ml) 25 35 23 cu in (38 ml) 9800 psi (676 bar) 60 1.3 cu in (22 ml) 100 16500 psi (1138 bar) 8 cu in (13.4 ml) 150 20000 psi (1379 bar) 5 cu in (9 m () 202 33000 psi (2275 bar) 8 cu in (13.4 ml)
- \* Continuous/Intermittent

For service codes, see page 17.
For weights and dimensions, see page 21.

- Single air head
  - Drive pressure 3 to 150 psi (.2 to 10 bar)

### Optional Modifications (for 2 hp, 22 hp and 3 hp pump models)

Number	Description	Number	Description
-C	Air controls (litter, regulator, gauge, shut-off, ½° NPT.	51050	Extrem e service cycling modification. Not recommended for long stall periods.
-CP	Air controls with precision regulator, 1/2" NPT.	51056	Exhaust/pilot vent combiner.
-C0	Air controls with recycle button, ¼`NPT.	51331	EPR(Ethylene propylene) static seals in wetted section. Applies to distance
-CPO	Air controls with precision regulator and recycle button, W' NPT.	122.412.640	piece pumpsonly.
-В	Bottom Inlet (designate `B` before ratio dash number, `BR` on -B10, -B15, -B22 and -B32) 1,5 hp and 2 hp pumps (not applicable to high output, chemical, 2,2 hp,	51345	Sour gas drive provision to N.A.C.E. specifications. 1.5 hp to 2.2 hp distance piece pumps only, single air head and double air head.
	orAWD series pumps)	52788	Viton seals. Air drive only – 1.5 hp to 2.2 hp pumpsonly.
16821	Low air pressure control feature. For operating at air pressures as low as 3 to 4 psi (.2 to .3 bar).	53925	Severe Arctic low temperature service25, -35, -50, -100, -150, -151, -225, -300, -450 ratios except 3 hp pump.
16831	Low temperature modification. For special sealing in air drive for operating temperatures from as low as -20°F up to normal +120°F.	54885	Rotate pump body 90° from standard. Except 3 hp pump.
		54935	SS trim for 5/3 air drive.
16834	Exhaust adapter. With back pressure balance piston.	55191	Mounting ring kit for AWD series.
17860	Electrical stroke counterprovision. Includes BZE5-2RQ microswitch.	55192	3/4 NPT inlet port installed on AWD series (in place of threaded port).
25 721	Mechanical stroke counter. Installed (6 digit).	55193	Extra foot bracket installed.
27964	Interconnecting inlet-outlet tubing. ½` female for 4:1 ratio series pumps (ATV 4	55305	720000000000000000000000000000000000000
	orDTV-4).		Tube ports. %' SAE inlet and outlet—for 1.5 hp to 2 hp pumps, 15 pump minimum.
28000	Threaded vent (or purge) ports on standard distance piece. Except 1.5:1 ratio	55465	Ceramic Plunger -60 Ratio.
	and 3 hp pump.	55516	Polyurethane "W" seal in "F" series pumps-except high output models.
28003	Test port. Provides access port in pump's body between inlet and outlet check	55630	Stainless steel (SS-316) distance piece — for 1.5 thru 2 hp pumps.
	valves for 1.5 hp and 2 hp pumps, - 10 ratio or higher, single acting.	59353	Noise reduction kit litted. Not available on AFD, DFD, ASFD or DSFD.
28881	Air pilot modification. K`NPT – Allows remote start/stop of pump.	59888	Cycle timer installed.
29376	Three-way cycling spool. For 1.5 hp and 2 hp single acting pumps.	82460	HNBR Seals in air drive section.
29 702	Single stroke modification. Except 3 hp pump.		
29806	Double distance piece, For 1.5 hp and 2 hp pumps only, except 1.5:1 ratio.	82500	ATEX modification (not available on AW or DSXHW pumps).
	Decree of the second of the se	86337	Extended life airdrive.

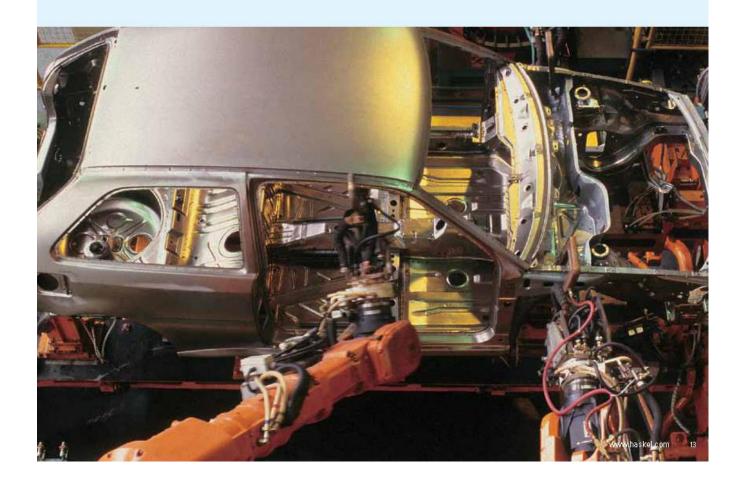

#### 6 hp (4.47 kW) Pump Models



Kei		

- Choice of 10 models, 4 ratios, 20 possible combinations
- Output pressures to 10000 psi (690 bar)
- Flow rates to 21 gpm (80 l/min)
- · Choice of wetted materials
- Single air head –
  double acting
- Drive pressure 3 to 125 psi (.2 to 9 bar)
- All hydraulic fluids, water (plain or DI), solvents

Model	Nominal Ratio	M azimum Working Pressure	Displacement per Cycle
GWD, GSFD, DGFD <sup>III</sup> , DGSFD <sup>III</sup> , DGSTVD <sup>III</sup>	-12	4000 psi (276 bar)	159 cu in (250 ml)
GW, GSF, DGF, DGSF, DGSTV	-35 -60 -100	4375 psi(302 bar) 7500 psi(517 bar) 10000 psi(690 bar)	6.0 cu in (98 m.) 3.5 cu in (57 m.) 2.1 cu in (34.5 m.)

(1) Double Acting "Lift" Pumps

For service codes, see page 17.
For weights and dimensions, see page 22.

Incorporating 10 models, this heavy duty range of double acting pumps provide pressures up to 10000 psi (690 bar) and flow rates up to 4 gpm (15 l/min).

Designed to operate with air drive pressures between 40 and 125 psi (2.8 and 9 bar). For drive pressures 3 to 40 psi (.2 to 2.8 bar), order 51875-1 mod.

#### 8 hp (5.97 kW) Pump Models



#### Key Features

- Choice of 6 models, 5 ratios, 9 possible combinations
- Pressures to 22500 psi (1530 bar)
- Flow rates to 11.5 gpm (44 l/min)
- All hydraulic fluids, water (plain or DI), solvents, liquefied gases
- Choice of wetted materials
- Single air head double acting
- Drive pressure 3 to 125 psi (.2 to 9 bar)

Model	Nominal Ratio	M aximum Working Pressure	Displacement per Cycle
8SFD, 8DFD, 8DSFD, 8DSTVD 8FD	-25P1	4000 psi (276 bar)	14 cu in (229 m))
8SFD 8DSFD	-40 -65 -100 <sup>า</sup>	5000 psi(408 bar) 10000 psi(630 bar) 10000 psi(630 bar)	9 cu in(1453 ml) 5.4 cu in(88.2 ml) 3.5 cu in(57.5 ml)
8HSFD	-225 <sup>11</sup>	22500 psi (1530 bar)	1.5 cu in (25.5 ml)

(1) Double Acting "Lift" Pumps

For service codes, see page 17.
For weights and dimensions, see page 23.

#### 10 hp (7.46 kW) Pump Models



Model	Nominal Batio	M aximum Working Pressure	Displacement per Cycle
D14 STD	125 <sup>0</sup> 1	16000 psi (1103 bar)	88 cu in (144 2 m)
	315 <sup>0</sup> 1	36000 psi (2482 bar)	3.5 cu in (574 m)
D14 SFD	125 <sup>01</sup>	16000 psi (1103 bar)	8.8 cu in (144.2 m)
	315 <sup>01</sup>	36000 psi (2482 bar)	3.5 cu in (57.4 m)

(f) Double Acting "Lift" Pumps

For service codes, see page 17.
For weights and dimensions, see page 23.

#### Key Features

- Choice of 4 models, 4 ratios, 4 possible combinations
- Pressures to 36000 psi (2500 bar)
- Flow rates to 3 gpm (11 l/min)
- Drive pressure 3 to 125 psi (.2 to 9 bar)
- All hydraulic fluids, water (plain or DI), solvents, liquefied gases
- · Choice of wetted materials

Incorporating two basic models, this heavy duty range of double acting pumps provide pressures up to 36000 psi (2482 bar) and output flow rate up to 3 gpm (11 l/min).

Operating from a maximum air drive pressure of 125psi (9 bar), these pumps are designed for medium to high pressure service with minimum maintenance.

These large, slow speed pumps approach a seal life as high as 5 times that of many smaller pumps and this advantage becomes ever greater in heavy duty service involving water, or other liquids with negligible lubricity.

#### Optional Modifications (for 6 hp, 8 hp and 10 hp pump)

Number	Description	Number	Description
С	Air controls.	54312	Extreme service cycling modification —for 6 hp thru 10 hp pumps.
17860	Electrical stroke counter provision (includes BZE5-2RQ micro switch).	54936	Exhaust/pilotventcombiner.
25721	Mechanical stroke counterinstalled (6 digit).	55330	Interconnecting tubing 8D SFD-100 low pressure inlet
29077	Interconnecting tubing — 6 hp and 8 hp pumps, double ended.	55330-1	Interconnecting tubing 8D SFD-100 high pressure inlet.
29077-1	Interconnecting tubing — 6 hp and 8 hp pumps, double ended low ratio pumps.	55366	Interconnecting tubing 8D SFD-225.
29078	Same as 29077, 29077-1 double ended wyldistance piece.	57002	Vitonseals—airdrive only—6 hp.
29078-1	Same as 29077, 29077-1 double ended wydistance piece low ratio pumps.	57944	Vitonseals—airdrive only—8 hp.
29079	Interconnecting tubing — 10 hp pumps.	59888	Cycle timer installed.
29125	External pilot modification — for 6 hp thru 10 hp pumps.	82,500	ATEX modification available for 6 hp only, not available on 8 hp or 14 hp drive, no ron
51875 -1	Low air pressure control – for 6 hp thru 10 hp pumps.		GW, GSF, DGSF, GSFD, or DGSFD models.
54030	Sourgas airdrive provision to NACE spec. 6 hp distance piece pumps only.	86337	Extended life aindrive.



#### Power System Specialists

World safety standards and quality demands are rising. Component manufacturers are required to provide test certification and product quality assurance which can only be determined using the types of systems which Haskel can provide. Typically, we have built systems for production and field testing the proof, leak, and burst aspects of hoses, cylinders, and valves.

These systems can be portable, mobile, or static test rigs. We also offer a range of standard pressure packs used for power jacking. clamping, and other applications where reliable power is needed.



#### Quality and After-Sale Service

Haskel meets the requirements of international quality assurance ISO 9001. Build quality is matched by an innovative design and problem

solving ability which stems from years of years of experience. Our representatives around the world are carefully chosen and trained to help you arrive at a correct product choice, and to offer a maintenance and parts service that is second to none.

#### Selecting Your Accessories

Haskel can either provide accessories separately or supply them fitted to form a complete package suited to your application. Additionally, Haskel can fit customer nominated accessories. Our accessories catalog is available and our technical support team is always. ready to advise you on the most suitable choice of accessories for your application.

- Air pilot switches
- · Air pilot valves
- Regulating relief valves
- Directional control and release valves
   Port adapters
- Hydraulic accumulators, gas receivers
   Pressure regulators and storage cylinders
- · High pressure valves, fittings and tubing
- · Plenum chambers
- - · Gauge snubbers
  - Filters

- · Stainless steel check valves
- · Intensifiers with integral checks for cycling
- · Capillary type gauge snubbers

Please ask for your copy of our latest accessories brochure.



#### Liquids Compatible with Haskel Pumps

To assist in easier pump selection, we have classified various popular liquids in groups and assigned to each group a service code. These service code numbers are featured in the chart to the right and are designated for each pump series. Seals and other wetted materials can be supplied to suit your preferred liquid. For advice, please contact our technical services personnel at 818-843-4000.

#### Services

#### Service Codes

- 1 Petroleum-based oils, kerosene, water with 5% soluble oil.
- 2 Plain water, diesel fuel.
- 3 Most phosphate ester-based fire-resistant hydraulic fluids, e.g. Pydraul, Lindol, Cellulube, Fyrquel, and Houghtosafe 1120 and petroleum-based solvents compatible with UHMWPE (Ultra-high Molecular Weight Polyethylene) dynamic seals and Viton static seals.
- 4 Petroleum-based solvents, e.g. boron fuels, aromatic hydrocarbons (benzene, toluene, xylene, hylene, etc.); chlorinated solvents (trichlorethylene, carbon tetrachloride, chlorobenzine, etc.); mercaptans, Dowtherm A, fluoronated solvents (fluorobenzene, fluorochlorethylene, etc.); Dowtherm E, plus all of Group 3 and some mildly corrosive acids compatible with wetted materials. See note 5A for service with methyl-ethyl-ketone, methyl acetone, diacetone, alcohol and freon 22.
- 5 Skydrol and Aerosafe hydraulic fluid; acetone and some alcohols (ethyl, methyl, and isopropyl).
  5A. Also suitable for these fluids if Viton static seals are replaced with EPR; specify modification number 51331 (no extra charge); e.g., 51331-MDTV-5. Most phosphate esterbased fluids solidify at approximately 30000 psi.
- 6 Deionized water; demineralized water.

Note: Dynamic seal life with non-lubricating fluids will understandably be less than with lubricating types.

#### **Operating Temperatures**

#### **Drive Section**

-4° (25°F) to +65°C (150°F) (low temperature seals are available for Arctic operation).

#### **Liquid Section**


For reasonable seal life, high temperature should be limited to 54° C (130° F), for F and W seal models, 135° C (275° F) for T and TV models (with distance piece).


	Services							
hp	Model	1	2	3	4	5	5A	6
	М	•						
	MS							
	MDTV							
.33	MDSTV		•	•	•		•	
	MCPV				•	٠		
	29723		•	•				•
.75	4B -14 to -37	•						
	4B -55 to -150	•	•					
	AW	•						
	ASF							
	DF							
	DSF	•						
	HF		•	-			"	
	HSF	1.						
	DHF							
	DSHF							
	DSTV							
1.5	ATV							
22	DTV						•	
	DSTV -1.5			•	•		•	•
	AFD							
	DFD						•	
	ASFD							
	DSFD		•				•	•
	DXHF						•	
	DSXHF		•				•	•
	DSXHW	•	•					
3	ASFD	1 •	•		1	ı	1	
	GW	•						
	GSF							
	DGF							
	DGSF							
	DGSTV				•		•	
6	GWD							
	GSFD							
	DGFD			•			•	
	DGSFD		•	•	•		•	•
	DGSTVD		•	•	•		•	
	8FD	١.						
	8SFD	1.	•	•	•		•	
8	8DFD	1.						
	8DSFD	•	•					
	8DSTVD	1					1	
	8HSFD	1 •	1 •	ı •	1 *		1 *	
	D14STD -125	•	•	•	٠		٠	
46	D14STD -315		•	•	•		•	
10	D14SFD -125		•	•			•	•
	D14SFD -315		•	•			•	•
-								

Sarvicas

# Weights and Dimensions


.33 hp (.25 kW) M Series Pump Models

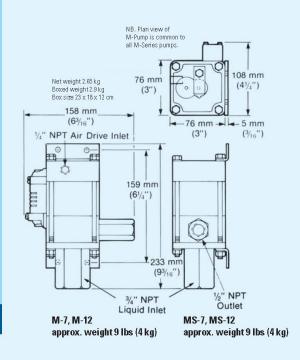

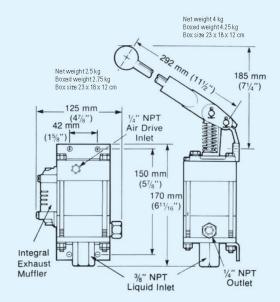


MS-21, MS-36, MS-71, MS-110, MS-188, MS-220 approx. weight 6 lbs (2.7 kg)


M-21, M-36, M-71, M-110, M-188 approx. weight 6 lbs (2.7 kg)

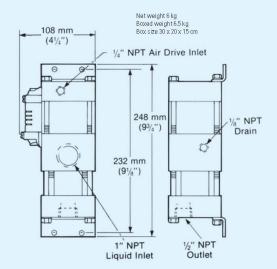

M-5 approx. weight 9 lbs (4 kg)

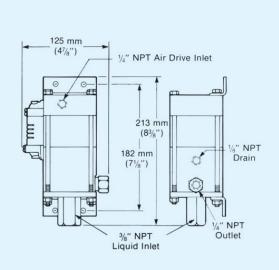



29723-21, 29723-36, 29723-71, 29723-110 approx. weight 6.5 lbs (3 kg)

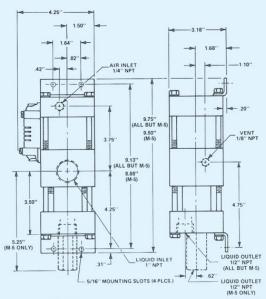



MD STV-5 Approx weight 15 1/2 lbs (7 kg)


#### .75 hp (.56 kW) Pump Models

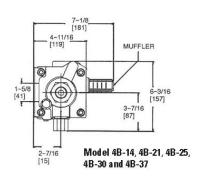


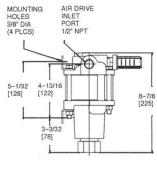





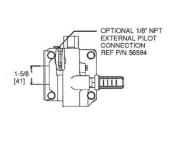

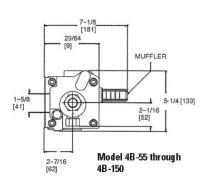


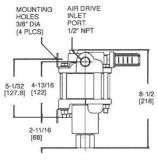




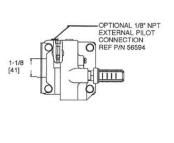

#### 1.5 hp, 2 & 2.2 hp (1.12, 1.49 & 1.64 kW) Pump Models

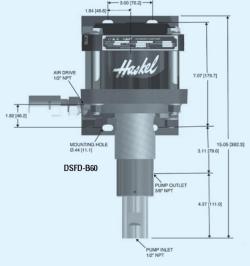

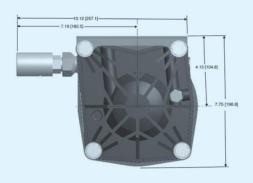

Net weight 18 kg Boxed weight 20 kg Box size 68 x 42 x 50 cm

Inlet

NOTE 1 Kilogram (kg) = 2.2 lb

(151/1") Breathers 552 mm (21¾") Air Drive Air Exhaust Drive Inlet (113/8") Liquid Outlet 1/4 HP Port 1/2" NPT Liquid


Net weight 10 kg Boxed weight 11 kg Box size 37 x 37 x 38 cm Air Drive Air 289 mm Exhaust Drive Inlet ½" NPT Liquid 0 Outlet 1" NPT Liquid Inlet 222 mm (8¾")

1.5 and 2 hp low ratio pumps; -B10 and -B15 ratios


1.5 and 2 hp high ratio pumps; -683 and -903 ratios

(91/4")


25.4 mm = 1 inch

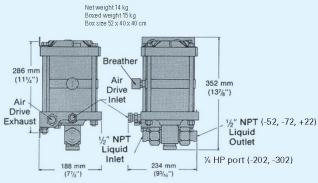


1.5 and 2 hp medium ratio pumps; -52, -72, -122, -202 and -302 ratios

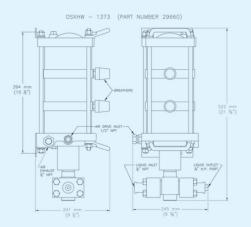

2 & 2.2 hp (1.49 & 1.64 kW) Pump Models

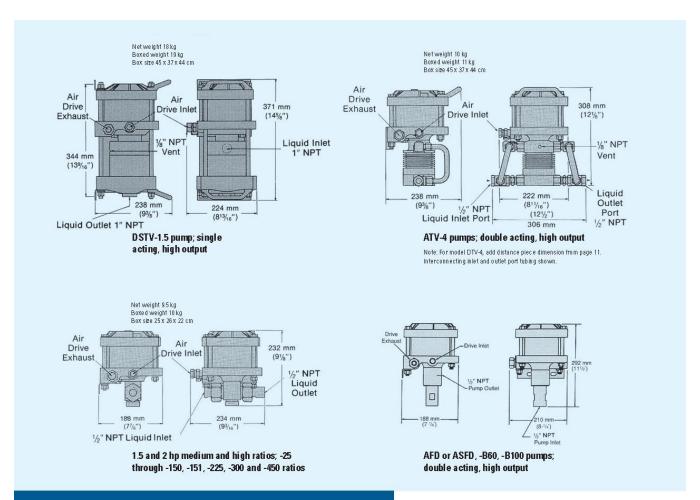



#### 3 hp (2.24 kW) Pump Models

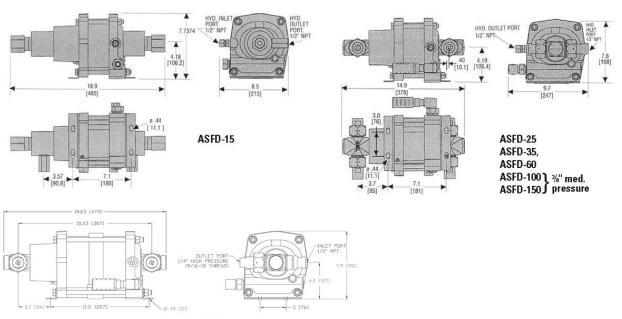

ASFD-202


#### 6 hp (4.47 kW) Pump Models

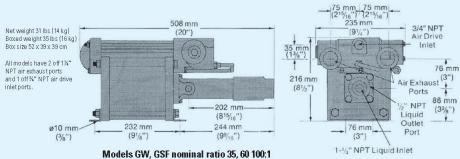

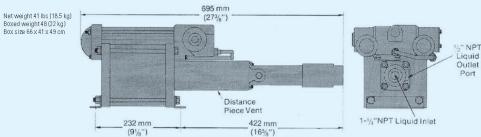


Models DGF, DGSF, DGSTV nominal ratio 35, 60 100:1

End dimensions as GW/GSF

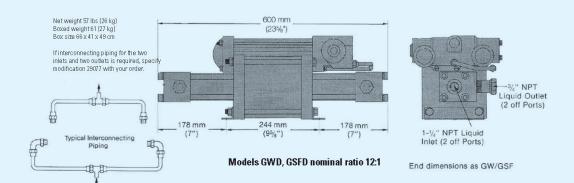

Net weight 66 lbs (30 kg) Boxed weight 75 lbs (34 kg) Box size 91 x 51 x 39 cm

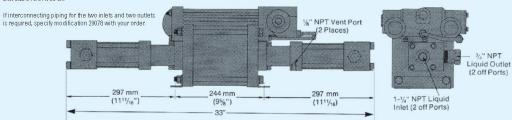


Models DGFD, DGSFD, DGSTVD nominal ratio 12:1

## 8 hp (5.97 kW) Pump Models

Model	Length	Width	Height	Weight	Air Drive	Liquid Inlet	Liquid Outlet
8FD-25 8SFD-25	25 ¾" (644.5 mm)	9 ½" (241 mm)	11" (279 mm)	80 lbs (36 kg)	34"	1 ¼" NPT <sup>(2)</sup>	34" NPT <sup>(2)</sup>
8DFD-25 8DSFD-25 8DSTVD-25	34 ¾" (883 mm)	9½" (241 mm)	11" (279 mm)	94 lbs (43 kg)	3/4"	1 ¼" NPT <sup>(2)</sup>	3/" NPT <sup>(2)</sup>
8SFD-40	26 %" (683 mm)	9½" (241 mm)	11" (279 mm)	64 lbs (29 kg)	34"	1" NPT	%" NPT
8SFD-65	26 ¾" (683 mm)	9 ½" (241 mm)	11" (279 mm)	63 lbs (28.5 kg)	34"	1" NPT	½" NPT
8HSFD-225	28 %" (721)	9 ½" (241 mm)	11" (279 mm)	71 lbs (32 kg)	3/4"	%" MVP (20K coned and threaded connection)	%" M/P (20K coned and threaded connection)
8DSFD-100	41 ¾" (1060 mm)	9 ½" (241 mm)	11" (279 mm)	92 lbs (42 kg)	¾"	1 ¼" NPT <sup>(2)</sup>	%" NPT <sup>(2)</sup>

## 10 hp (7.46 kW) Pump Models

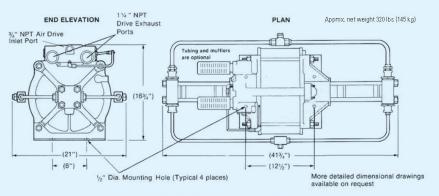

Note: See 29079 interconnecting tubing optional page 15. (29079 shown)

Single Inlet port – % JIC male flare connection, single outlet port % HP ports (BuTech).
Individual Pump ports – Liquid inlets 2 ea. ½ NPT ports, 2 ea. % HP ports (BuTech)

CELEBRATING OVER 60 YEARS OF HYDRAULIC AND PNEUMATIC ENGINEERING EXPERIENCE IN THE DESIGN AND MANUFACTURING OF HIGH PRESSURE GENERATING EQUIPMENT AND CONTROLS



#### Haskel International, Inc.

100 East Graham Place Burbank, California 91502 USA Tel: 818-843-4000 / Fax: 818-556-2549 or 818-841-4291 www.haskel.com

#### Haskel Europe Ltd.


Sunderland SR5 3JD, England, UK Tel: 44-191-549-1212 / Fax: 44-191-549-0911 www.haskel-europe.com


#### Haskel Middle East

Hamilton Sundstrand Industrial ME FZE P.O. Box 262384 Jebel Ali, Dubai, United Arab Emirates Tel: +971 4886 2686 / Fax: +971 4886 2687 Email: sales@haskel.ae

Haske I Asia Hamilton Sundstrand Singapore Industrial Pte. Ltd. 23 Tagore Lane #03-06 Tagore 23 Warehouse Complex, Singapore 787601 Tel: 65-6455-7559 / Fax: 65-6455-2841 www.haskel.com.sg

For further information on Haskel products, please visit us online at www.haskel.com

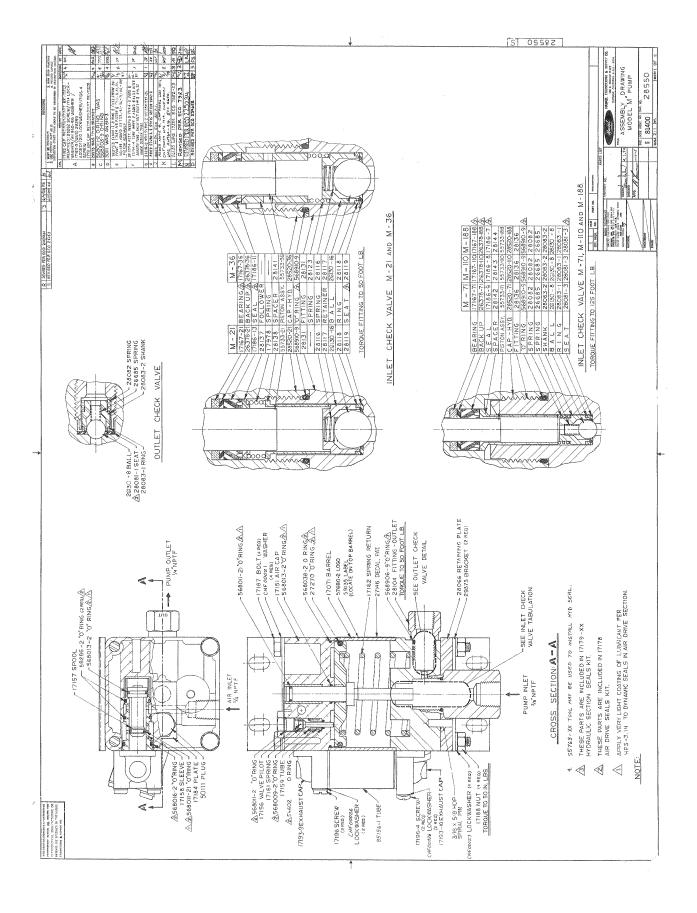

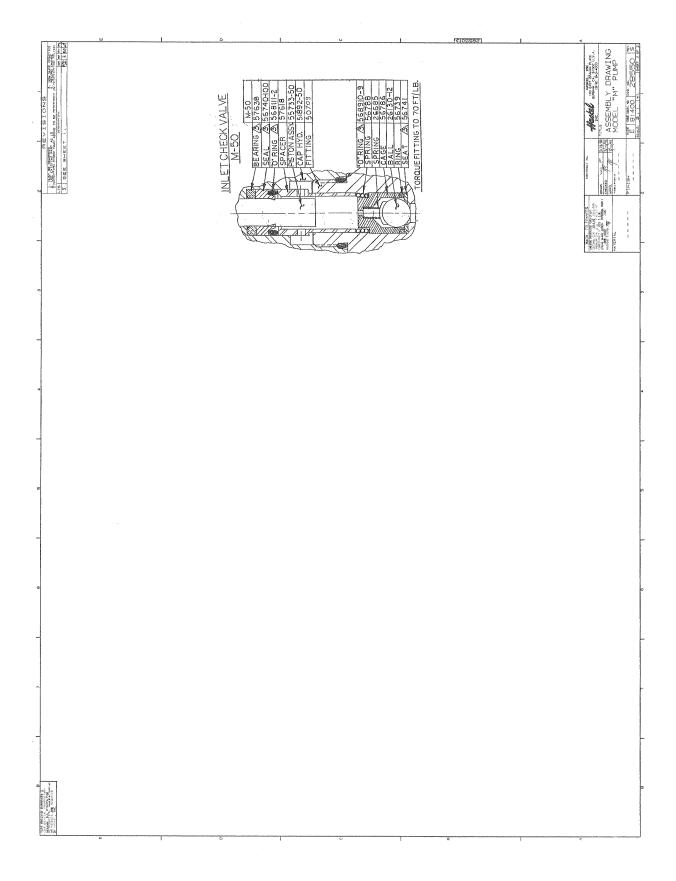



# **APPENDIX III**

HC-1948 Hand Pump Parts List



# Model: HC-1948 1950 psi Hand Pump

\*\*\*

# Parts List With Illustrations

10/2002 - Rev. OR

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Phone: (419) 866-6301 | 800-426-6301

Web: www.tronair.com

Email: sales@tronair.com



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

#### **INSTRUCTIONS**

This pump is compatible with MIL-PRF-5606/MIL-H-83282 Hydraulic Fluids only.

- 1. Inspect all parts. Replace all worn or otherwise defective parts.
- 2. Clean all parts prior to re-assembly.
- 3. Lubricate all O-rings with clean system hydraulic fluid prior to installation.
- 4. Torque pump screws (Item 4) to 10 ft-lbs.

#### **Parts List**


Reference Illustration on following page

Item	Part Number	Description	Qty
4	518-000	Screw, Socket Head Cap	4
9	Reference	Pump Body Not Sold Separately	
10	H-3449	Assembly, Relief Screw	1
24	506-000	Flange Half	4
Not Shown	H-1009-01	Handle	1
	K-1068	Kit, Linkage Replacement; consists of:	
17		Bracket, Pump Handle	1
18		Assembly, Clevis Pin	1
19		Assembly, Linkage Pin	2
20		Strap	2
23		Pivot	1
	K-1778	Kit, Piston/Cylinder Replacement; consists of:	
1		Retainer, Wiper	1
21		Tube	1
22		Piston	1
25		Assembly, Valve Body (Includes Items 7, 12, 25, 26)	1
	K-1906	Kit, Piston/Seal Replacement; consists of:	
3		Ring, Backup	1
5		O-ring, Piston	1
22		Piston	1
	K-3441	Kit, Seal Replacement; consists of:	
2		Wiper, Rod	1
3		Ring, Backup	1
5		O-ring, Piston	1
6		O-ring, Valve Body	1
8		O-ring, Tube Seal	1
11		O-ring, Relief Screw	1
16		O-ring, Release Screw	1
27		O-ring, Outlet Check	1
34		Ring, Backup Relief Screw	1
35		O-ring, Relief Screw	1
	K-3342	Kit, Internal Parts Replacement; consists of:	
12		Spring, Inlet Check	1
26		Ball, Inlet Check	2
28		Ball, Outlet Check	1
29		Spring, Outlet Check	1
33		Spring, Inlet Check	1
	K-3343	Kit, Release Screw Replacement; consists of:	†
13		Screw, Release	1
14		Pin, Roll	1
15		Retainer, Screw	1
16		O-ring	1

10/2002 | Rev. OR Page | 1



#### **Parts List Illustrations**

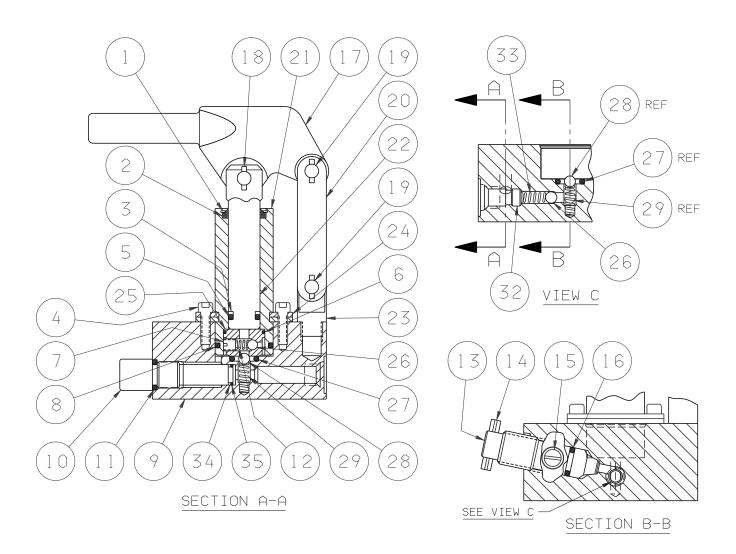





Item 10 (H-2683) is a preset relief valve. Do not disassemble this valve. Replacement parts are available as a preset relief valve assembly.

10/2002 | Rev. OR Page | 2



# **APPENDIX IV**

**Declaration of Conformity** 



## **DECLARATION of CONFORMITY**

The design, development and manufacture is in accordance with European Community guidelines

Tripod Jacks 02-0524C0110 02A0524C0110 02B0524C0110 02C0524C0110

Relevant provisions complied with by the machinery: 2006/42/EC

Relevant standards complied with by the machinery: EN ISO 12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

Quality Assurance Representative

Phone: (419) 866-6301 | 800-426-6301

Web: www.tronair.com

Email: sales@tronair.com



## **APPENDIX V**

Safety Data Sheet MIL-PRF-5606 Hydraulic Fluid



Revision Date: 01 Oct 2015

Page 1 of 12

## **SAFETY DATA SHEET**

#### **SECTION 1**

#### PRODUCT AND COMPANY IDENTIFICATION

**PRODUCT** 

Product Name: MOBIL AERO HFA
Product Description: Base Oil and Additives

Product Code: 201550401020, 490110-00, 970584

Intended Use: Aviation hydraulic oil

**COMPANY IDENTIFICATION** 

Supplier: EXXON MOBIL CORPORATION

22777 Springwoods Village Parkway

Spring, TX. 77253 USA

24 Hour Health Emergency 609-737-4411

**Transportation Emergency Phone** 800-424-9300 or 703-527-3887 CHEMTREC

Product Technical Information 800-662-4525

MSDS Internet Address http://www.exxon.com, http://www.mobil.com

#### **SECTION 2**

#### HAZARDS IDENTIFICATION

This material is hazardous according to regulatory guidelines (see (M)SDS Section 15).

#### **CLASSIFICATION:**

Flammable liquid: Category 4. Aspiration toxicant: Category 1.

#### LABEL:

#### Pictogram:



Signal Word: Danger

#### **Hazard Statements:**

H227: Combustible liquid. H304: May be fatal if swallowed and enters airways.

#### **Precautionary Statements:**

P210: Keep away from flames and hot surfaces. -- No smoking. P273: Avoid release to the environment. P280: Wear protective gloves and eye / face protection.P301 + P310: IF SWALLOWED: Immediately call a POISON CENTER or doctor/physician. P331: Do NOT induce vomiting. P370 + P378: In case of fire: Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish.P403 + P235: Store in a well-ventilated place. Keep cool. P405: Store locked up.P501: Dispose of contents and container in accordance with local regulations.



Revision Date: 01 Oct 2015

Page 2 of 12

#### Other hazard information:

HAZARD NOT OTHERWISE CLASSIFIED (HNOC): None as defined under 29 CFR 1910.1200.

#### PHYSICAL / CHEMICAL HAZARDS

Material can accumulate static charges which may cause an ignition. Material can release vapors that readily form flammable mixtures. Vapor accumulation could flash and/or explode if ignited. Combustible.

#### **HEALTH HAZARDS**

High-pressure injection under skin may cause serious damage. Excessive exposure may result in eye, skin, or respiratory irritation.

#### **ENVIRONMENTAL HAZARDS**

No significant hazards.

NFPA Hazard ID:Health:1Flammability:2Reactivity:0HMIS Hazard ID:Health:1\*Flammability:2Reactivity:0

**NOTE:** This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

## SECTION 3

#### **COMPOSITION / INFORMATION ON INGREDIENTS**

This material is defined as a mixture.

Hazardous Substance(s) or Complex Substance(s) required for disclosure

Name	CAS#	Concentration*	GHS Hazard Codes
2,6-DI-TERT-BUTYL-P-CRESOL	128-37-0	0.1 - < 1%	H400(M factor 1),
			H410(M factor 1)
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	5 - < 10%	H304
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE	64742-53-6	50 - < 70%	H227, H304
(PETROLEUM)			
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	64742-46-7	20 - < 30%	H304
TRIPHENYL PHOSPHATE	115-86-6	0.1 - < 0.25%	H400(M factor 1),
			H410(M factor 1)

<sup>\*</sup> All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

As per paragraph (i) of 29 CFR 1910.1200, formulation is considered a trade secret and specific chemical identity and exact percentage (concentration) of composition may have been withheld. Specific chemical identity and exact percentage composition will be provided to health professionals, employees, or designated representatives in accordance with applicable provisions of paragraph (i).

SECTION 4 FIRST AID MEASURES

INHALATION



Revision Date: 01 Oct 2015

Page 3 of 12

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

#### **SKIN CONTACT**

Wash contact areas with soap and water. Remove contaminated clothing. Launder contaminated clothing before reuse. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

#### **EYE CONTACT**

Flush thoroughly with water. If irritation occurs, get medical assistance.

#### INGESTION

Seek immediate medical attention. Do not induce vomiting.

#### **NOTE TO PHYSICIAN**

If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

#### **SECTION 5**

#### **FIRE FIGHTING MEASURES**

#### **EXTINGUISHING MEDIA**

**Appropriate Extinguishing Media:** Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish flames.

Inappropriate Extinguishing Media: Straight Streams of Water

#### **FIRE FIGHTING**

**Fire Fighting Instructions:** Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

Unusual Fire Hazards: Combustible. Pressurized mists may form a flammable mixture.

**Hazardous Combustion Products:** Aldehydes, Incomplete combustion products, Oxides of carbon, Phosphorus oxides, Smoke, Fume, Sulfur oxides

#### **FLAMMABILITY PROPERTIES**

Flash Point [Method]: >82°C (180°F) [ASTM D-93]

Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated]

Autoignition Temperature: >225°C (437°F)

#### **SECTION 6**

#### ACCIDENTAL RELEASE MEASURES

#### **NOTIFICATION PROCEDURES**

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable



Revision Date: 01 Oct 2015

Page 4 of 12

regulations. US regulations require reporting releases of this material to the environment which exceed the applicable reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

#### PROTECTIVE MEASURES

Avoid contact with spilled material. Warn or evacuate occupants in surrounding and downwind areas if required due to toxicity or flammability of the material. See Section 5 for fire fighting information. See the Hazard Identification Section for Significant Hazards. See Section 4 for First Aid Advice. See Section 8 for advice on the minimum requirements for personal protective equipment. Additional protective measures may be necessary, depending on the specific circumstances and/or the expert judgment of the emergency responders.

For emergency responders: Respiratory protection: respiratory protection will be necessary only in special cases, e.g., formation of mists. Half-face or full-face respirator with filter(s) for dust/organic vapor or Self Contained Breathing Apparatus (SCBA) can be used depending on the size of spill and potential level of exposure. If the exposure cannot be completely characterized or an oxygen deficient atmosphere is possible or anticipated, SCBA is recommended. Work gloves that are resistant to hydrocarbons are recommended. Gloves made of polyvinyl acetate (PVA) are not water-resistant and are not suitable for emergency use. Chemical goggles are recommended if splashes or contact with eyes is possible. Small spills: normal antistatic work clothes are usually adequate. Large spills: full body suit of chemical resistant, antistatic material is recommended

#### SPILL MANAGEMENT

Land Spill: Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. All equipment used when handling the product must be grounded. Do not touch or walk through spilled material. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Use clean non-sparking tools to collect absorbed material. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Large Spills: Water spray may reduce vapor; but may not prevent ignition in closed spaces. Recover by pumping or with suitable absorbent.

**Water Spill:** Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

#### **ENVIRONMENTAL PRECAUTIONS**

Large Spills: Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

#### SECTION 7

#### HANDLING AND STORAGE

#### **HANDLING**

Avoid contact with skin. Avoid prolonged breathing of mists and heated vapor. Prevent small spills and leakage to avoid slip hazard. Material can accumulate static charges which may cause an electrical spark (ignition source). When the material is handled in bulk, an electrical spark could ignite any flammable vapors from liquids or residues that may be present (e.g., during switch-loading operations). Use proper bonding and/or ground procedures. However, bonding and grounds may not eliminate the hazard from static



Revision Date: 01 Oct 2015

Page 5 of 12

accumulation. Consult local applicable standards for guidance. Additional references include American Petroleum Institute 2003 (Protection Against Ignitions Arising out of Static, Lightning and Stray Currents) or National Fire Protection Agency 77 (Recommended Practice on Static Electricity) or CENELEC CLC/TR 50404 (Electrostatics - Code of practice for the avoidance of hazards due to static electricity).

Static Accumulator: This material is a static accumulator.

#### STORAGE

The container choice, for example storage vessel, may effect static accumulation and dissipation. Keep container closed. Handle containers with care. Open slowly in order to control possible pressure release. Store in a cool, well-ventilated area. Storage containers should be grounded and bonded. Fixed storage containers, transfer containers and associated equipment should be grounded and bonded to prevent accumulation of static charge.

#### **SECTION 8**

#### **EXPOSURE CONTROLS / PERSONAL PROTECTION**

#### **EXPOSURE LIMIT VALUES**

Exposure limits/standards (Note: Exposure limits are not additive)

Substance Name	Form	Limit / Sta	ndard	NOTE	Source
2,6-DI-TERT-BUTYL-P-CRESOL	Inhalable fraction and vapor	TWA	2 mg/m3	N/A	ACGIH
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT [total hydrocarbon vapor]	Non-Aerosol	TWA	200 mg/m3	Skin	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	OSHA Z1
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	ACGIH

**Exposure limits/standards for materials that can be formed when handling this product:** When mists/aerosols can occur the following are recommended: 5 mg/m³ - ACGIH TLV (inhalable fraction), 5 mg/m³ - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

No biological limits allocated.

#### **ENGINEERING CONTROLS**

The level of protection and types of controls necessary will vary depending upon potential exposure conditions.



Revision Date: 01 Oct 2015

Page 6 of 12

Control measures to consider:

Use explosion-proof ventilation equipment to stay below exposure limits.

#### PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

**Respiratory Protection:** If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

**Hand Protection:** Any specific glove information provided is based on published literature and glove manufacturer data. Glove suitability and breakthrough time will differ depending on the specific use conditions. Contact the glove manufacturer for specific advice on glove selection and breakthrough times for your use conditions. Inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

If prolonged or repeated contact is likely, chemical resistant gloves are recommended. If contact with forearms is likely, wear gauntlet style gloves.

Eye Protection: If contact is likely, safety glasses with side shields are recommended.

**Skin and Body Protection:** Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include:

If prolonged or repeated contact is likely, chemical, and oil resistant clothing is recommended.

**Specific Hygiene Measures:** Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

#### **ENVIRONMENTAL CONTROLS**

Comply with applicable environmental regulations limiting discharge to air, water and soil. Protect the environment by applying appropriate control measures to prevent or limit emissions.

#### **SECTION 9**

#### PHYSICAL AND CHEMICAL PROPERTIES

Note: Physical and chemical properties are provided for safety, health and environmental considerations only and may not fully represent product specifications. Contact the Supplier for additional information.

#### **GENERAL INFORMATION**

Physical State: Liquid

Color: Red



Revision Date: 01 Oct 2015

Page 7 of 12

Odor: Characteristic Odor Threshold: N/D

#### IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION

Relative Density (at 15 °C): 0.88 Flammability (Solid, Gas): N/A

Flash Point [Method]: >82°C (180°F) [ASTM D-93]

Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated]

Autoignition Temperature: >225°C (437°F)

Boiling Point / Range: N/D
Decomposition Temperature: N/D
Vapor Density (Air = 1): N/D
Vapor Pressure: [N/D at 20 °C]

Evaporation Rate (n-butyl acetate = 1): N/D

pH: N/A

Log Pow (n-Octanol/Water Partition Coefficient): N/D

Solubility in Water: Negligible

Viscosity: 13.8 cSt (13.8 mm2/sec) at 40 °C | 5.1 cSt (5.1 mm2/sec) at 100 °C [ASTM D 445]

Oxidizing Properties: See Hazards Identification Section.

#### OTHER INFORMATION

Freezing Point: N/D Melting Point: N/A

Pour Point: -60°C (-76°F) [ASTM D97] DMSO Extract (mineral oil only), IP-346: < 3 %wt

#### SECTION 10 STABILITY AND REACTIVITY

**REACTIVITY:** See sub-sections below.

STABILITY: Material is stable under normal conditions.

CONDITIONS TO AVOID: Open flames and high energy ignition sources.

MATERIALS TO AVOID: Strong oxidizers

HAZARDOUS DECOMPOSITION PRODUCTS: Material does not decompose at ambient temperatures.

POSSIBILITY OF HAZARDOUS REACTIONS: Hazardous polymerization will not occur.

#### SECTION 11 TOXICOLOGICAL INFORMATION

#### **INFORMATION ON TOXICOLOGICAL EFFECTS**

Hazard Class	Conclusion / Remarks
Inhalation	
Acute Toxicity: No end point data for material.	Minimally Toxic. Based on assessment of the components.
Irritation: No end point data for material.	Elevated temperatures or mechanical action may form vapors, mist, or fumes which may be irritating to the eyes, nose, throat, or lungs.



Revision Date: 01 Oct 2015

Page 8 of 12

Ingestion	
Acute Toxicity: No end point data for	Minimally Toxic. Based on assessment of the components.
material.	·
Skin	
Acute Toxicity: No end point data for	Minimally Toxic. Based on assessment of the components.
material.	
Skin Corrosion/Irritation: No end point data	May dry the skin leading to discomfort and dermatitis. Based on
for material.	assessment of the components.
Eye	
Serious Eye Damage/Irritation: No end point	May cause mild, short-lasting discomfort to eyes. Based on
data for material.	assessment of the components.
Sensitization	
Respiratory Sensitization: No end point data	Not expected to be a respiratory sensitizer.
for material.	·
Skin Sensitization: No end point data for	Not expected to be a skin sensitizer. Based on assessment of the
material.	components.
Aspiration: Data available.	May be fatal if swallowed and enters airways. Based on
	physico-chemical properties of the material.
Germ Cell Mutagenicity: No end point data	Not expected to be a germ cell mutagen. Based on assessment of
for material.	the components.
Carcinogenicity: No end point data for	Not expected to cause cancer. Based on assessment of the
material.	components.
Reproductive Toxicity: No end point data	Not expected to be a reproductive toxicant. Based on assessment
for material.	of the components.
Lactation: No end point data for material.	Not expected to cause harm to breast-fed children.
Specific Target Organ Toxicity (STOT)	
Single Exposure: No end point data for	Not expected to cause organ damage from a single exposure.
material.	
Repeated Exposure: No end point data for	Not expected to cause organ damage from prolonged or repeated
material.	exposure. Based on assessment of the components.

#### **TOXICITY FOR SUBSTANCES**

NAME	ACUTE TOXICITY
2,6-DI-TERT-BUTYL-P-CRESOL	Oral Lethality: LD50 0.89 g/kg (Rat)

#### **OTHER INFORMATION**

#### For the product itself:

Repeated and/or prolonged exposure may cause irritation to the skin, eyes, or respiratory tract. Small amounts of liquid aspirated into the lungs during ingestion or from vomiting may cause chemical pneumonitis or pulmonary edema. **Contains:** 

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

The following ingredients are cited on the lists below: None.

-- REGULATORY LISTS SEARCHED--



Revision Date: 01 Oct 2015

Page 9 of 12

1 = NTP CARC 3 = IARC 1 5 = IARC 2B 2 = NTP SUS 4 = IARC 2A 6 = OSHA CARC

#### **SECTION 12**

#### **ECOLOGICAL INFORMATION**

The information given is based on data available for the material, the components of the material, and similar materials.

#### **ECOTOXICITY**

Material -- Not expected to be harmful to aquatic organisms.

#### **MOBILITY**

More volatile component -- Highly volatile, will partition rapidly to air. Not expected to partition to sediment and wastewater solids.

Less volatile component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

#### PERSISTENCE AND DEGRADABILITY

#### **Biodegradation:**

Components -- Expected to be inherently biodegradable

#### **BIOACCUMULATION POTENTIAL**

Majority of components -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

#### **SECTION 13**

#### **DISPOSAL CONSIDERATIONS**

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

#### **DISPOSAL RECOMMENDATIONS**

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products. Protect the environment. Dispose of used oil at designated sites. Minimize skin contact. Do not mix used oils with solvents, brake fluids or coolants.

#### **REGULATORY DISPOSAL INFORMATION**

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrositivity or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

**Empty Container Warning** Empty Container Warning (where applicable): Empty containers may contain residue and can be dangerous. Do not attempt to refill or clean containers without proper instructions. Empty drums should be



Revision Date: 01 Oct 2015

Page 10 of 12

completely drained and safely stored until appropriately reconditioned or disposed. Empty containers should be taken for recycling, recovery, or disposal through suitably qualified or licensed contractor and in accordance with

governmental regulations. DO NOT PRESSURISE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND, OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION. THEY MAY EXPLODE AND CAUSE INJURY OR DEATH.

THE I MAT EXPLODE AND GAUGE INJUNT ON DEATH.

#### SECTION 14

#### TRANSPORT INFORMATION

#### LAND (DOT)

Proper Shipping Name: COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light)

Hazard Class & Division: COMBUSTIBLE LIQUID

ID Number: NA1993
Packing Group: III
ERG Number: 128
Label(s): NONE

Transport Document Name: NA1993, COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum),

Hydrotreated Light), COMBUSTIBLE LIQUID, PG III

Footnote: This material is not regulated under 49 CFR in a container of 119 gallon capacity or less when transported solely by land, as long as the material is not a hazardous waste, a marine pollutant, or specifically listed as a hazardous substance.

LAND (TDG): Not Regulated for Land Transport

SEA (IMDG): Not Regulated for Sea Transport according to IMDG-Code

Marine Pollutant: No

AIR (IATA): Not Regulated for Air Transport

#### **SECTION 15**

#### REGULATORY INFORMATION

**OSHA HAZARD COMMUNICATION STANDARD:** This material is considered hazardous in accordance with OSHA HazCom 2012, 29 CFR 1910.1200.

Listed or exempt from listing/notification on the following chemical inventories: AICS, DSL, ENCS, IECSC, KECI, PICCS, TCSI, TSCA

EPCRA SECTION 302: This material contains no extremely hazardous substances.

SARA (311/312) REPORTABLE HAZARD CATEGORIES: Fire. Immediate Health. Delayed Health.

**SARA (313) TOXIC RELEASE INVENTORY:** This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.



Revision Date: 01 Oct 2015

Page 11 of 12

#### The following ingredients are cited on the lists below:

Chemical Name	CAS Number	List Citations
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	1, 17, 18
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	1, 4, 13, 17, 18
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	64742-46-7	1, 4, 17, 18

#### --REGULATORY LISTS SEARCHED--

1 = ACGIH ALL	6 = TSCA 5a2	11 = CA P65 REPRO	16 = MN R I K
2 = ACGIH A1	7 = TSCA 5e	12 = CA RTK	17 = NJ RTK
3 = ACGIH A2	8 = TSCA 6	13 = IL RTK	18 = PA RTK
4 = OSHA Z	9 = TSCA 12b	14 = LA RTK	19 = RI RTK
5 = TSCA 4	10 = CA P65 CARC	15 = MI 293	

Code key: CARC=Carcinogen; REPRO=Reproductive

SECTION 16	OTHER INFORMATION	

N/D = Not determined, N/A = Not applicable

#### KEY TO THE H-CODES CONTAINED IN SECTION 3 OF THIS DOCUMENT (for information only):

H227: Combustible liquid; Flammable Liquid, Cat 4

H304: May be fatal if swallowed and enters airways; Aspiration, Cat 1

H400: Very toxic to aquatic life; Acute Env Tox, Cat 1

H410: Very toxic to aquatic life with long lasting effects; Chronic Env Tox, Cat 1

#### THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:

Revision Changes:

Section 01: Company Mailing Address information was modified.

Section 05: Hazardous Combustion Products information was modified.

Section 15: List Citations Table information was modified.

Section 15: National Chemical Inventory Listing information was modified.

Section 14: Marine Pollutant information was modified. Composition: Component Table information was modified.

Section 08: Exposure Limits Table information was modified.

Section 16: Revision Information - Implementation of GHS requirements phrase. information was deleted.

The information and recommendations contained herein are, to the best of ExxonMobil's knowledge and belief, accurate and reliable as of the date issued. You can contact ExxonMobil to insure that this document is the most current available from ExxonMobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law,



Revision Date: 01 Oct 2015

Page 12 of 12

re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "ExxonMobil" is used

for convenience, and may include any one or more of ExxonMobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

Internal Use Only MHC: 2A, 0, 0, 0, 1, 1 PPEC: C

DGN: 2005454XUS (552975)

Copyright 2002 Exxon Mobil Corporation, All rights reserved



# **APPENDIX VI**

**Maintenance Schedule** 



# **Maintenance Schedule**

## **Single-Stage Tripod Jacks**

Tronair recommends performing preventative maintenance on all jacks, which should include a 90-day routine inspection and a 12-month load test.

Model Number	Serial Number
Maintenance Performed By	Date
90-Day Maintenance:  Check hydraulic system for leaks including the follow Hydraulic lines; hoses and fittings Hand pump; cylinder, fittings and seals	ving:
<ul> <li>Reservoir; welds and fittings</li> <li>Air operated pump (optional equipment); fittings,</li> <li>Check jack structure for corrosion, bending, cracking</li> <li>Ball lock pins</li> <li>Mechanical extension</li> <li>Welded joints; tripod legs, cylinder and foot pads</li> <li>Ram lock nuts; gouge marks and cracks in threa</li> <li>Jack pads</li> </ul>	g and excessive wear including the following:
☐ Check fluid level with rams fully retracted. See manu☐ Extend rams and visually inspect for corrosion, foreign	
Remove any foreign matter  Check air operated pump if equipped (reference air of the Check paint condition, touch-up areas that are exposed.)	
Actuate the hand pump and raise the ram to full extended <u>Do not</u> over pressurize once fully extended	ension at least once.
<ul> <li>Apply DoAll, RPM, LPS or equivalent water repellan</li> <li>Open release valve and verify that rams fully retract</li> <li>Lubricate casters (if applicable)</li> </ul>	t that is Buna N compatible to the rams
☐ Torque ram retaining cap (refer to product Operation and Safety Manual or follows)	lowing page for location and torque specification)
Annual (12-Month) Maintenance:  ☐ Check hydraulic fluid for contamination (dirt/water) d ☐ Perform 90-day maintenance checklist ☐ Capacity test (105% - 110% of jack's rated capacity)	·
<b>NOTE:</b> The jack may be returned to Tronair for load test Please contact Tronair to obtain a "Return Mate product to Tronair.	sting, or sent to a local hydraulic repair shop. rial Authorization Number" (RMA #) before sending any

www.eagletugs.com | www.tronair.com • 1-800-426-6301 | www.jetporter.com

Sales Offices: USA • Asia/China • Australia/New Zealand/Singapore • Europe/Middle East/Africa



# **Maintenance Schedule**

## **Torque Specification**

Madal Number	Capacity	Socket Head Cap Screw	
Model Number		Size	Torque
02-0524C0110	5	5/16-18	35 ft lbs (47 Nm)
02-0526C0100	5	5/16-18	35 ft lbs (47 Nm)
02-0536C0110	5	5/16-18	35 ft lbs (47 Nm)
02-0540C0110	5	5/16-18	35 ft lbs (47 Nm)
02-0544C0110	5	5/16-18	35 ft lbs (47 Nm)
02-0566C0110	5	5/16-18	35 ft lbs (47 Nm)
02-7804C0110	5	5/16-18	35 ft lbs (47 Nm)
02-7838C0110	5	5/16-18	35 ft lbs (47 Nm)
02-7812C0110	5	5/16-18	35 ft lbs (47 Nm)
02-7855C0100	5	5/16-18	35 ft lbs (47 Nm)
02-7856C0100	5	5/16-18	35 ft lbs (47 Nm)
02-7865C0100	5	5/16-18	35 ft lbs (47 Nm)
02-8003C0140	5	5/16-18	35 ft lbs (47 Nm)
02-1032C0111	10	3/8 - 16	62 ft lbs (84 Nm)
02-1036C0111	10	3/8 - 16	62 ft lbs (84 Nm)
02-1040C0111	10	3/8 - 16	62 ft lbs (84 Nm)
02A7904C0100	10	3/8 - 16	62 ft lbs (84 Nm)
02A7914C0100	10	3/8 - 16	62 ft lbs (84 Nm)
02-1240C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-1248C0112	12	3/16 - 16	62 ft lbs (84 Nm)
02-1256C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-7800C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-7802C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-7805C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-7810C0111	12	3/16 - 16	62 ft lbs (84 Nm)
02-7857C0110	12	3/16 - 16	62 ft lbs (84 Nm)
02A7890C0100	12	3/16 - 16	62 ft lbs (84 Nm)
02A7899C0100	12	3/16 - 16	62 ft lbs (84 Nm)
02-8112C0111	12	3/16 - 16	62 ft lbs (84 Nm)

Model Number Capacity	Socket Head Cap Screw		
	Сарасіту	Size	Torque
02-7839C0111	18	1/2 - 13	150 ft lbs (203 Nm)
02-2560C0111	25	1/2 - 13	150 ft lbs (203 Nm)
02-7803C0111	25	1/2 - 13	150 ft lbs (203 Nm)
02A7843C0112	25	1/2 - 13	150 ft lbs (203 Nm)
02-7844C0111	25	1/2 - 13	150 ft lbs (203 Nm)
02-7851C0111	25	1/2 - 13	150 ft lbs (203 Nm)
02A7868C0100	25	1/2 - 13	150 ft lbs (203 Nm)
02A7889C0100	25	1/2 - 13	150 ft lbs (203 Nm)