

**Models: 04-6031C0100
Falcon 900 Battery Lift**



07/2014 – Rev. 01

REVISION
01

DATE
02/2017

TEXT AFFECTED
Original Release

TABLE OF CONTENTS

	<u>PAGE</u>
1.0 PRODUCT INFORMATION	1
1.1 DESCRIPTION.....	1
1.2 MODEL & SERIAL NUMBER.....	1
1.3 MANUFACTURER.....	1
1.4 SPECIFICATIONS	1
2.0 SAFETY INFORMATION.....	1
2.1 USAGE AND SAFETY INFORMATION.....	1
3.0 ASSEMBLY INSTRUCTIONS.....	1
4.0 TRAINING.....	1
4.1 TRAINING REQUIREMENTS	1
4.2 TRAINING PROGRAM	1
4.3 OPERATOR TRAINING	1
5.0 OPERATING INSTRUCTIONS	2
5.1 TO RAISE BATTERY.....	2
5.2 TO LOWER BATTERY	2
5.3 FILLING THE RESERVOIR	2
6.0 PROVISION OF SPARES.....	2
6.1 SOURCE OF SPARE PARTS.....	2
6.2 RECOMMENDED SPARE PARTS LISTS	2
7.0 IN SERVICE SUPPORT.....	2
8.0 GUARANTEES/LIMITATION OF LIABILITY	3
9.0 APPENDICES	3

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

This Tronair Battery Lift, Model 04-6031C0100, is designed to aid in the installation and removal of batteries in the Falcon 900 aircraft.

1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit

1.3 MANUFACTURER

TRONAIR, Inc.
1 Air Cargo Pkwy East
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301
Fax: (419) 867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

1.4 SPECIFICATIONS

- Capacity: 300 lbs (136 kg) Maximum (Vertical Lift)
- Height, Collapsed: 46-3/8 in (117.5 cm)
- Height, Extended: 82-3/8 in (209 cm)
- Weight, Net: 90 lbs (40.8 kg)

2.0 SAFETY INFORMATION

2.1 USAGE AND SAFETY INFORMATION

To insure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



WARNING! — Warning is used to indicate the presence of a hazard that **can cause severe personal injury, death, or substantial property damage** if the warning notice is ignored.

CAUTION! — Caution is used to indicate the presence of a hazard that **will or can cause minor personal injury or property damage** if the caution notice is ignored.

3.0 ASSEMBLY INSTRUCTIONS

(Reference Parts List Illustration)

1. Attach pump/cylinder assembly (Item 5) to base weldment (Item 1) using the four (4) five-sixteenths inch (5/16") bolts, stopnuts and washers (Items 6, 7, 8) supplied. Torque bolts to 15 ft-lbs.
2. Attach table assembly to the ram using set screw (Item 4).
3. Assure all bolts and stopnuts are securely fastened before operating.

4.0 TRAINING

4.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the unit.

4.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the unit in and around the intended aircraft at the intended aircraft servicing location.

4.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the unit.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.

5.0 OPERATING INSTRUCTIONS

(Reference Parts List Illustration)



CAUTION!

Operator injury and/or battery damage can result.

- **Do not transport batteries on this battery lift.**
- **This battery lift is designed to only lift or lower batteries at aircraft.**

5.1 TO RAISE BATTERY

1. Place battery lift on hard level surface.
2. Open vent screw
3. Pump foot pedal on pump to raise lift to desired height.

5.2 TO LOWER BATTERY

1. Depress release foot pedal on pump to lower lift.
2. Close vent screw



CAUTION!

Battery damage and/or operator injury could result if release valve is depressed too quickly.

5.3 FILLING THE RESERVOIR

1. Remove reservoir vent screw.
2. Open release valve.
3. Fill reservoir with hydraulic oil MIL-H-5606 approximately one inch (1") from top.
4. Pump foot pedal rapidly with release foot pedal depressed to exhaust any air in system.
5. Repeat above instructions if plunger fails to advance.

6.0 PROVISION OF SPARES

6.1 SOURCE OF SPARE PARTS

Spare parts may be obtained from the manufacturer:

TRONAIR, Inc.

1 Air Cargo Pkwy East
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301

Fax: (419) 867-0634

E-mail: sales@tronair.com

Website: www.tronair.com

6.2 RECOMMENDED SPARE PARTS LISTS

Reference the following page(s) for Replacement Parts and Kits available.

7.0 IN SERVICE SUPPORT

Contact Tronair, Inc. for technical services and information. See Section 1.3 – Manufacturer.

8.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.


The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**

9.0 APPENDICES

APPENDIX I Declaration of Conformity

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

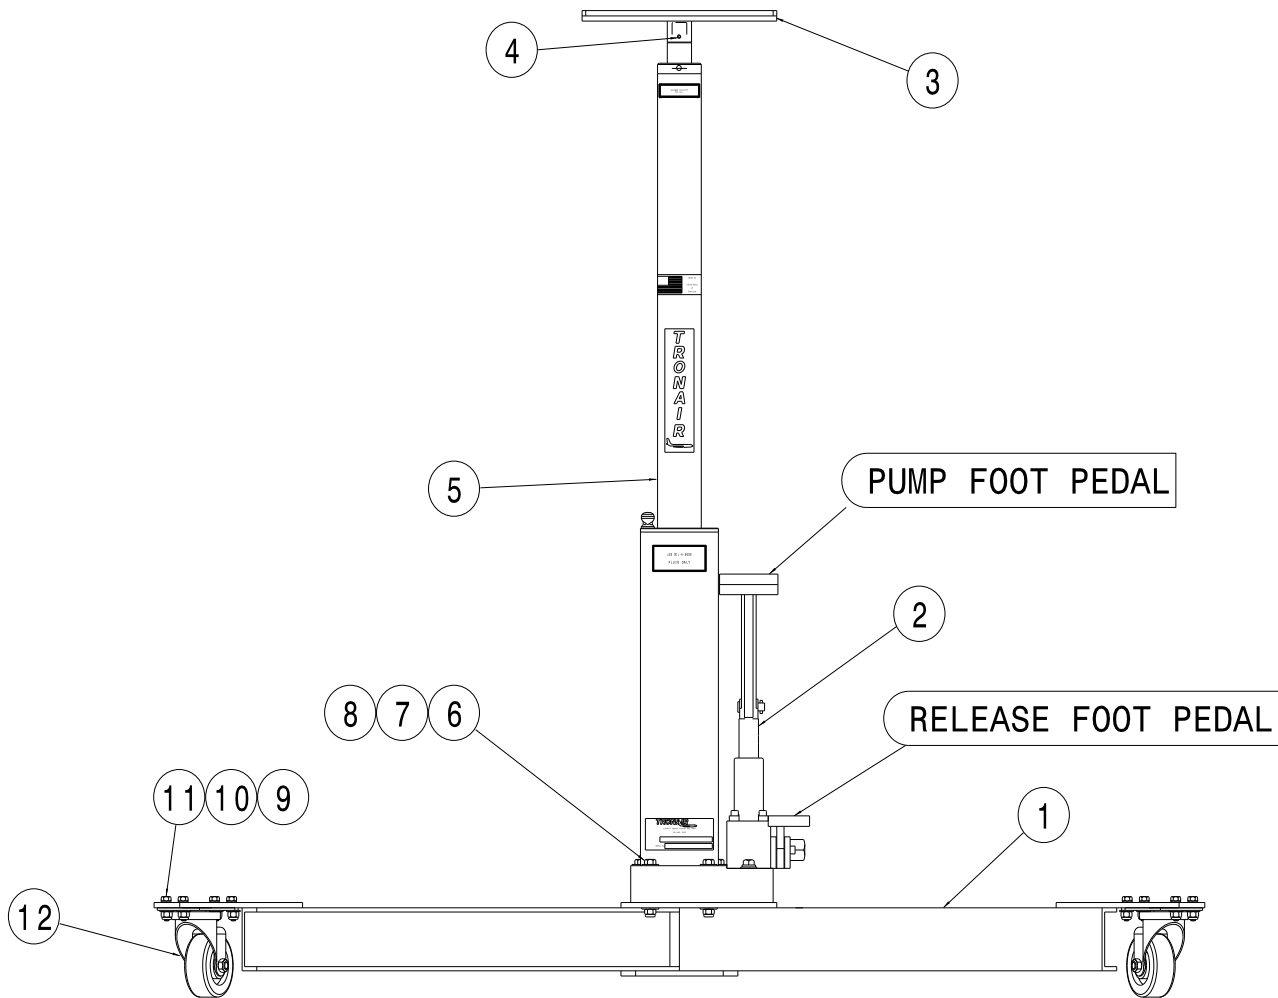

Item	Part Number	Description	Qty
1	Z-4690-01	Weldment, Base	1
2	HC-2753	Pump, Foot	1
3	Z-4967	Assembly, Top Plate	1
4	G-1163-01	Screw, 1/4-28, Hex Socket Cup Point Set	Ref.
5	Z-9340	Assembly, Hydraulic Jack	1
6	G-1100-106024	Bolt, Hex Head, Grade 5, 5/16-18 x 2 " long	4
7	G-1250-1060N	Flatwasher, 5/16 Narrow	8
8	G-1202-1060	Stopnut, 5/16-18 Elastic	4
9	G-1100-105510	Bolt, Hex Head, Grade 5, 1/4-28 x 1" long	12
10	G-1255-05	Flatwasher, 1/4 AN	12
11	G-1202-1055	Stopnut, 1/4-28 Elastic	12
12	U-1115	Caster, Swivel w/Wheel Lock	3
	K-3030	Kit, Caster Replacement; consists of:	
11	G-1100-105510	Bolt, Hex Head, Grade 5, 1/4-28 x 1" long	4
12	G-1255-05	Washer, 1/4 AN	4
13	G-1202-1055	Stopnut, 1/4-28 Elastic	4
15	U-1000	Caster, Swivel w/Wheel Lock	1



APPENDIX I

Declaration of Conformity



Declaration of Conformity

The design, development and manufacture is in accordance with European Community guidelines

Battery Lift
04-6031C0100

Relevant draft complied with by the machinery:
2006/42/EC

Relevant standards complied with by the machinery:
EN ISO-12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

A handwritten signature in cursive script that reads "Patrick Finch". The signature is written in black ink and is positioned above a horizontal line.

Quality Assurance Representative